



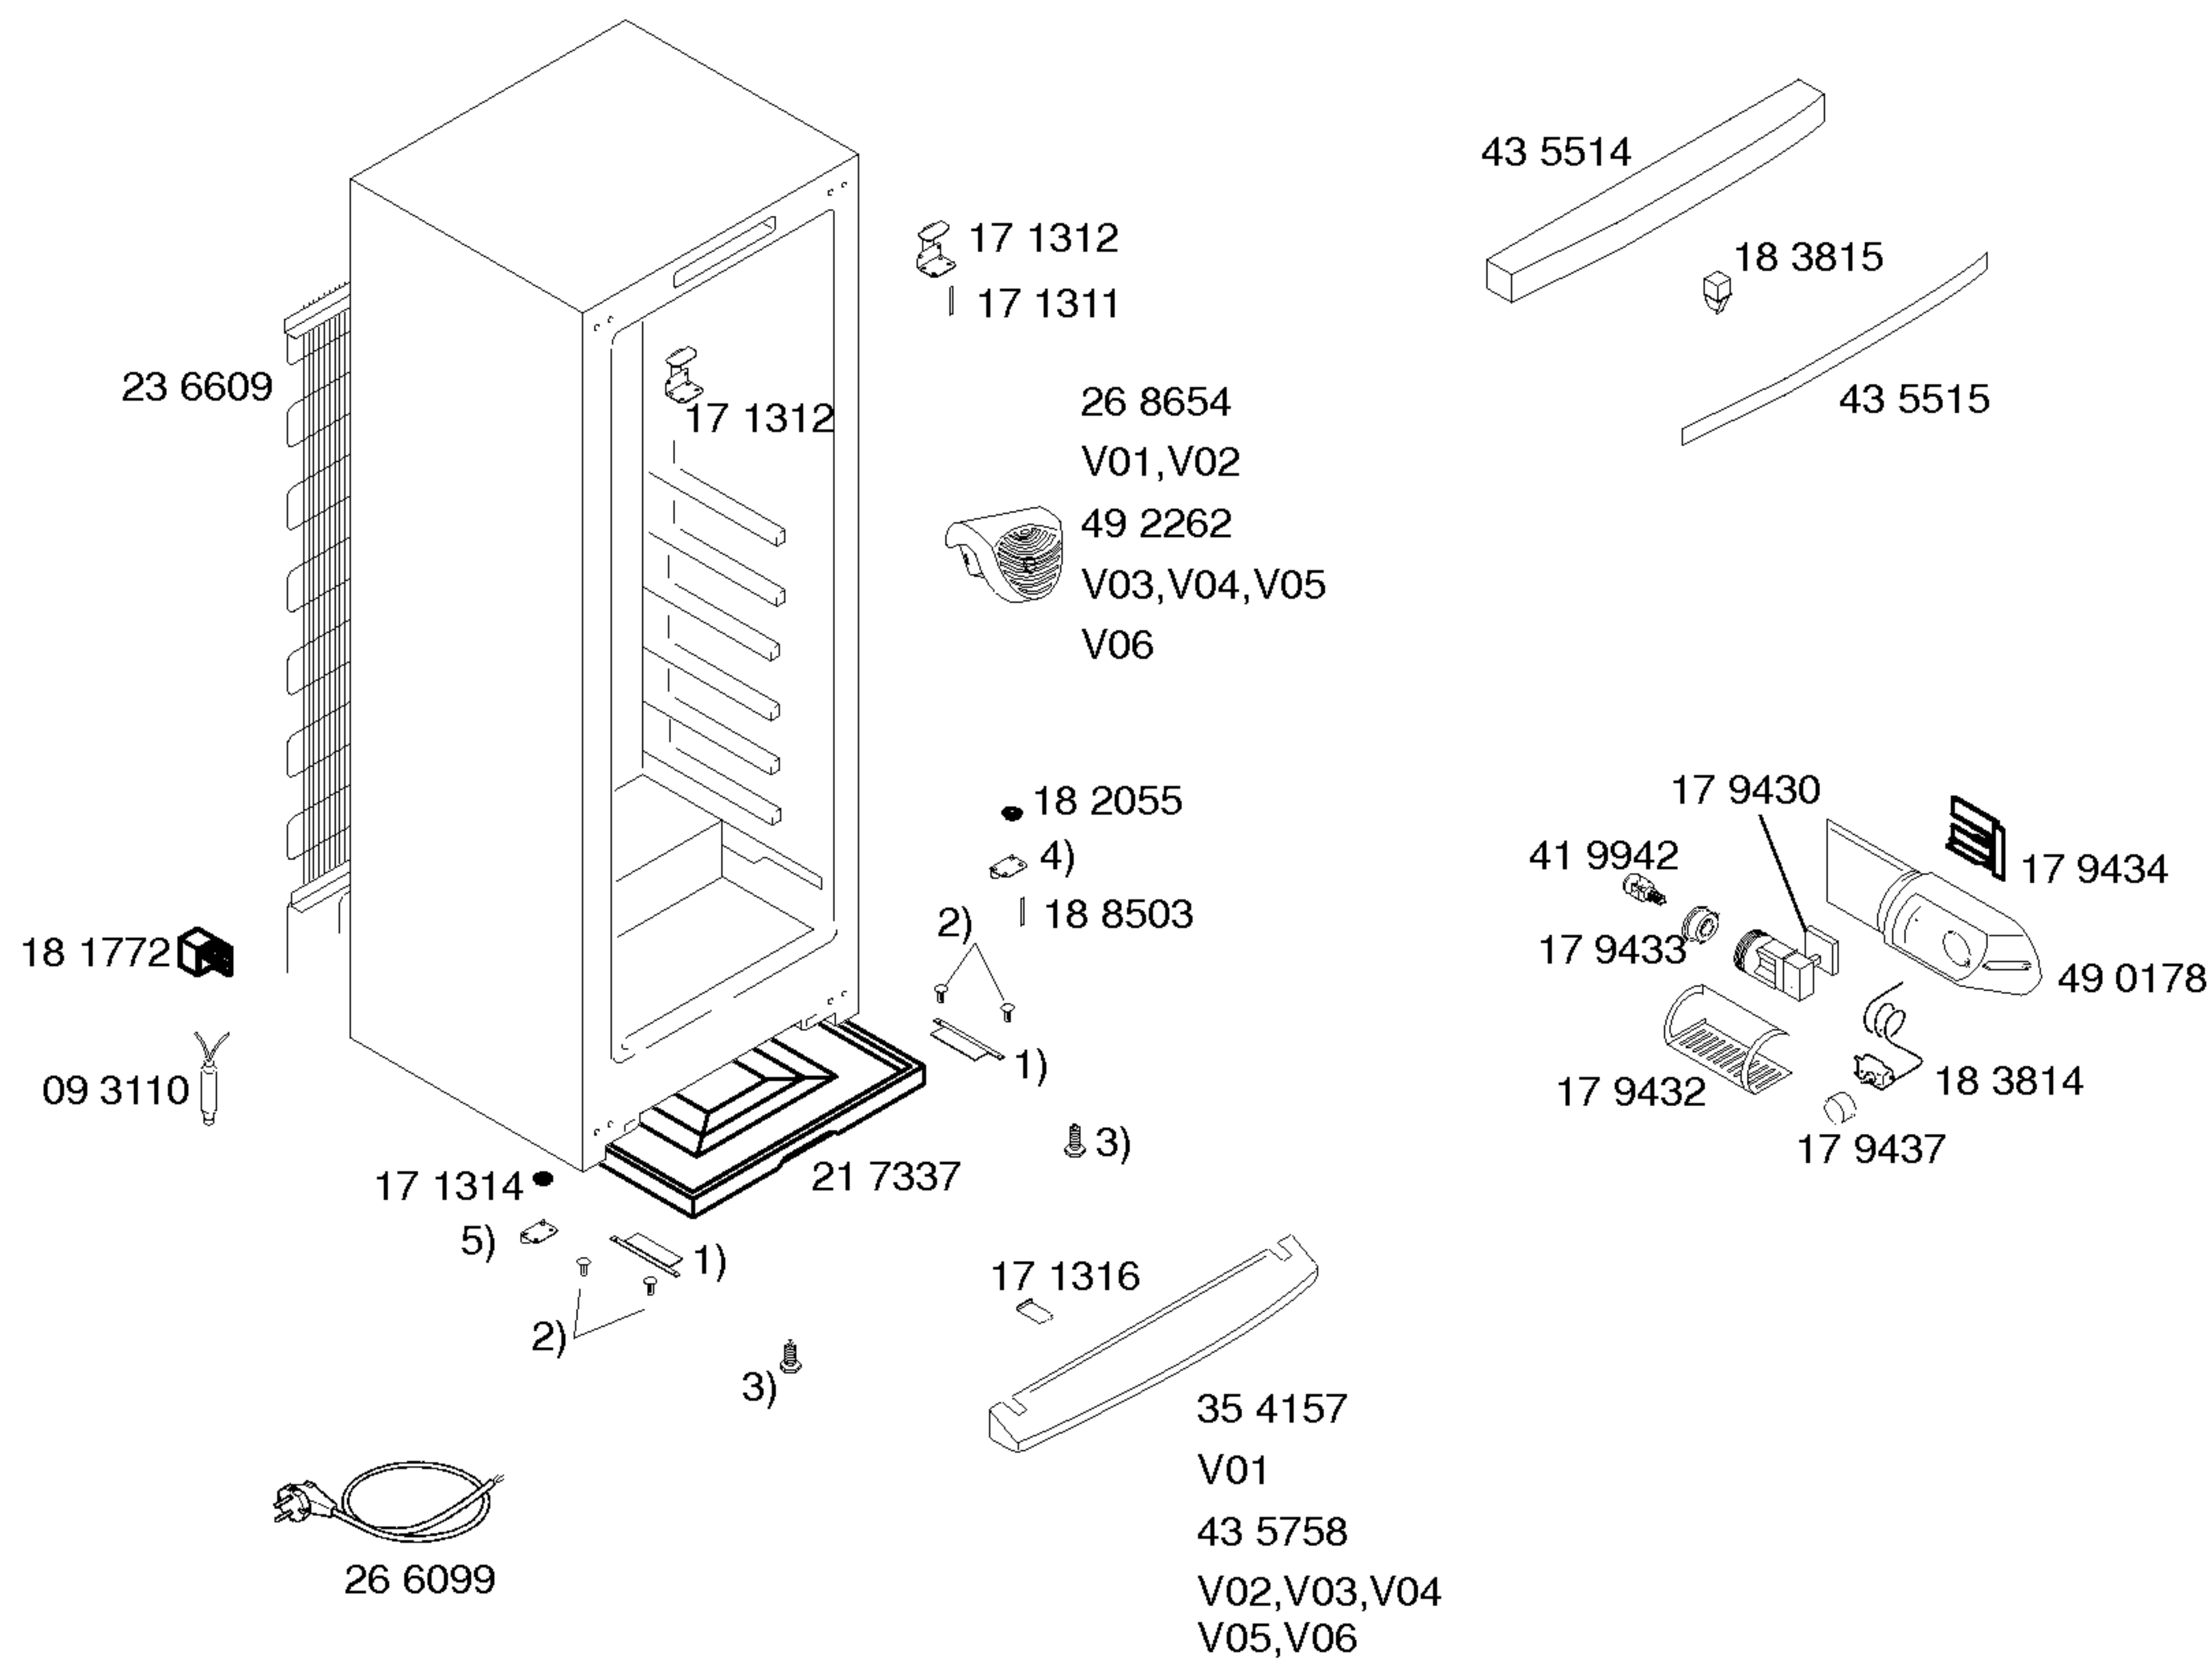


Gebrauchsanweisung
58 7190
(ES,EN,FR,PT,DE)

- 1) 48 1783
- 2) 16 3505
- 3) 18 9089
V01
42 1516
V02,V03,V04,V05
V06
- 4) 17 1303
V01
42 1601
V02,V03,V04,V05
V06
- 5) 17 1303
V01
42 1602
V02,V03,V04,V05
V06

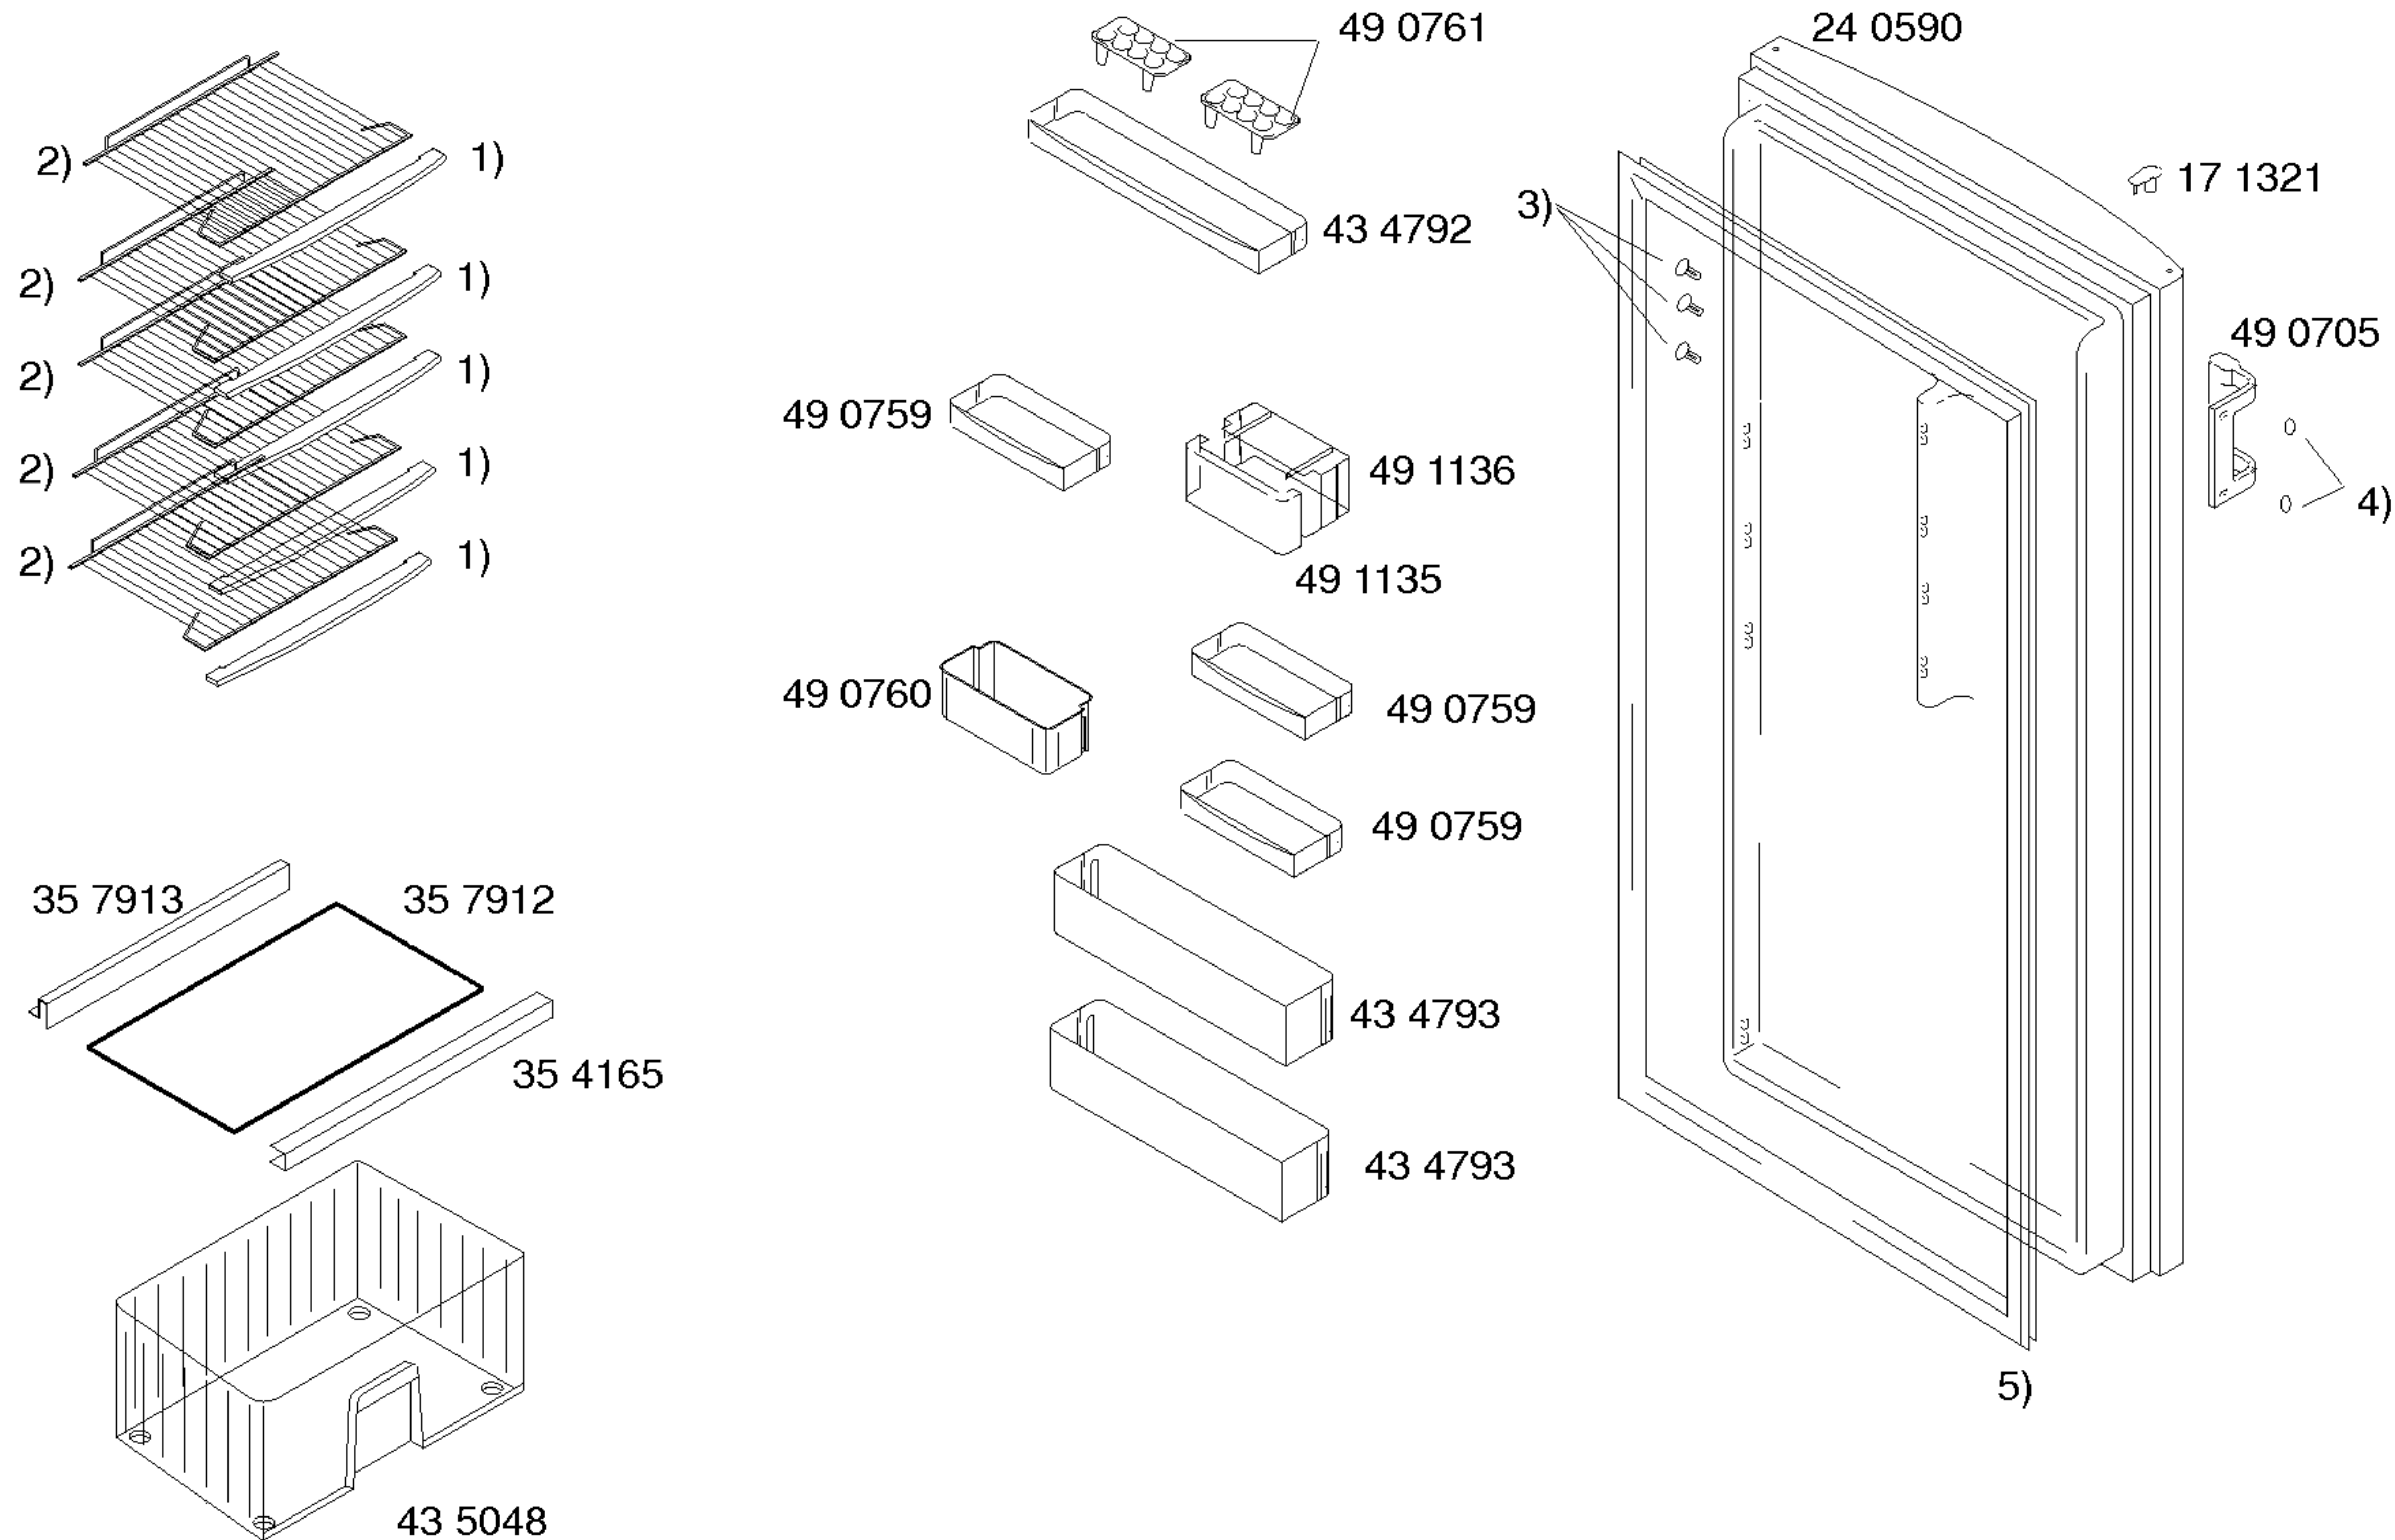

- 1) 35 4164
- 2) 35 4166
- 3) 16 6484
- 4) 16 5557
- 5) 23 8414
- V01
- 24 1323
- V02,V03,V04,V05
- V06

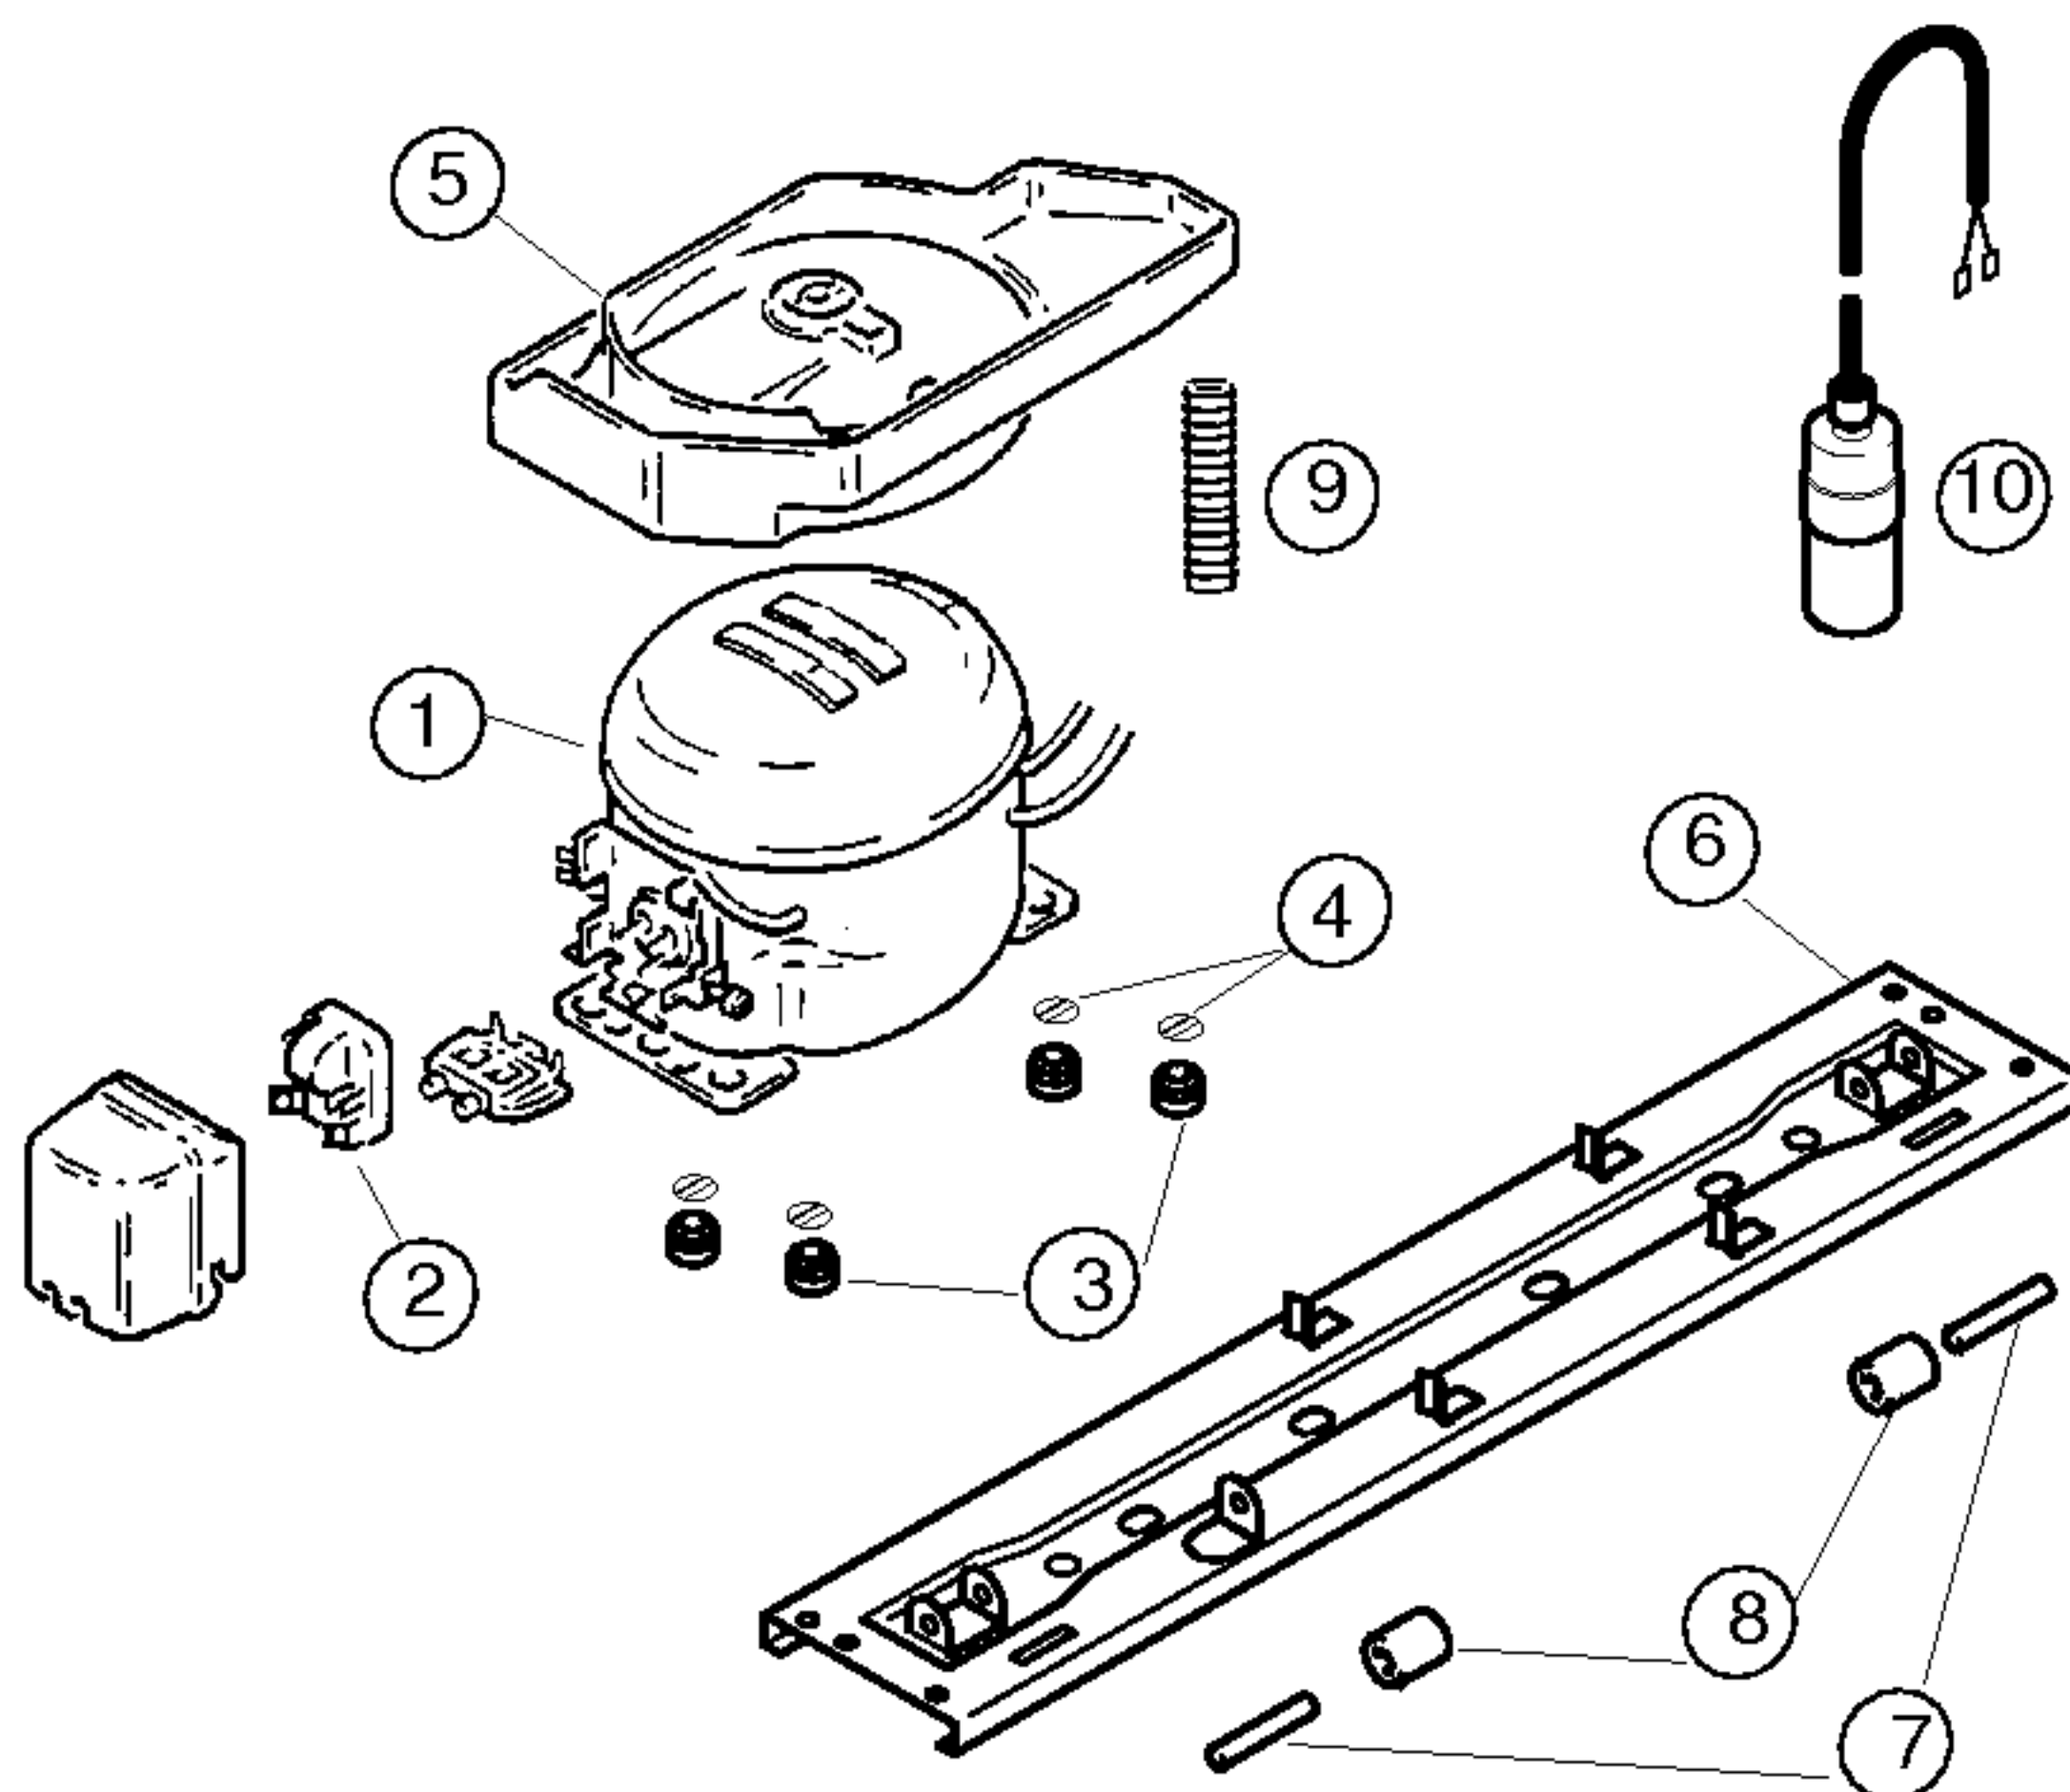

Pos.	Danfoss		
	TLY7KK2		
1	14 3519		
2	16 5570		
3	16 3427		
4	17 1519		
5	48 9208		
6	35 4158		
7	18 1014		
8	17 1318		
9	48 1782		
10	17 4093		
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss TLEY7KK2 A Ohm		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	Danfoss 077B52 +4 +10.5 -21 -10.7 ..ein/acma °C ..aus"/kapama ..alarm'		
Füllmenge/Fill. quantily/ Dolum miktari	R600a	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Ohm W		
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	Ohm V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız