




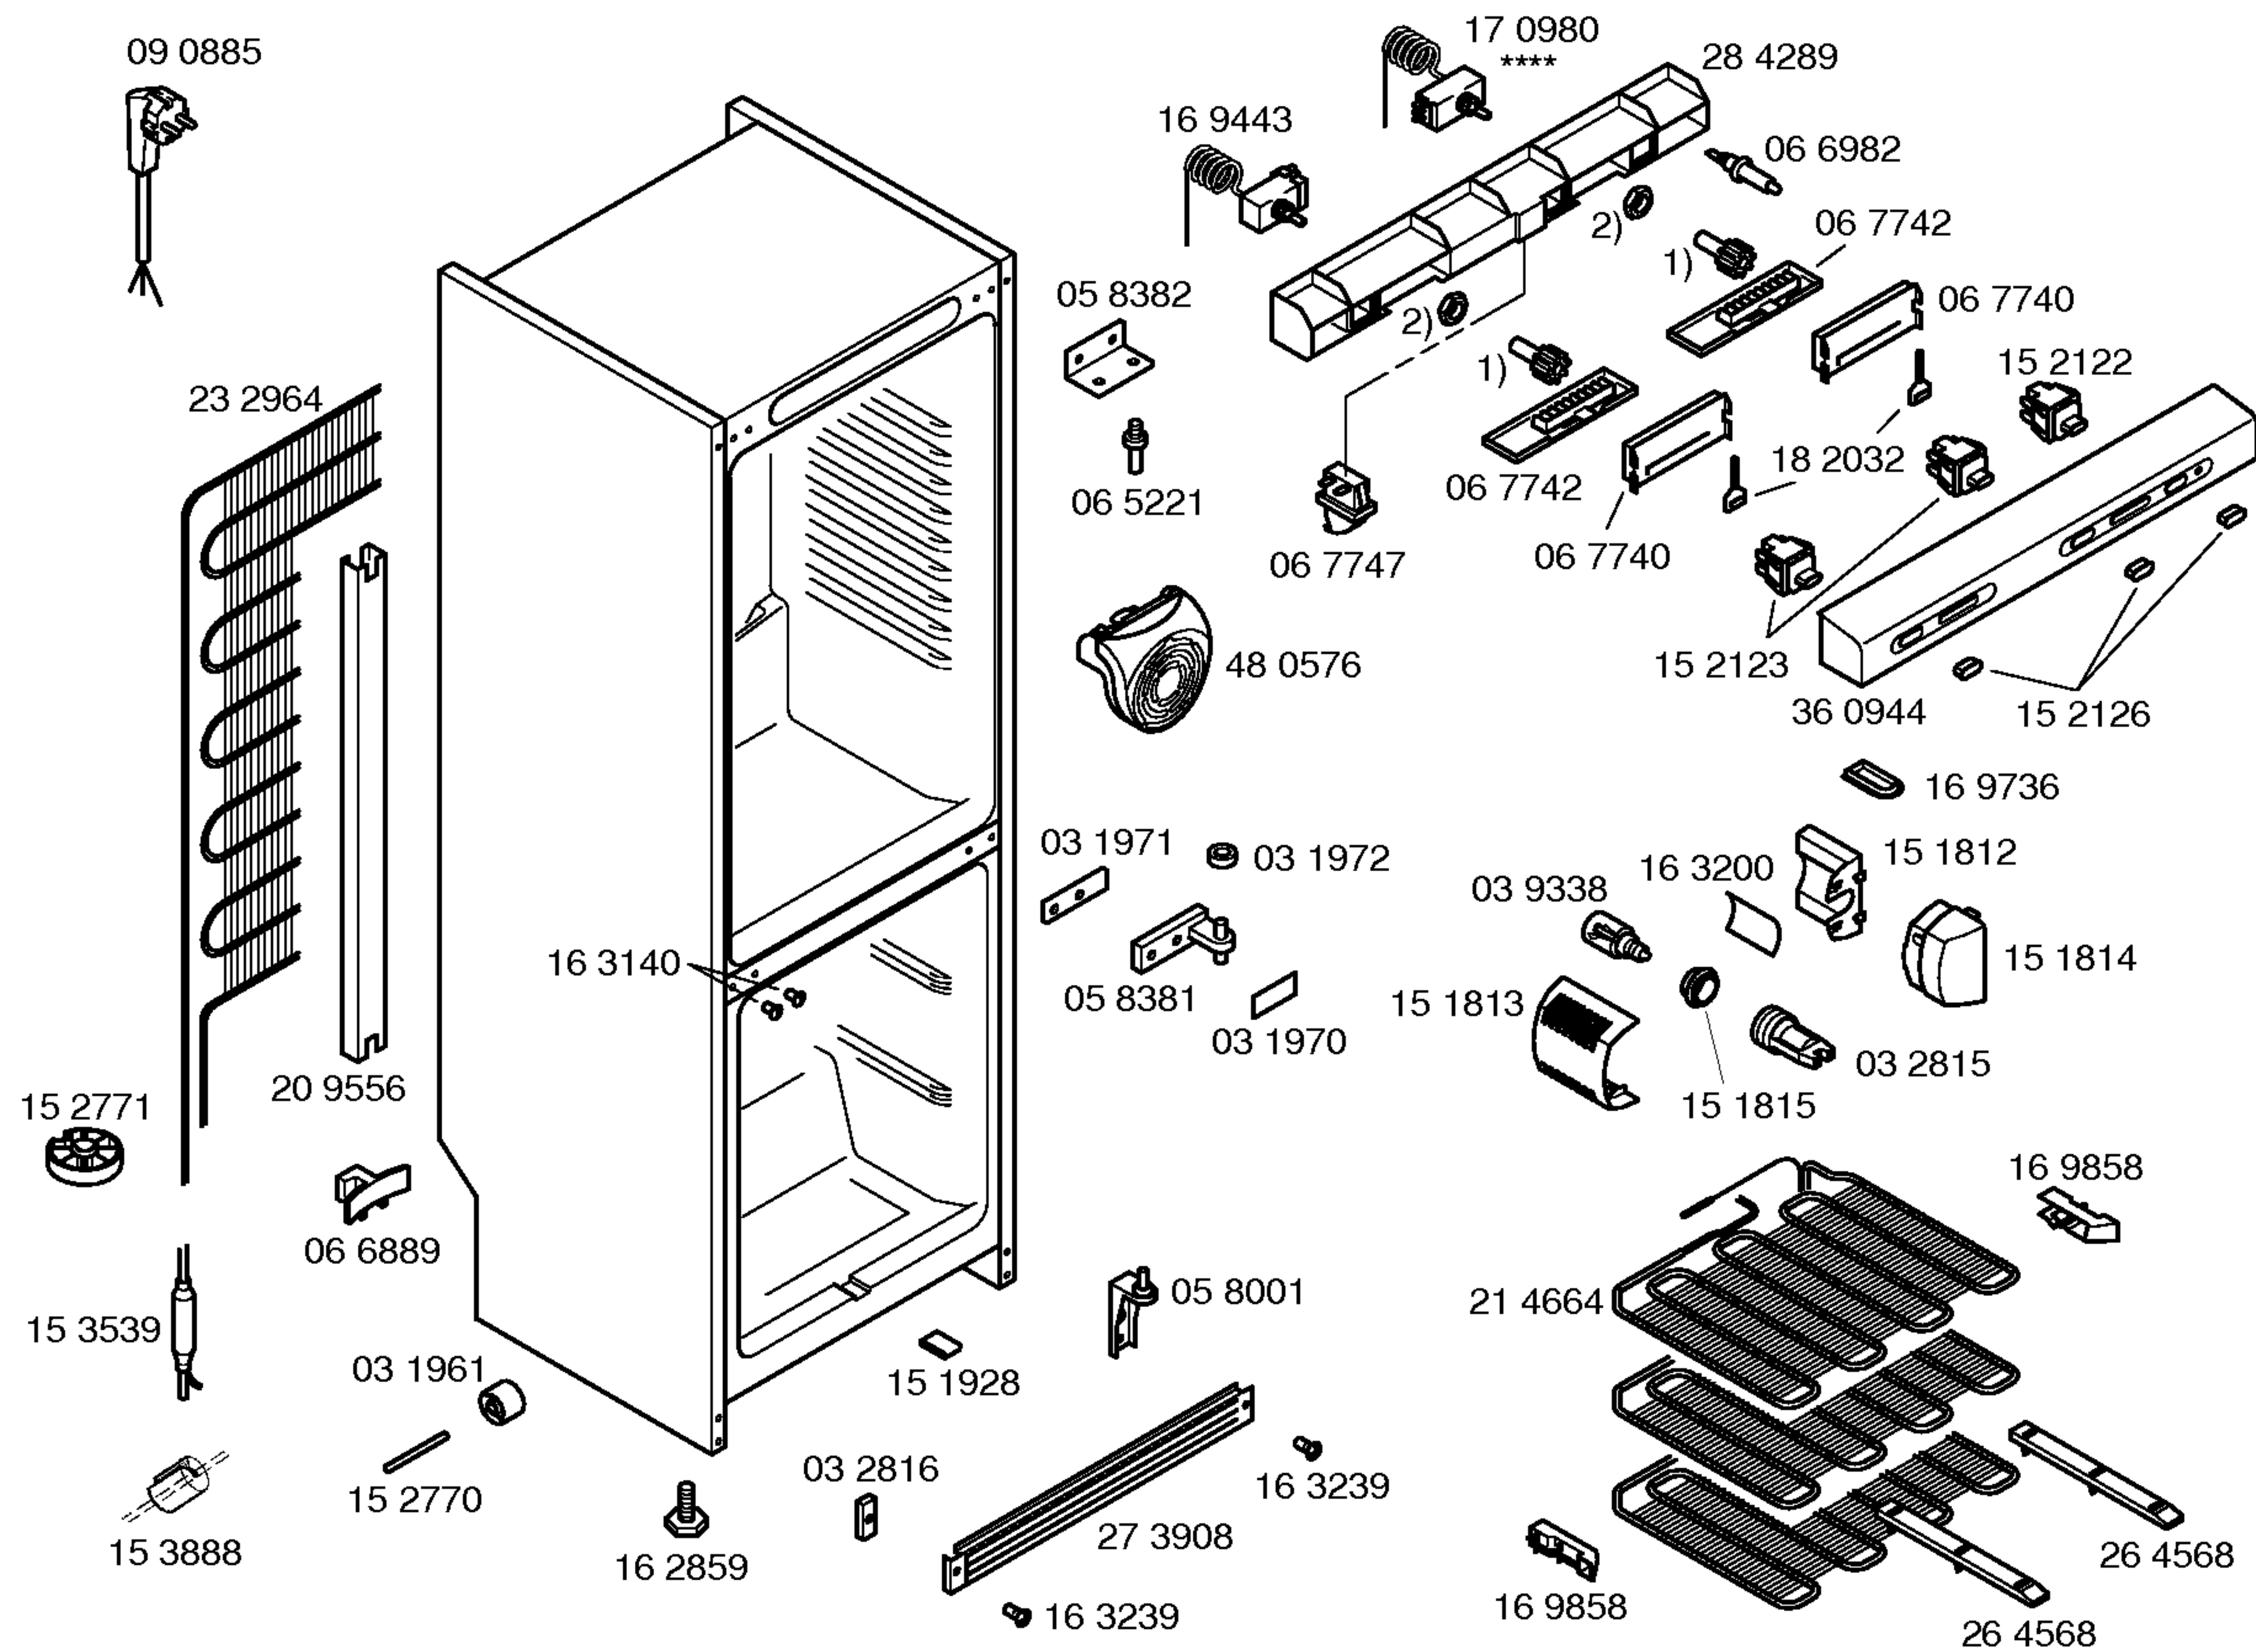

Libro de instrucciones  
52 7873  
(E,GB,F,D,P)

- 1) 06 7746
- 2) 03 3058

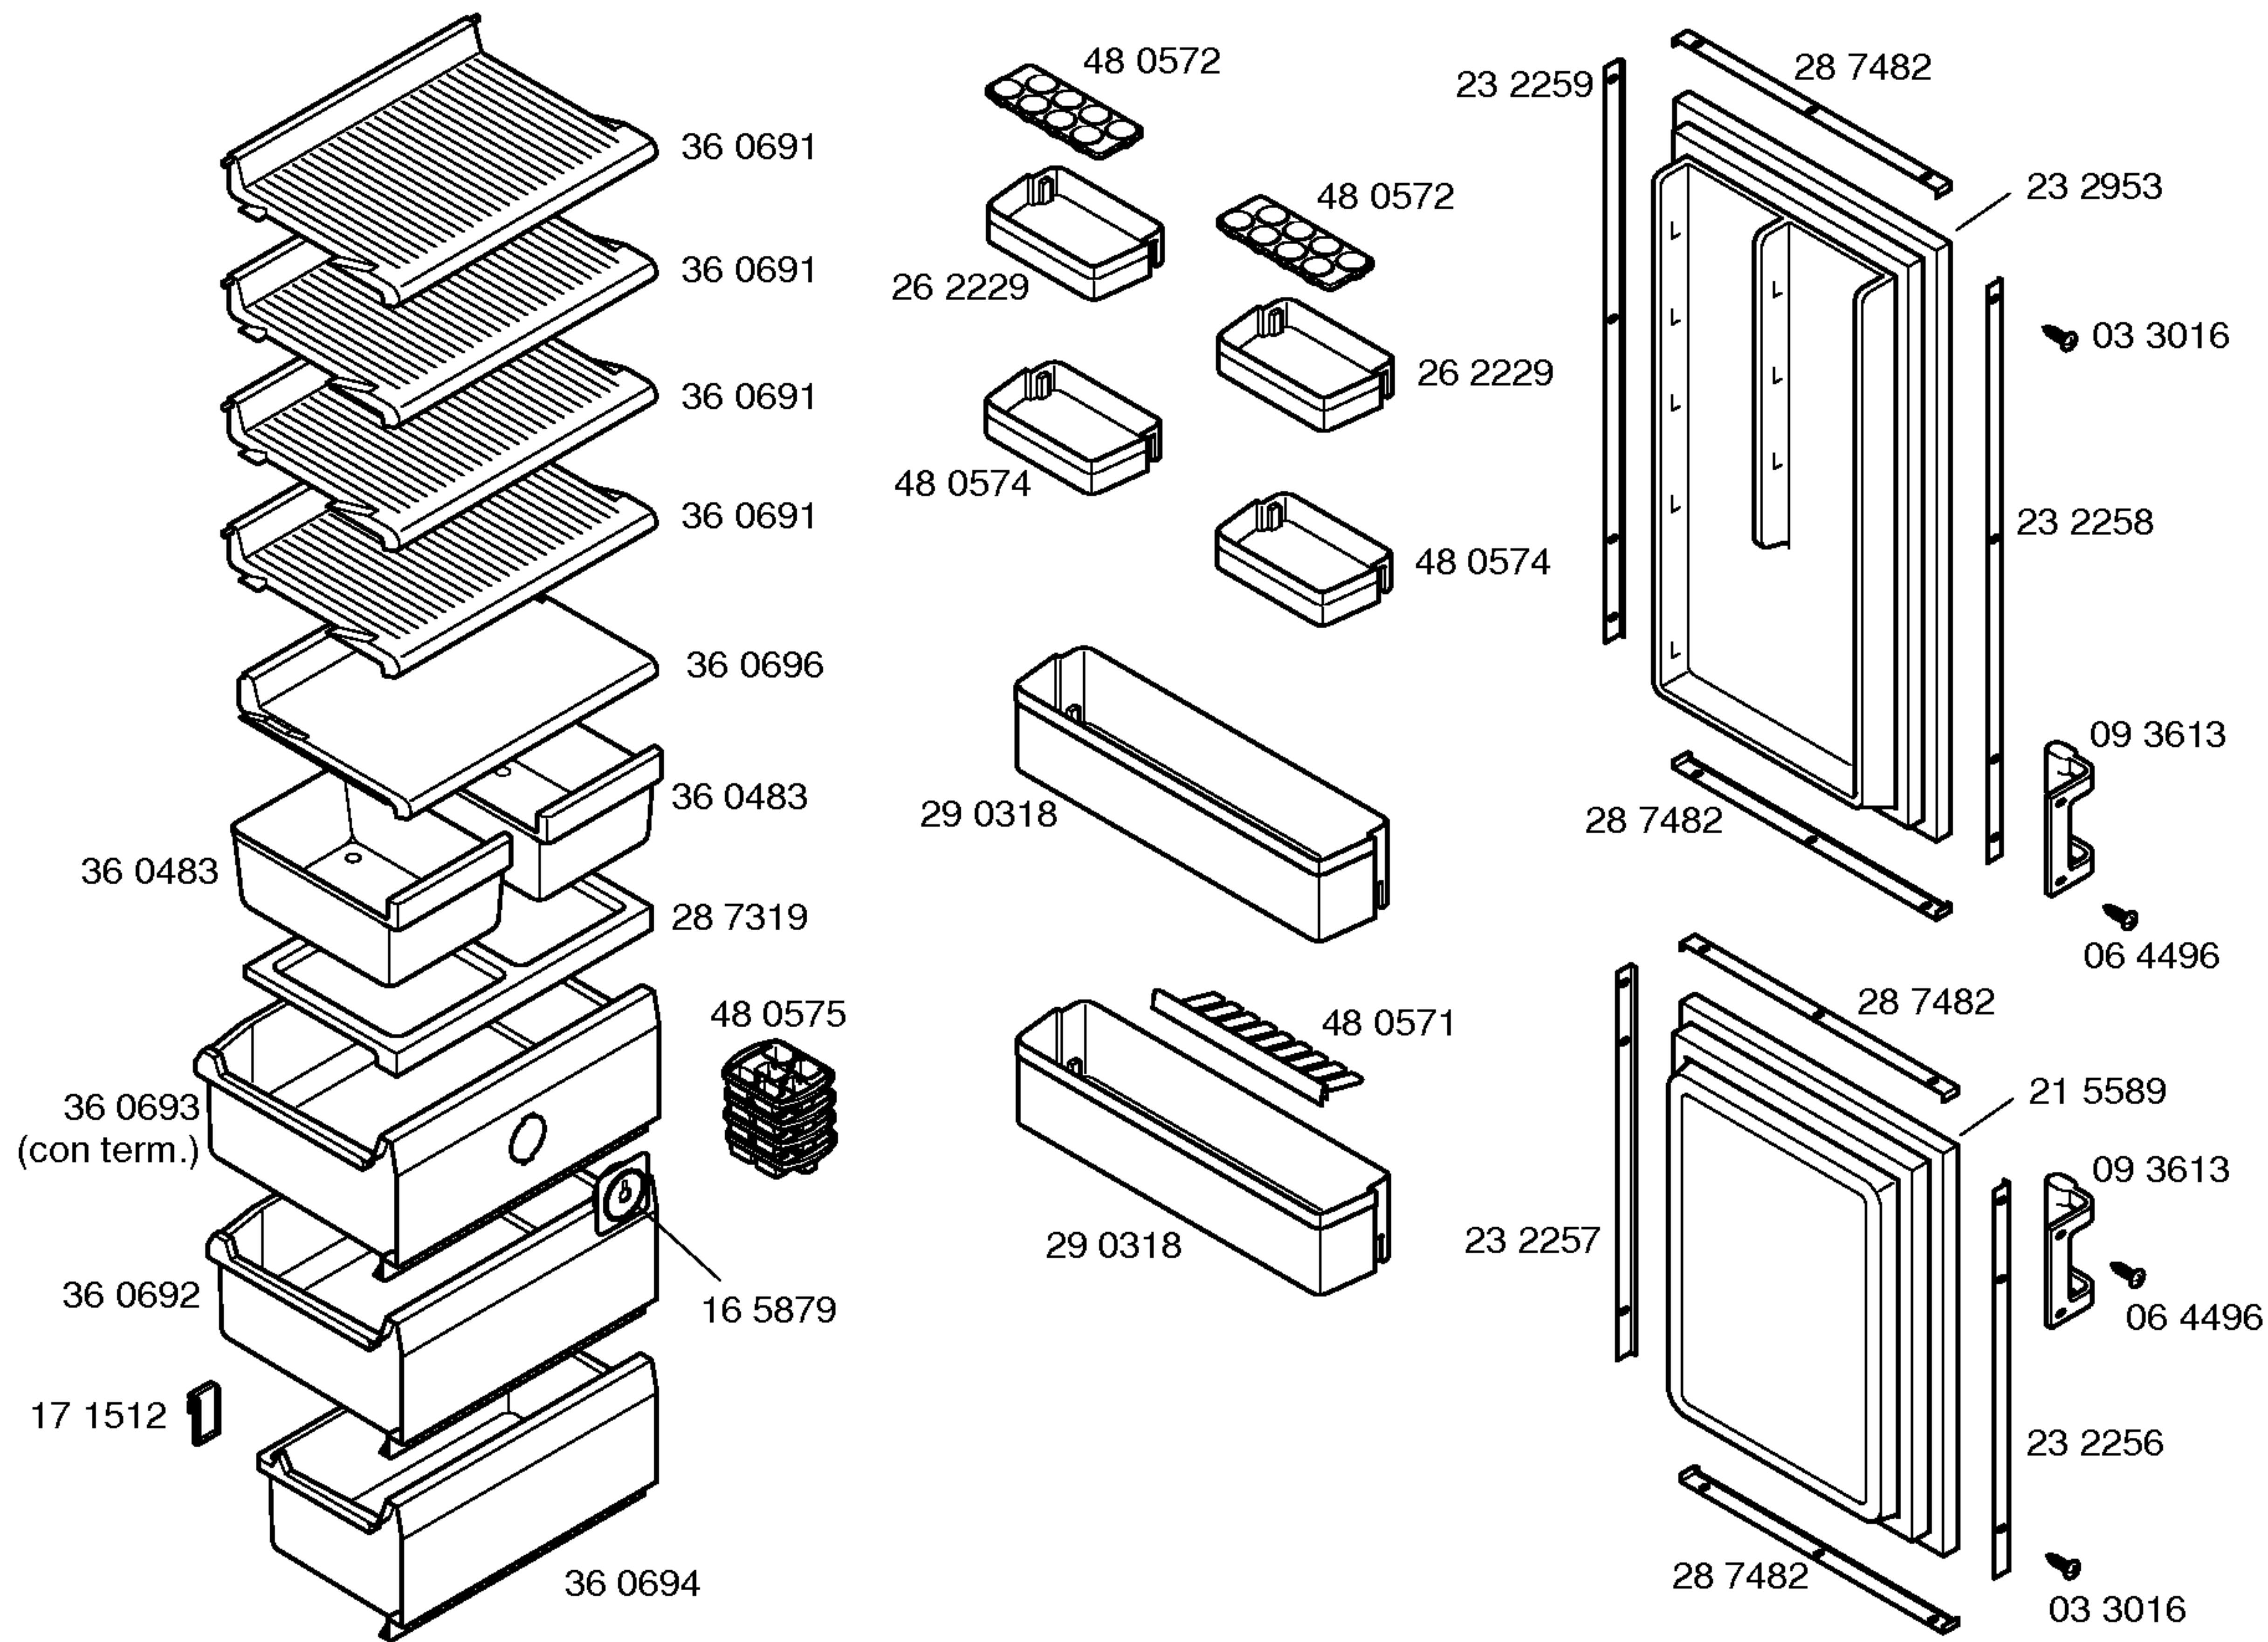

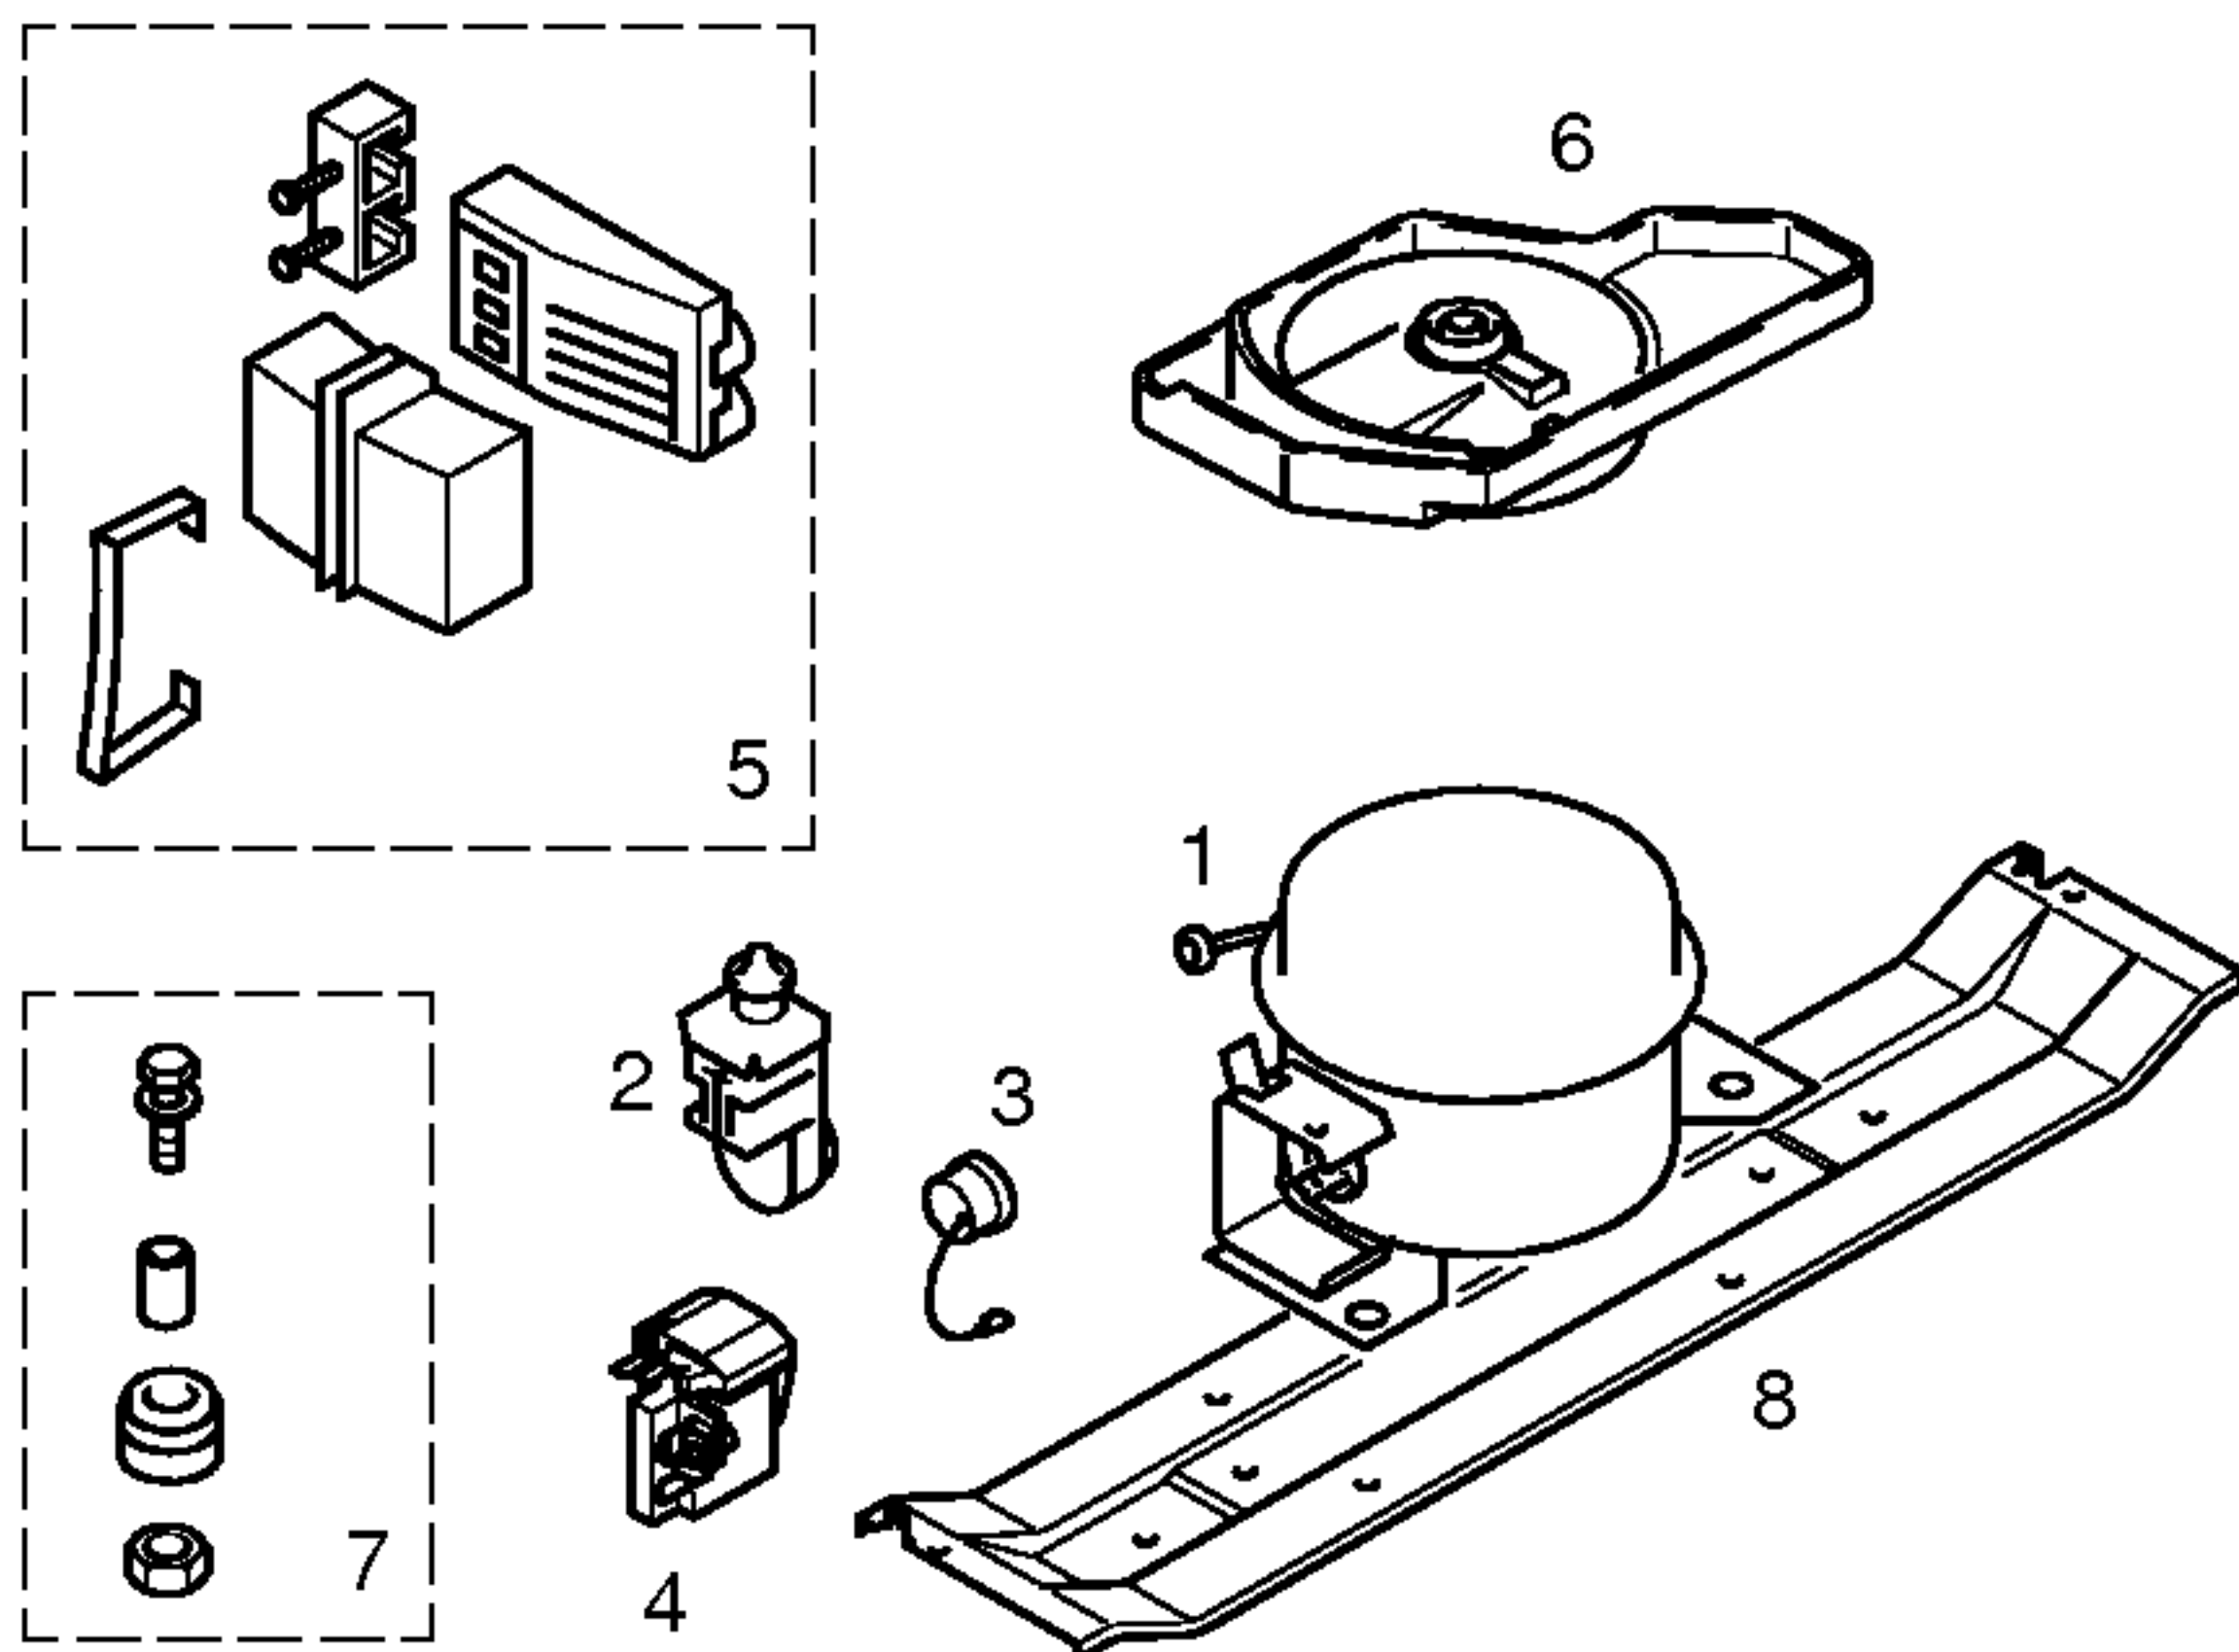

| Pos. | ****     |           |  |  |
|------|----------|-----------|--|--|
|      | Aspera   | Gold Star |  |  |
|      | BPK1072Y | ND69NAEG  |  |  |
| 1    | 14 2000  | 14 2001   |  |  |
| 2    | 15 4315  |           |  |  |
| 3    | 17 3748  |           |  |  |
| 4    |          | 17 1011   |  |  |
| 5    |          |           |  |  |
| 6    | 26 4123  |           |  |  |
| 7    | 05 0166  | 05 0166   |  |  |
| 8    | 28 8253  | 28 8253   |  |  |
| 9    |          |           |  |  |
| 10   |          |           |  |  |
| 11   |          |           |  |  |
| 12   |          |           |  |  |
| 13   |          |           |  |  |

| TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS                                                                                                                                                                            |                                                     |                                                                        |  |  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|------------------------------------------------------------------------|--|--|
|                                                                                                                                                                                                                                              |                                                     | ****                                                                   |  |  |
| Verdichter/Compressor/Compresseur/Compresor<br>Typ/Type/Tipo<br>Förderleistung/Delivery/Debit/Aspiración l/h<br>Anlaufstrom/Starting current/Cour.démarrage/Int.arranq. A<br>Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm<br>Hi/aux. | Aspera<br>BPK1072Y<br><br>0,47<br>33,10<br>38,20    | Gold Star<br>ND69NAEG                                                  |  |  |
| Temp.Reyler/Thermostat/Termostato<br>Typ/Type/Tipo<br>Reglerstellung/Position/Conexión<br>Schaltwerte/Switching values/ ..ein/conex. °C<br>Valeurs de commutation/Desconex. ..aus"/descon.<br>(..abtaven' od) ..alarm'                       | Ranco<br>K59-L6050<br>MIN. MAX.<br>+6°<br>-11° -28° | Ranco<br>K54-L2006<br>MIN. MAX.<br>-14° -22°<br>-20° -28°<br>-10° -18° |  |  |
| Füllmenge/Fill. quantity/Charge/Carga R600a g                                                                                                                                                                                                | *                                                   | *                                                                      |  |  |
| Anschlusswert/Comm. load/Puiss. Connect./Potenc. W                                                                                                                                                                                           | 79                                                  | 83                                                                     |  |  |
| Heizung/Heater/Chauflage/Resistenc.descong.<br>Widerstand/Resistance/Resistencia Ohm<br>Leistung/Power/Puissance/Potencia W                                                                                                                  |                                                     |                                                                        |  |  |
| Ventilador/Blower/Ventilateur/Ventilador<br>Widerstand/Resistance/Resistencia Ohm                                                                                                                                                            |                                                     |                                                                        |  |  |
| Magnetventil/Magnetic valve/Electrovanne/Electrovalvula<br>Widerstand/Resistance/Resistencia Ohm<br>Spannung/Voltage/Tension/Tensión V                                                                                                       |                                                     |                                                                        |  |  |
| Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador                                                                                                                                                                      |                                                     |                                                                        |  |  |

\* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características