


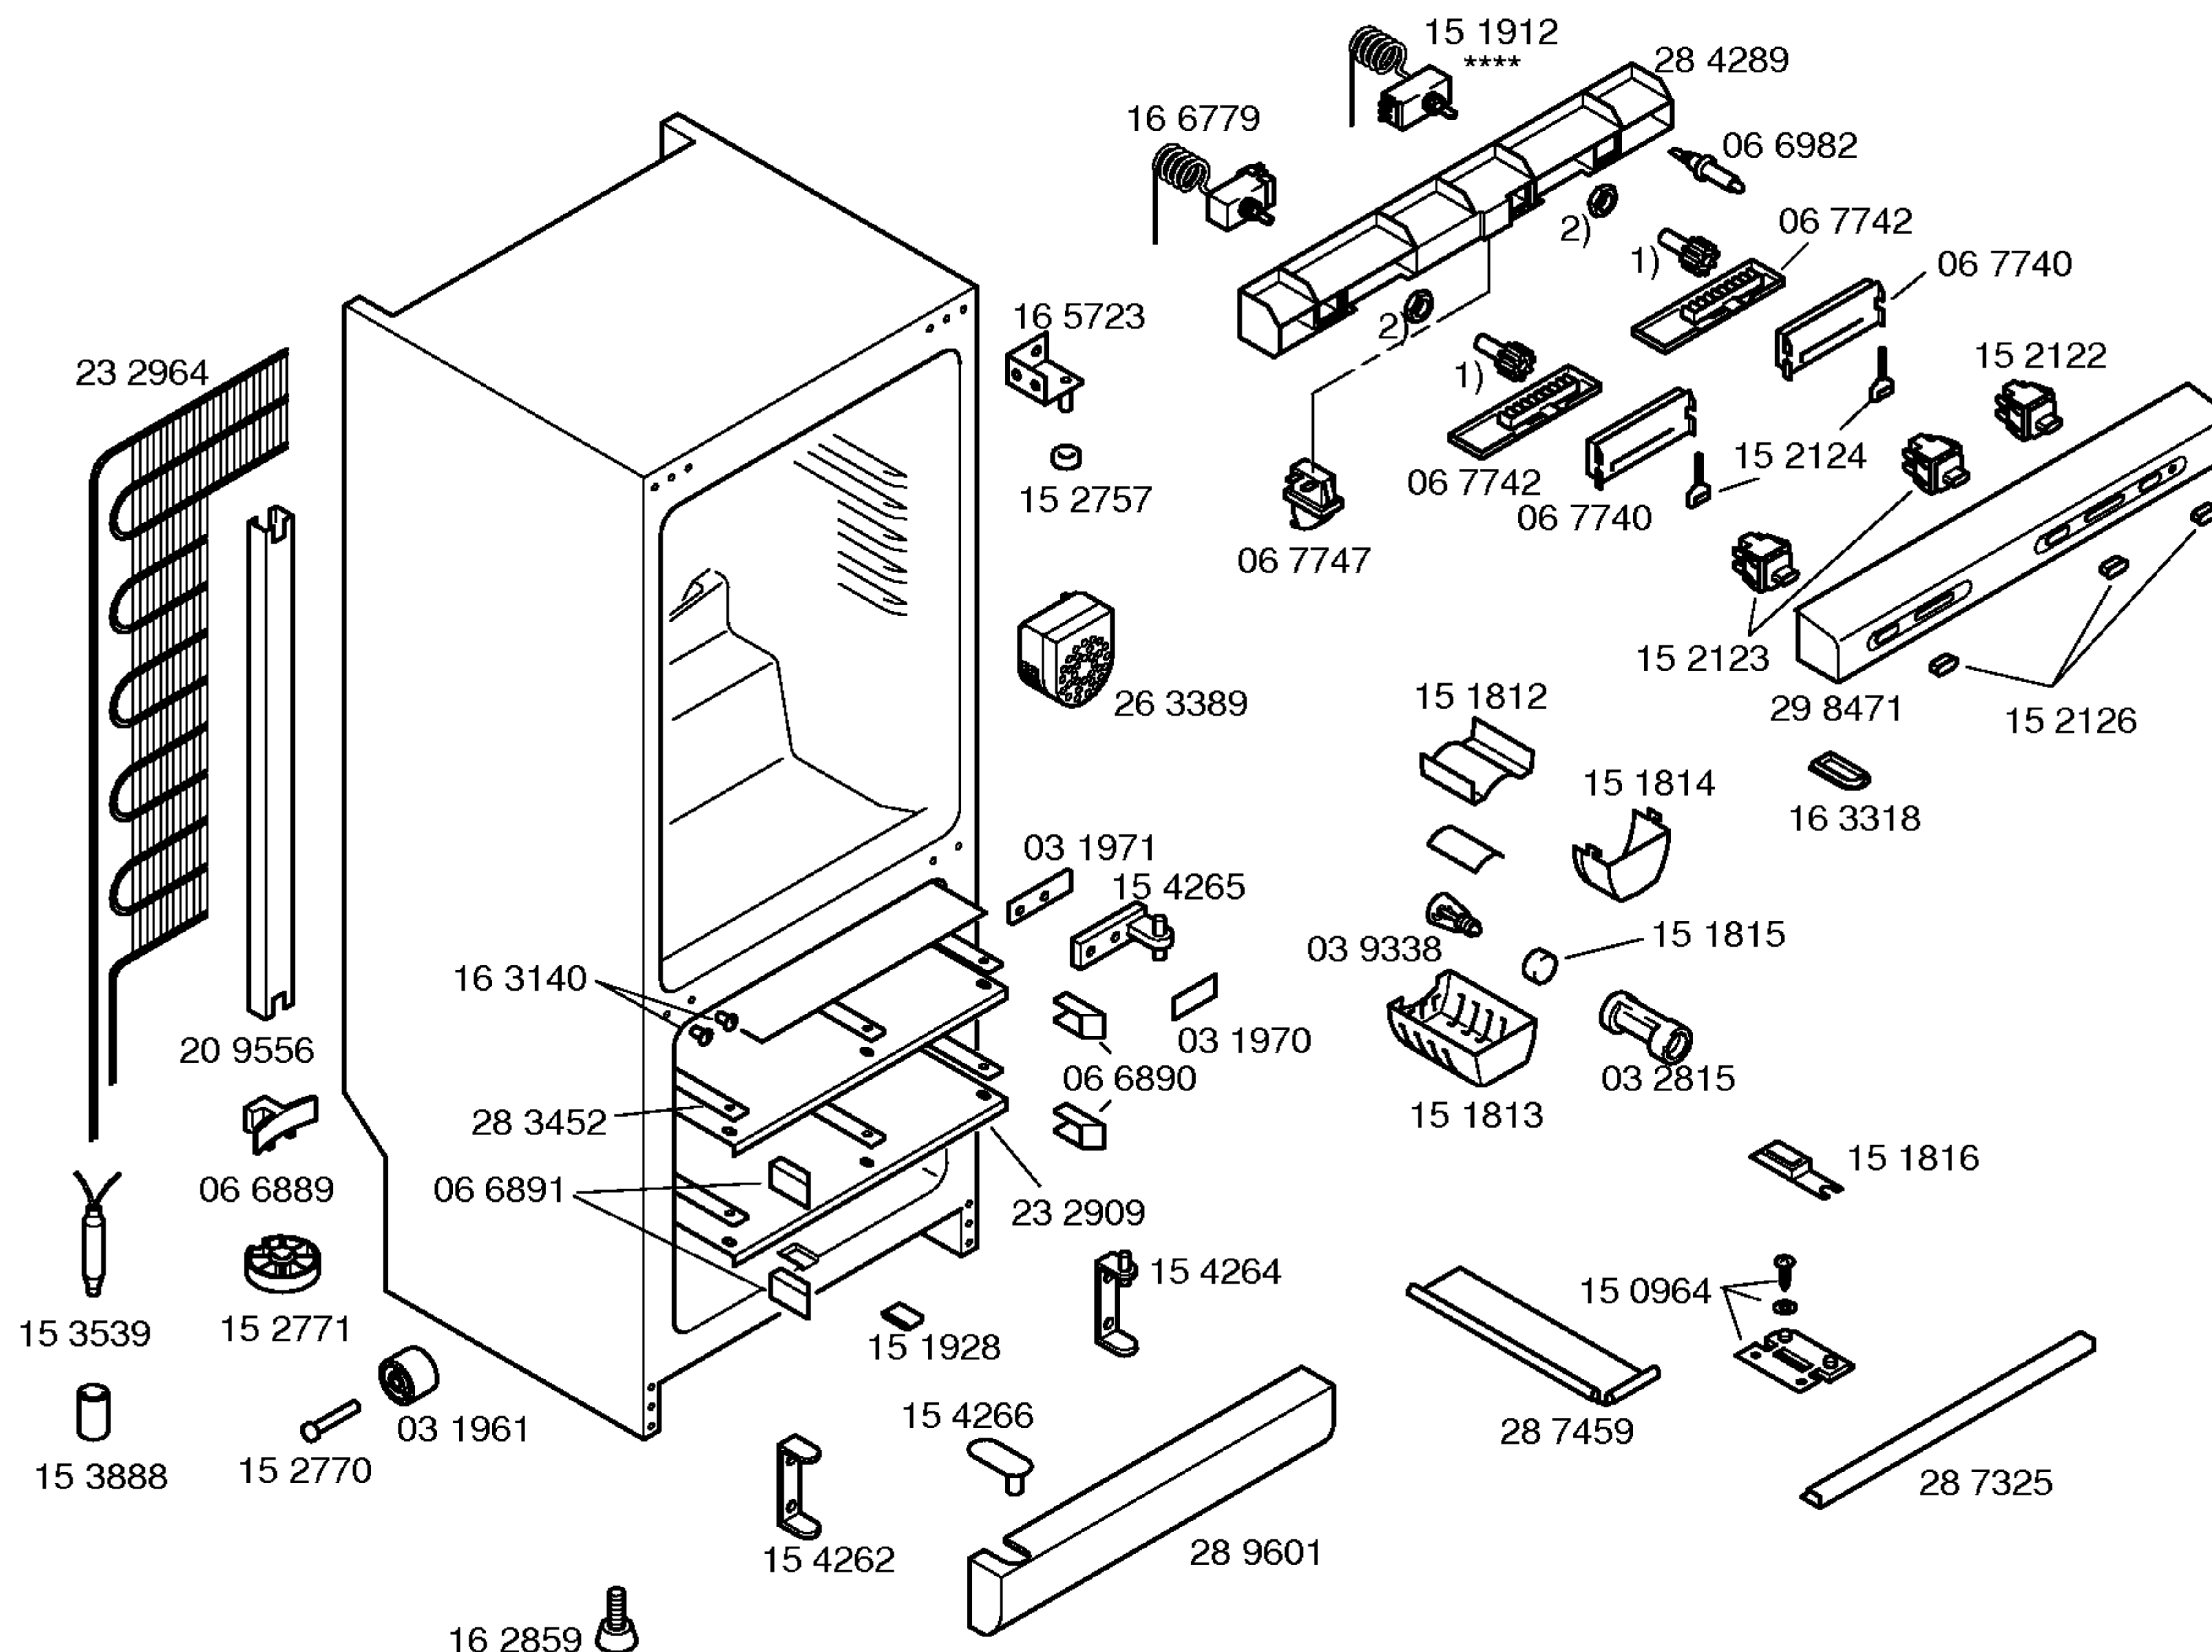


Libro de instrucciones
51 7464
(E,P,GB,,F,NL,GR)


Instrucciones R600a
51 9240
(D,GB,F,I,NL,DK,N,
S,SF,P,GR,E,TR)

Instrucciones de montaje
51 9729
(E,GB,F,P,D,I,NL,N,GR)

Anexo ind. temperatura
52 0758
(D,GB,F,I,NL,E,SF,S,
N,DK,P,GR)

- 1) 06 7746
- 2) 03 3055

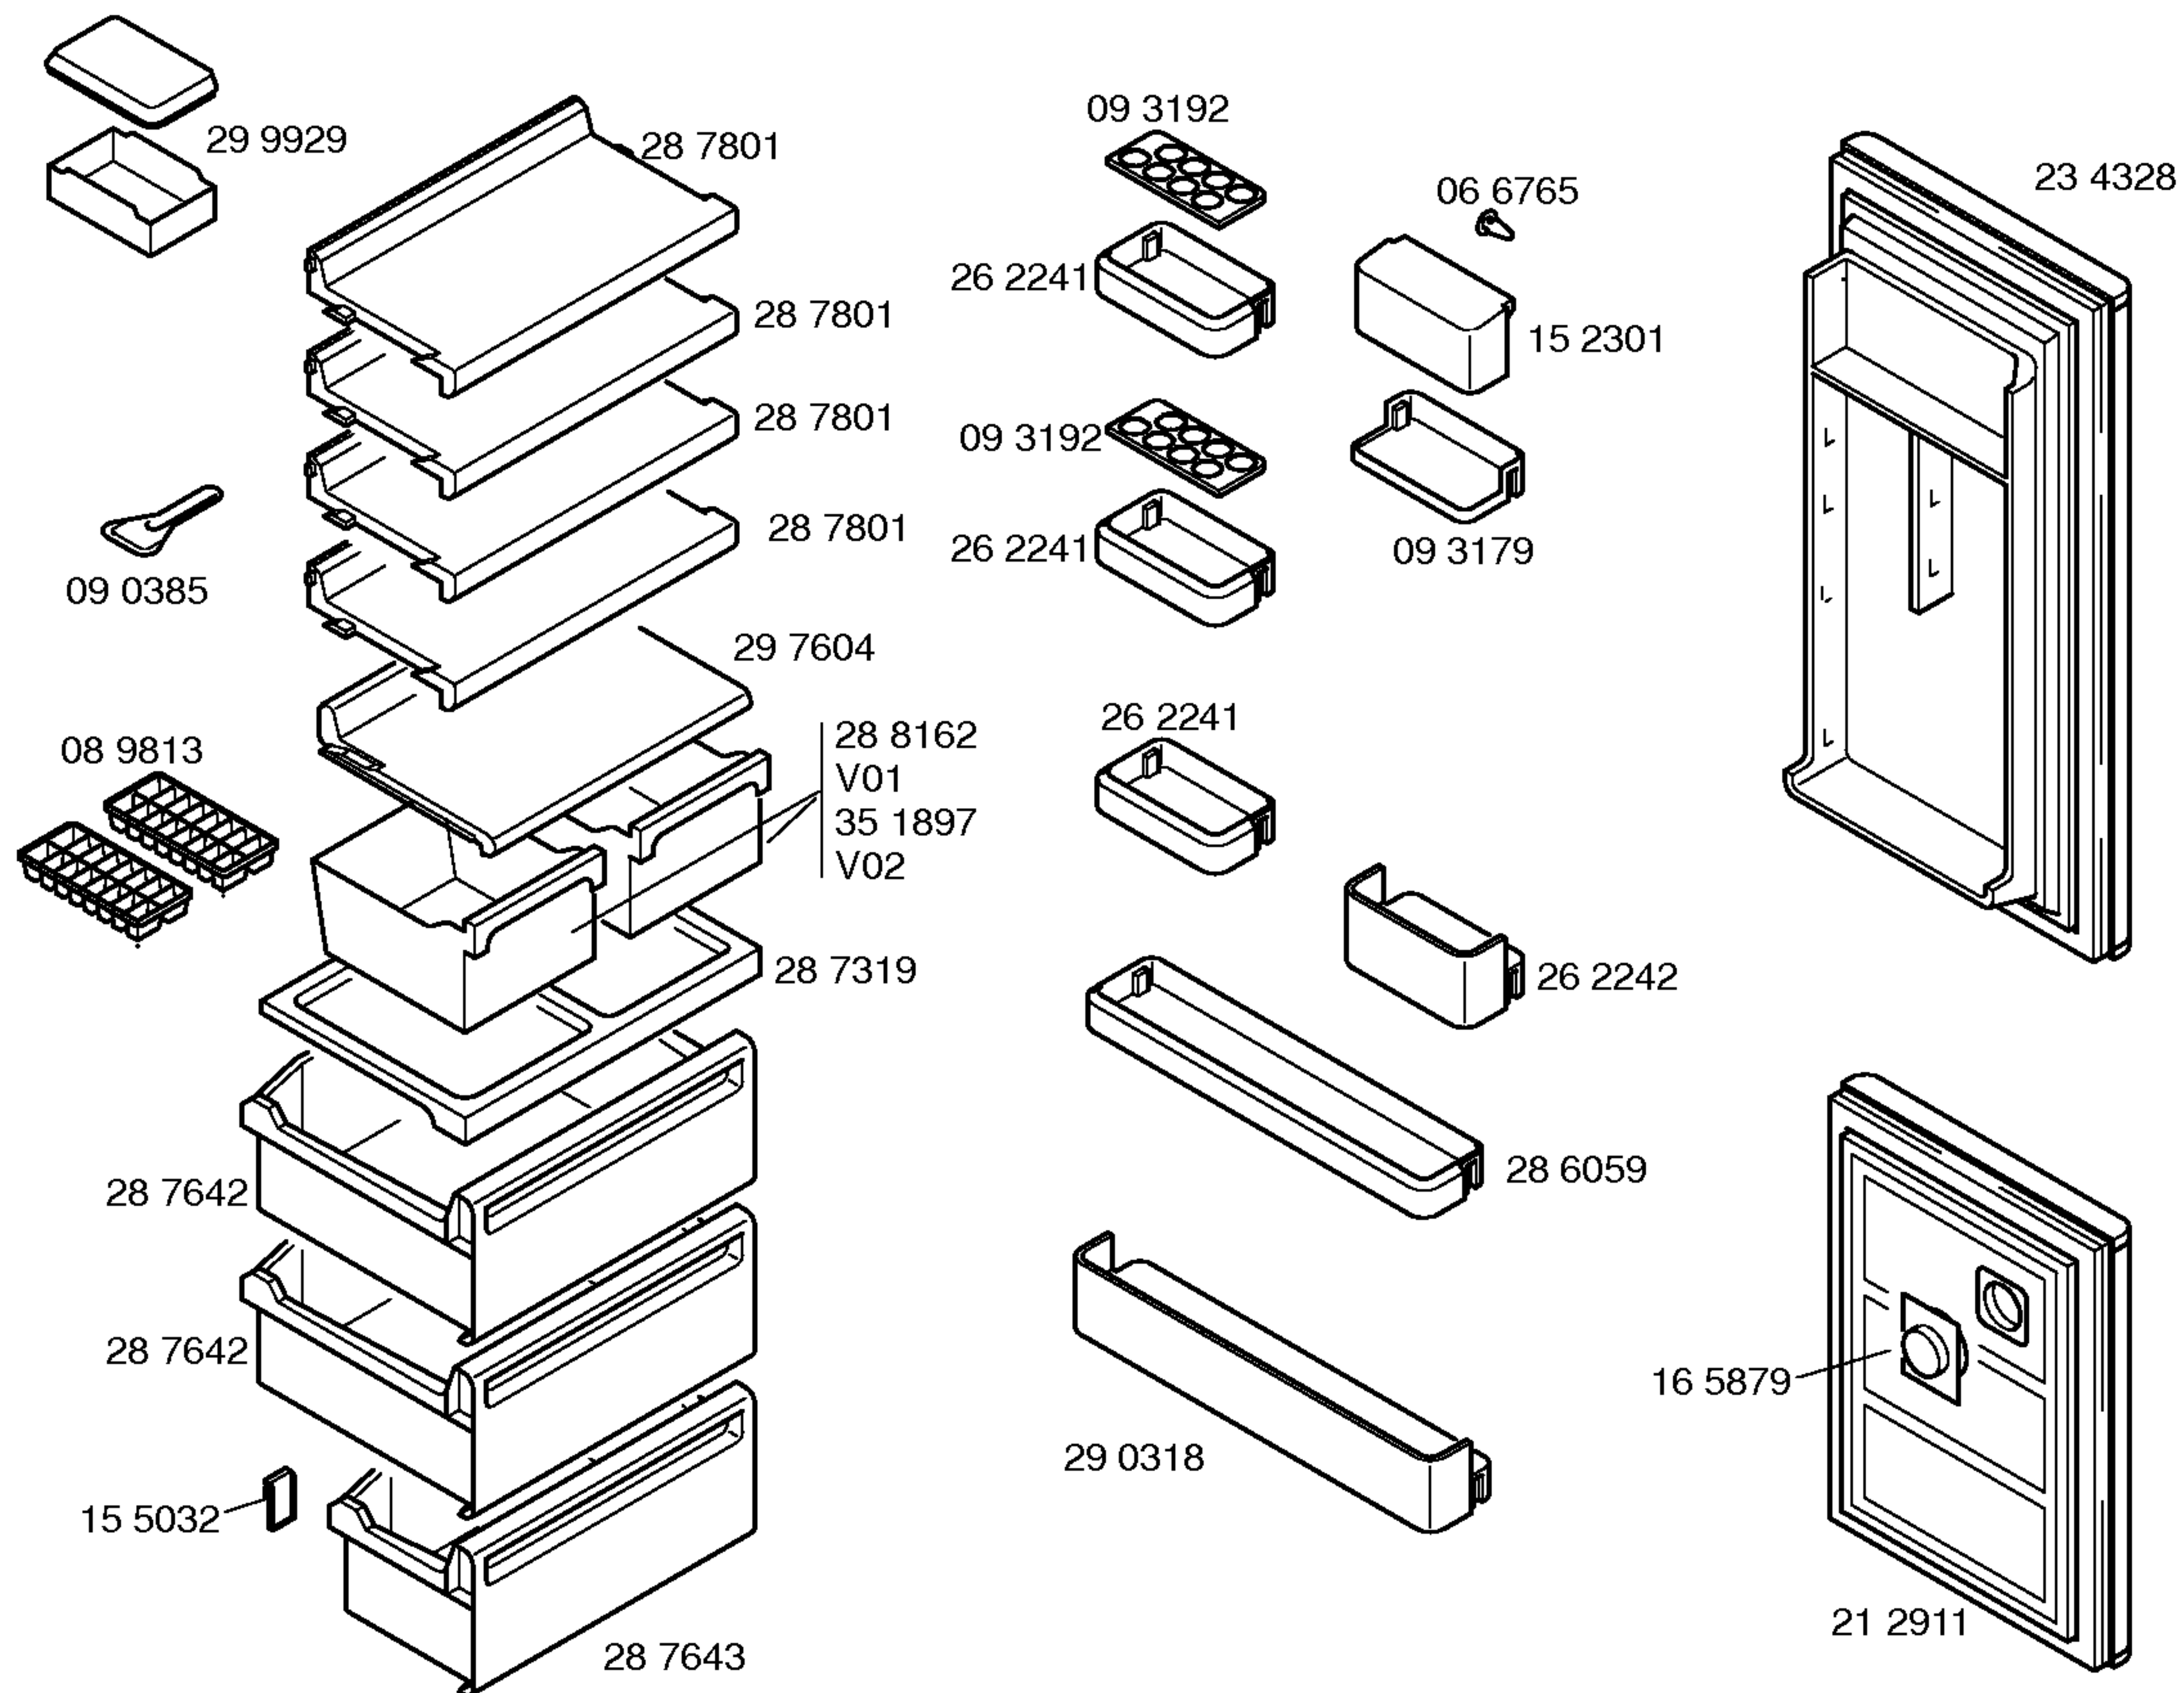

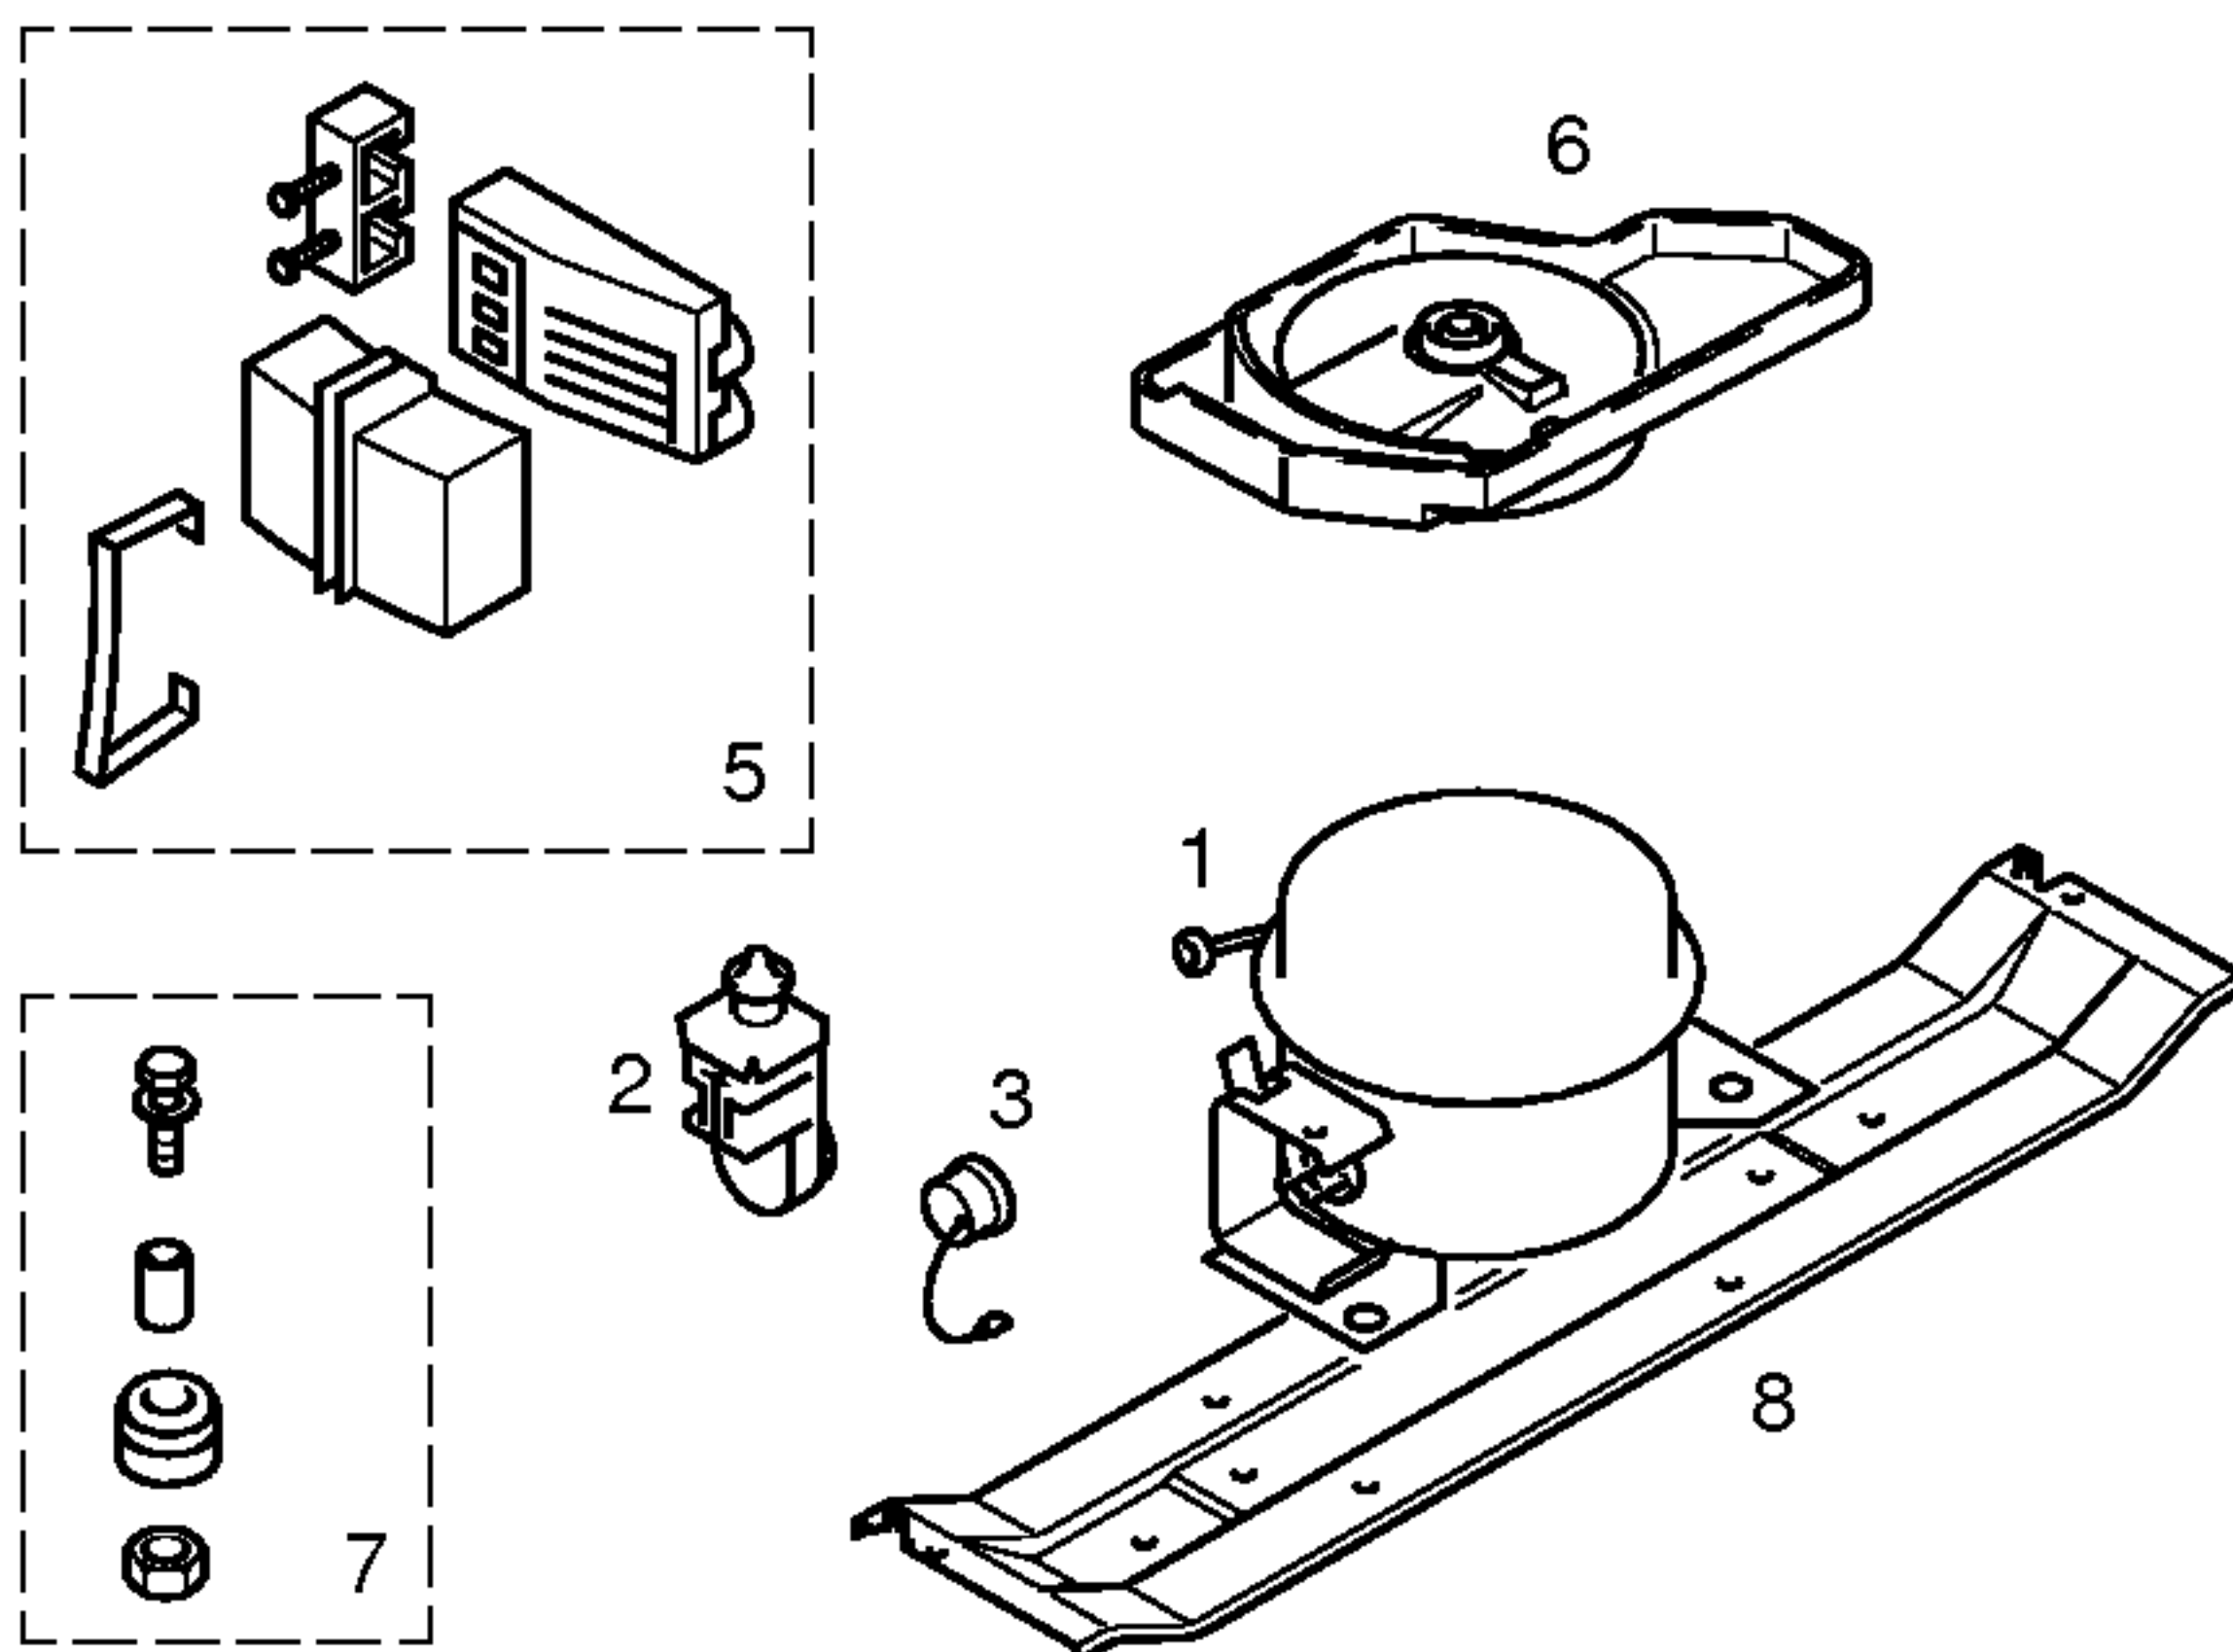

Pos.	****			
	Aspera BMP1084Y	Aspera BMP1110Y		
1	14 1723	14 1605		
2	15 4315	15 4315		
3	16 7769	16 5230		
4				
5				
6	26 4123			
7	05 0166	05 0166		
8	28 0162	28 0162		
9				
10				
11				
12				
13				

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS				

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranq. A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Aspera BMP1084Y	Aspera BMP1110Y		
	3,60			
	29,60	24,70		
	38,50	37,65		
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	Ranco K59-L6045 MIN. MAX. +6° -14° -28°	Ranco K54-L1940 MIN. MAX. -14° -22° -20° -28° -10° -18°		
Füllmenge/Fill. quantily/Charge/Carga R600a	g	*	*	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	71	86	
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm			
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión	Ohm V			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador				

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características