




Gebrauchsanweisung

- 1) 48 0752
2) 18 2057

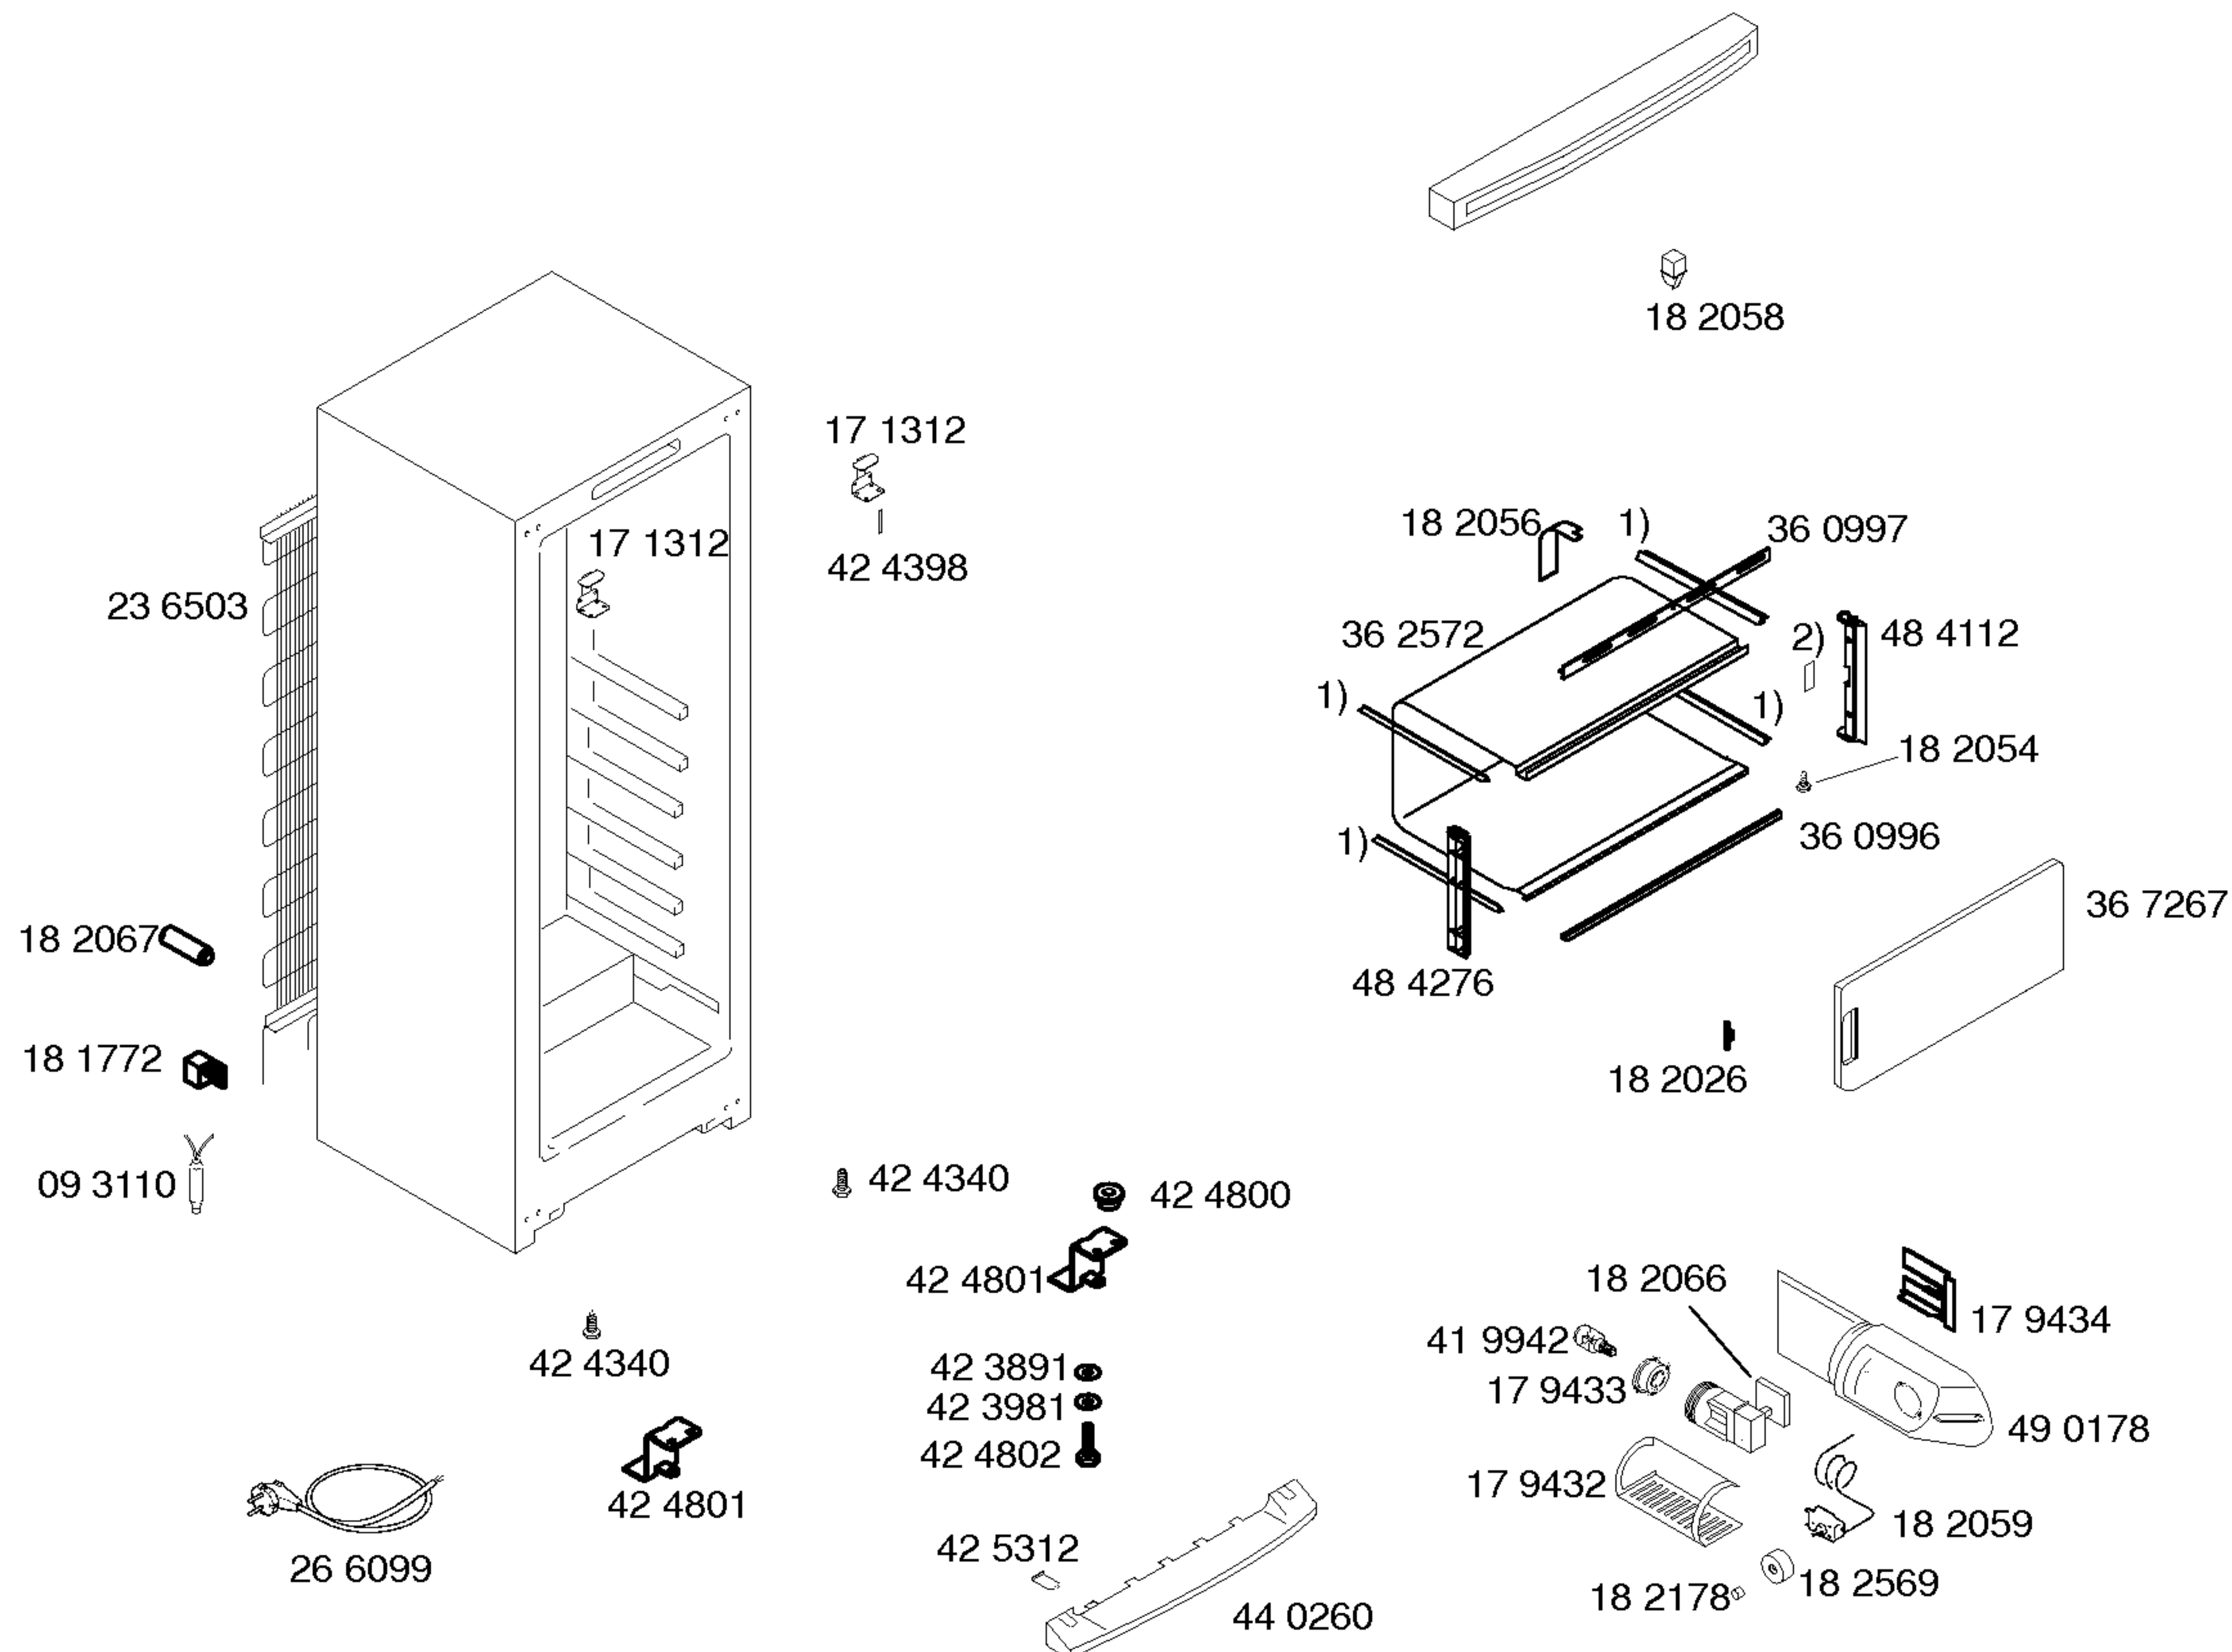

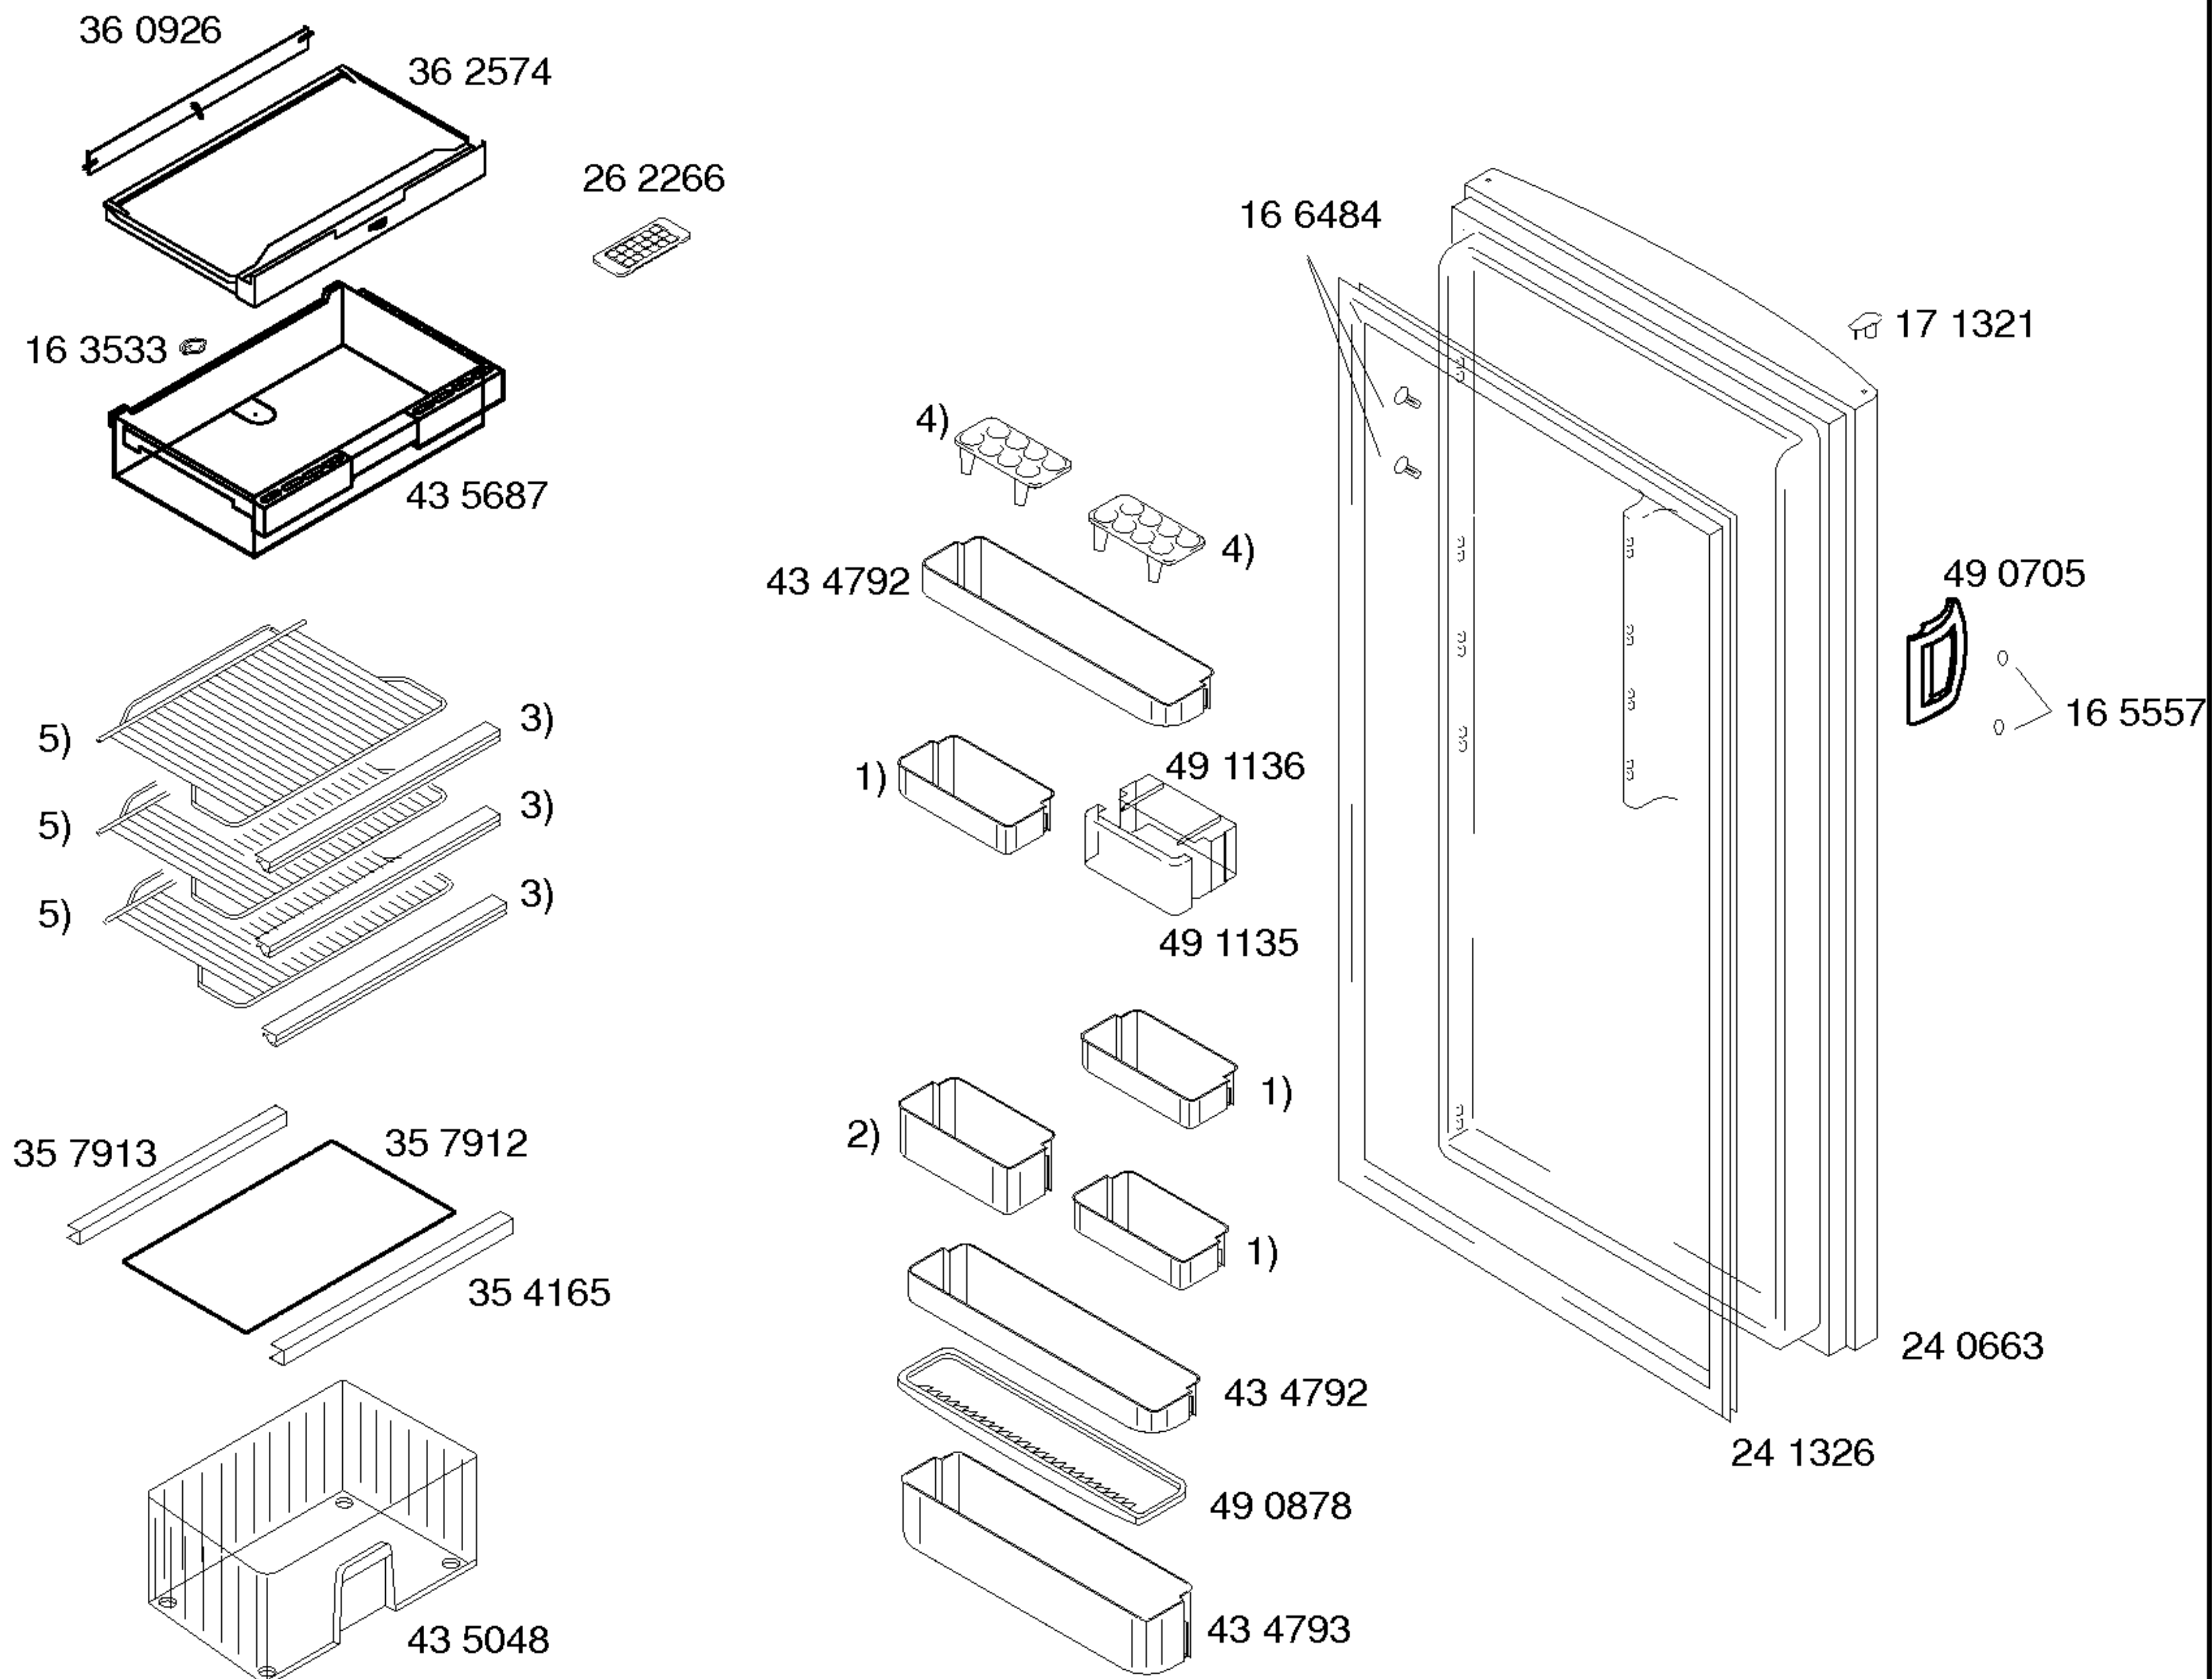

- 1) 49 0759
- 2) 49 0760
- 3) 35 4164
- 4) 49 0761
- 5) 35 4314

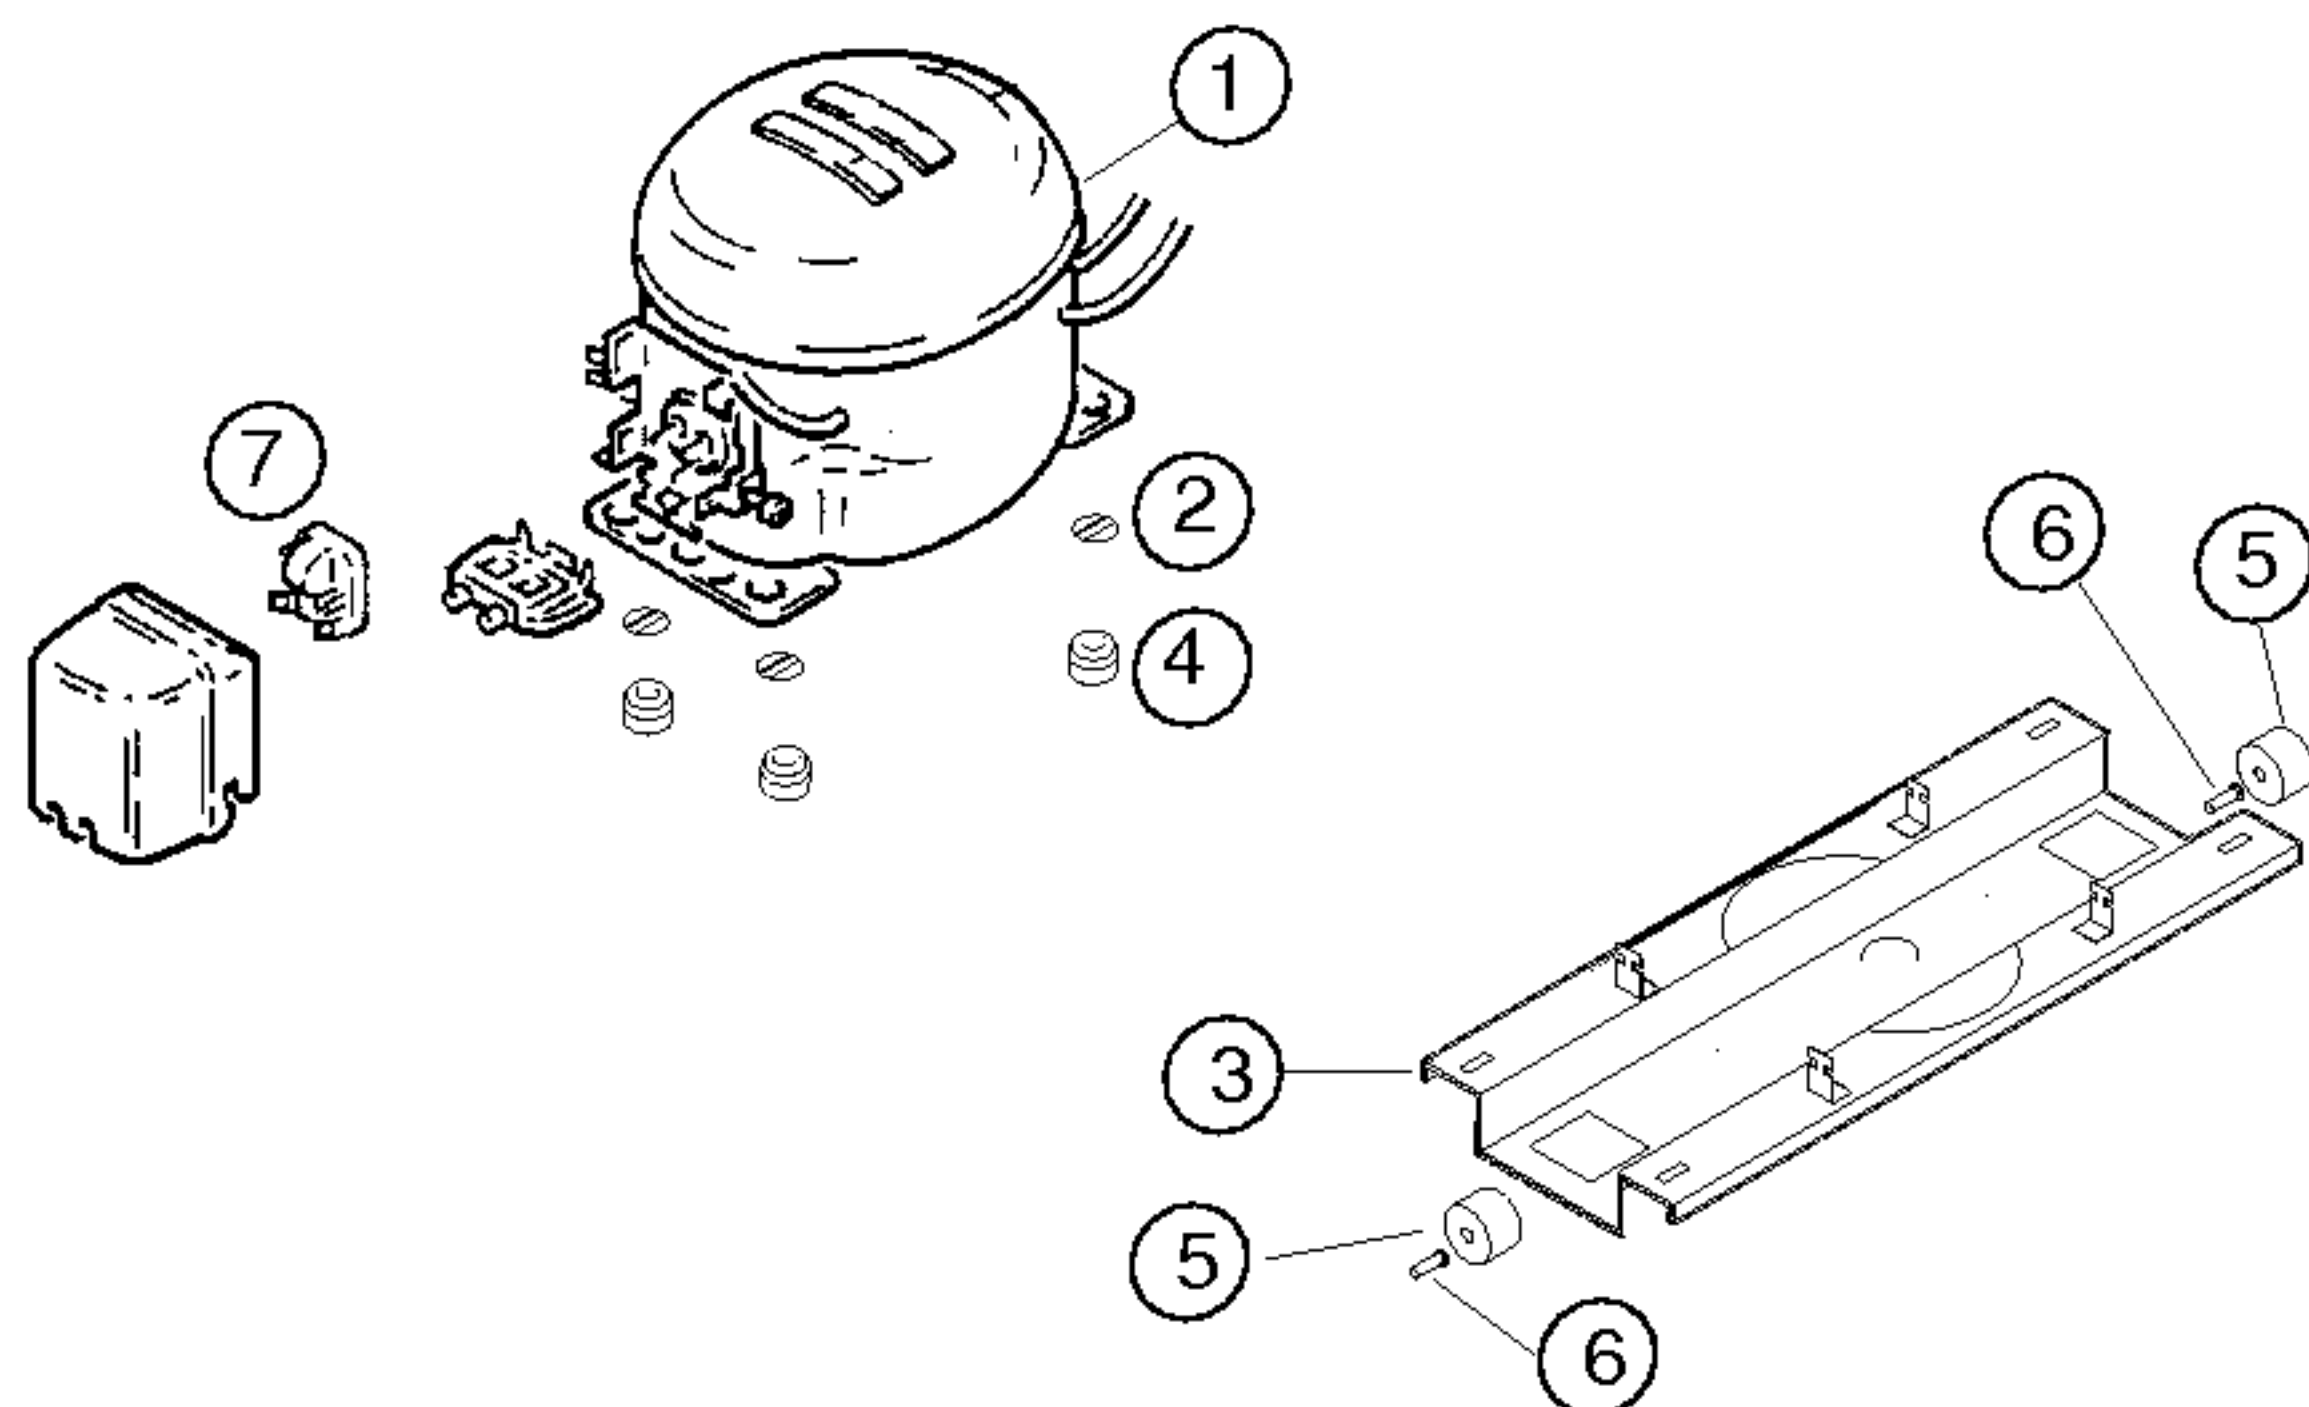

Pos.	Danfoss		
	NL6F		
1	14 1760		
2	17 1519		
3	35 4158		
4	16 3427		
5	17 1318		
6	18 1014		
7	16 5570		
8			
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör	Danfoss		
Typ/Type/Tip	NL6F		
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A	9.6	
Widerstand/Resistance/Rezistans Ha/	Ω	16	
Hi/aux.		13.6	
Temp.Reyler/Thermostat/Termostat			
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Acma kapama degerleri	..ein/acma °C		
Valeurs de commutation/Termostat degeri	..aus"/kapama		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/ Dolum miktarı	R134a	g	*
Anschlusswert/Comm. load/Giris gucu	W		
Heizung/Heater/Rezistans	Ω		
Widerstand/Resistance/Direnc	W		
Leistung/Power/Guc			
Ventilador/Blower/Vantilatör	Ω		
Widerstand/Resistance/Rezistans			
Magnetventil/Magnetic valve/Manyetik valf	Ω		
Widerstand/Resistance/Rezistans	V		
Spannung/Voltage/Gerilim			
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz