




Gebrauchsanweisung
52 3754
(DE,GB,FR,ES,PT)

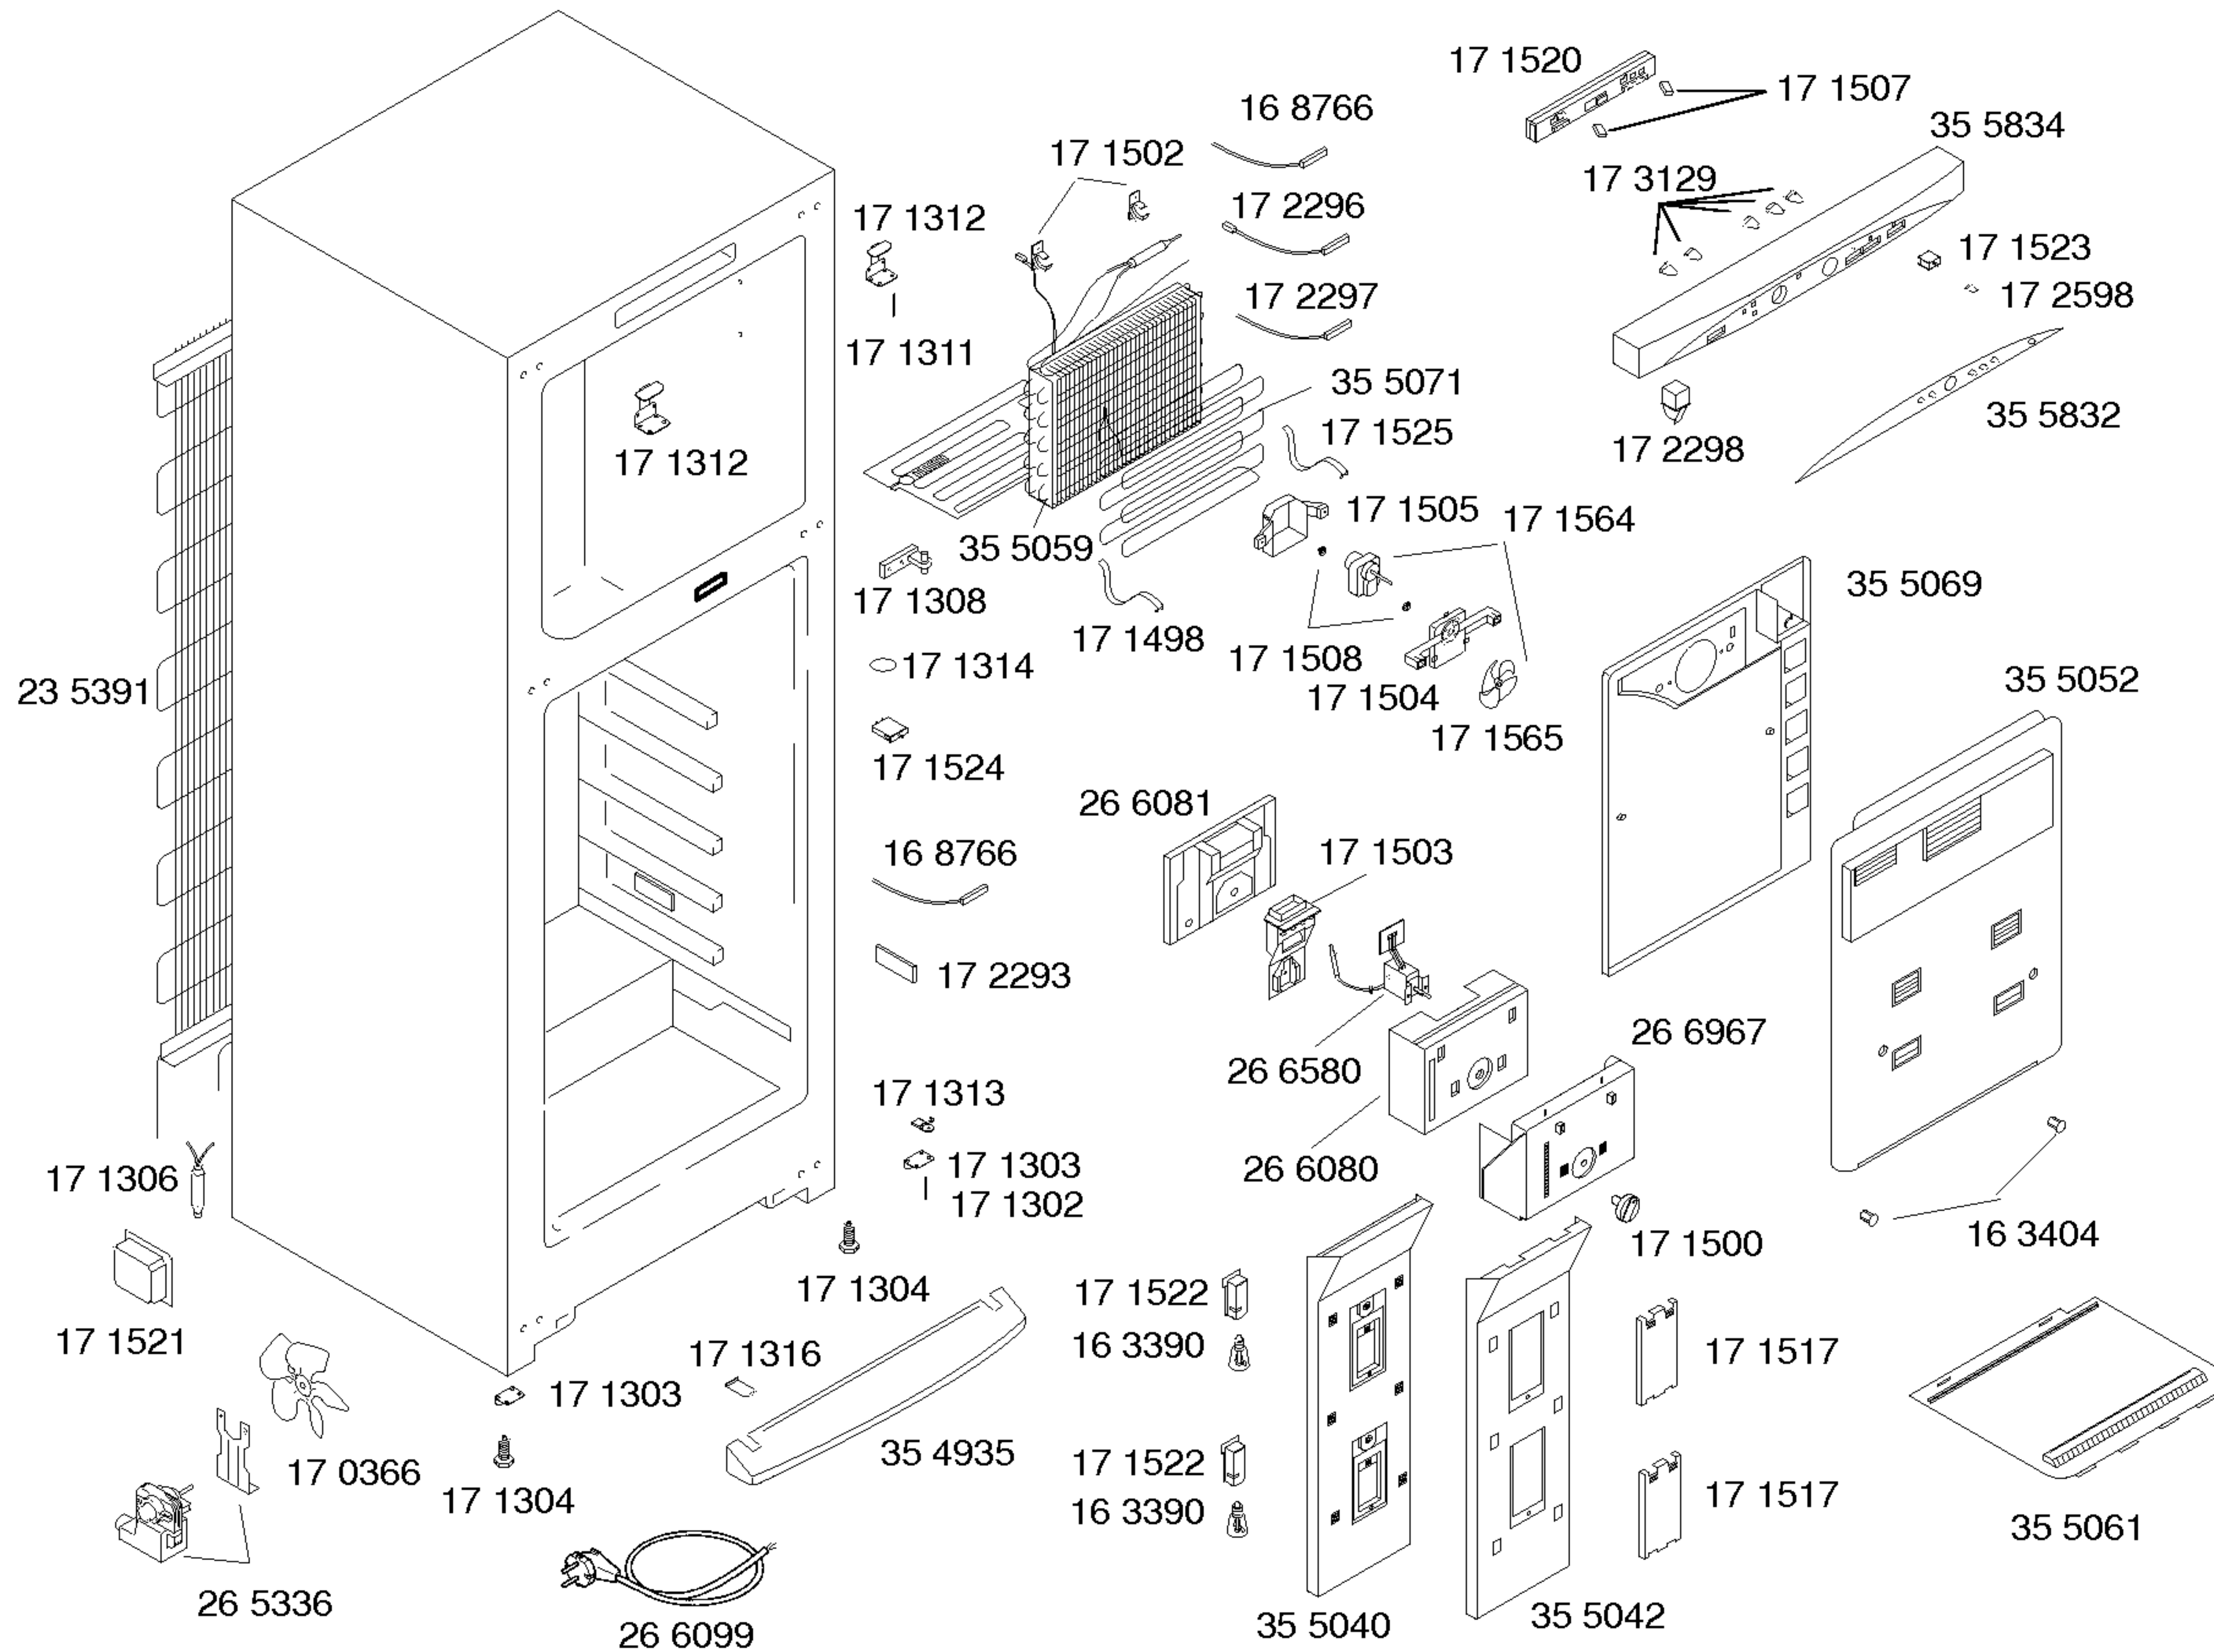

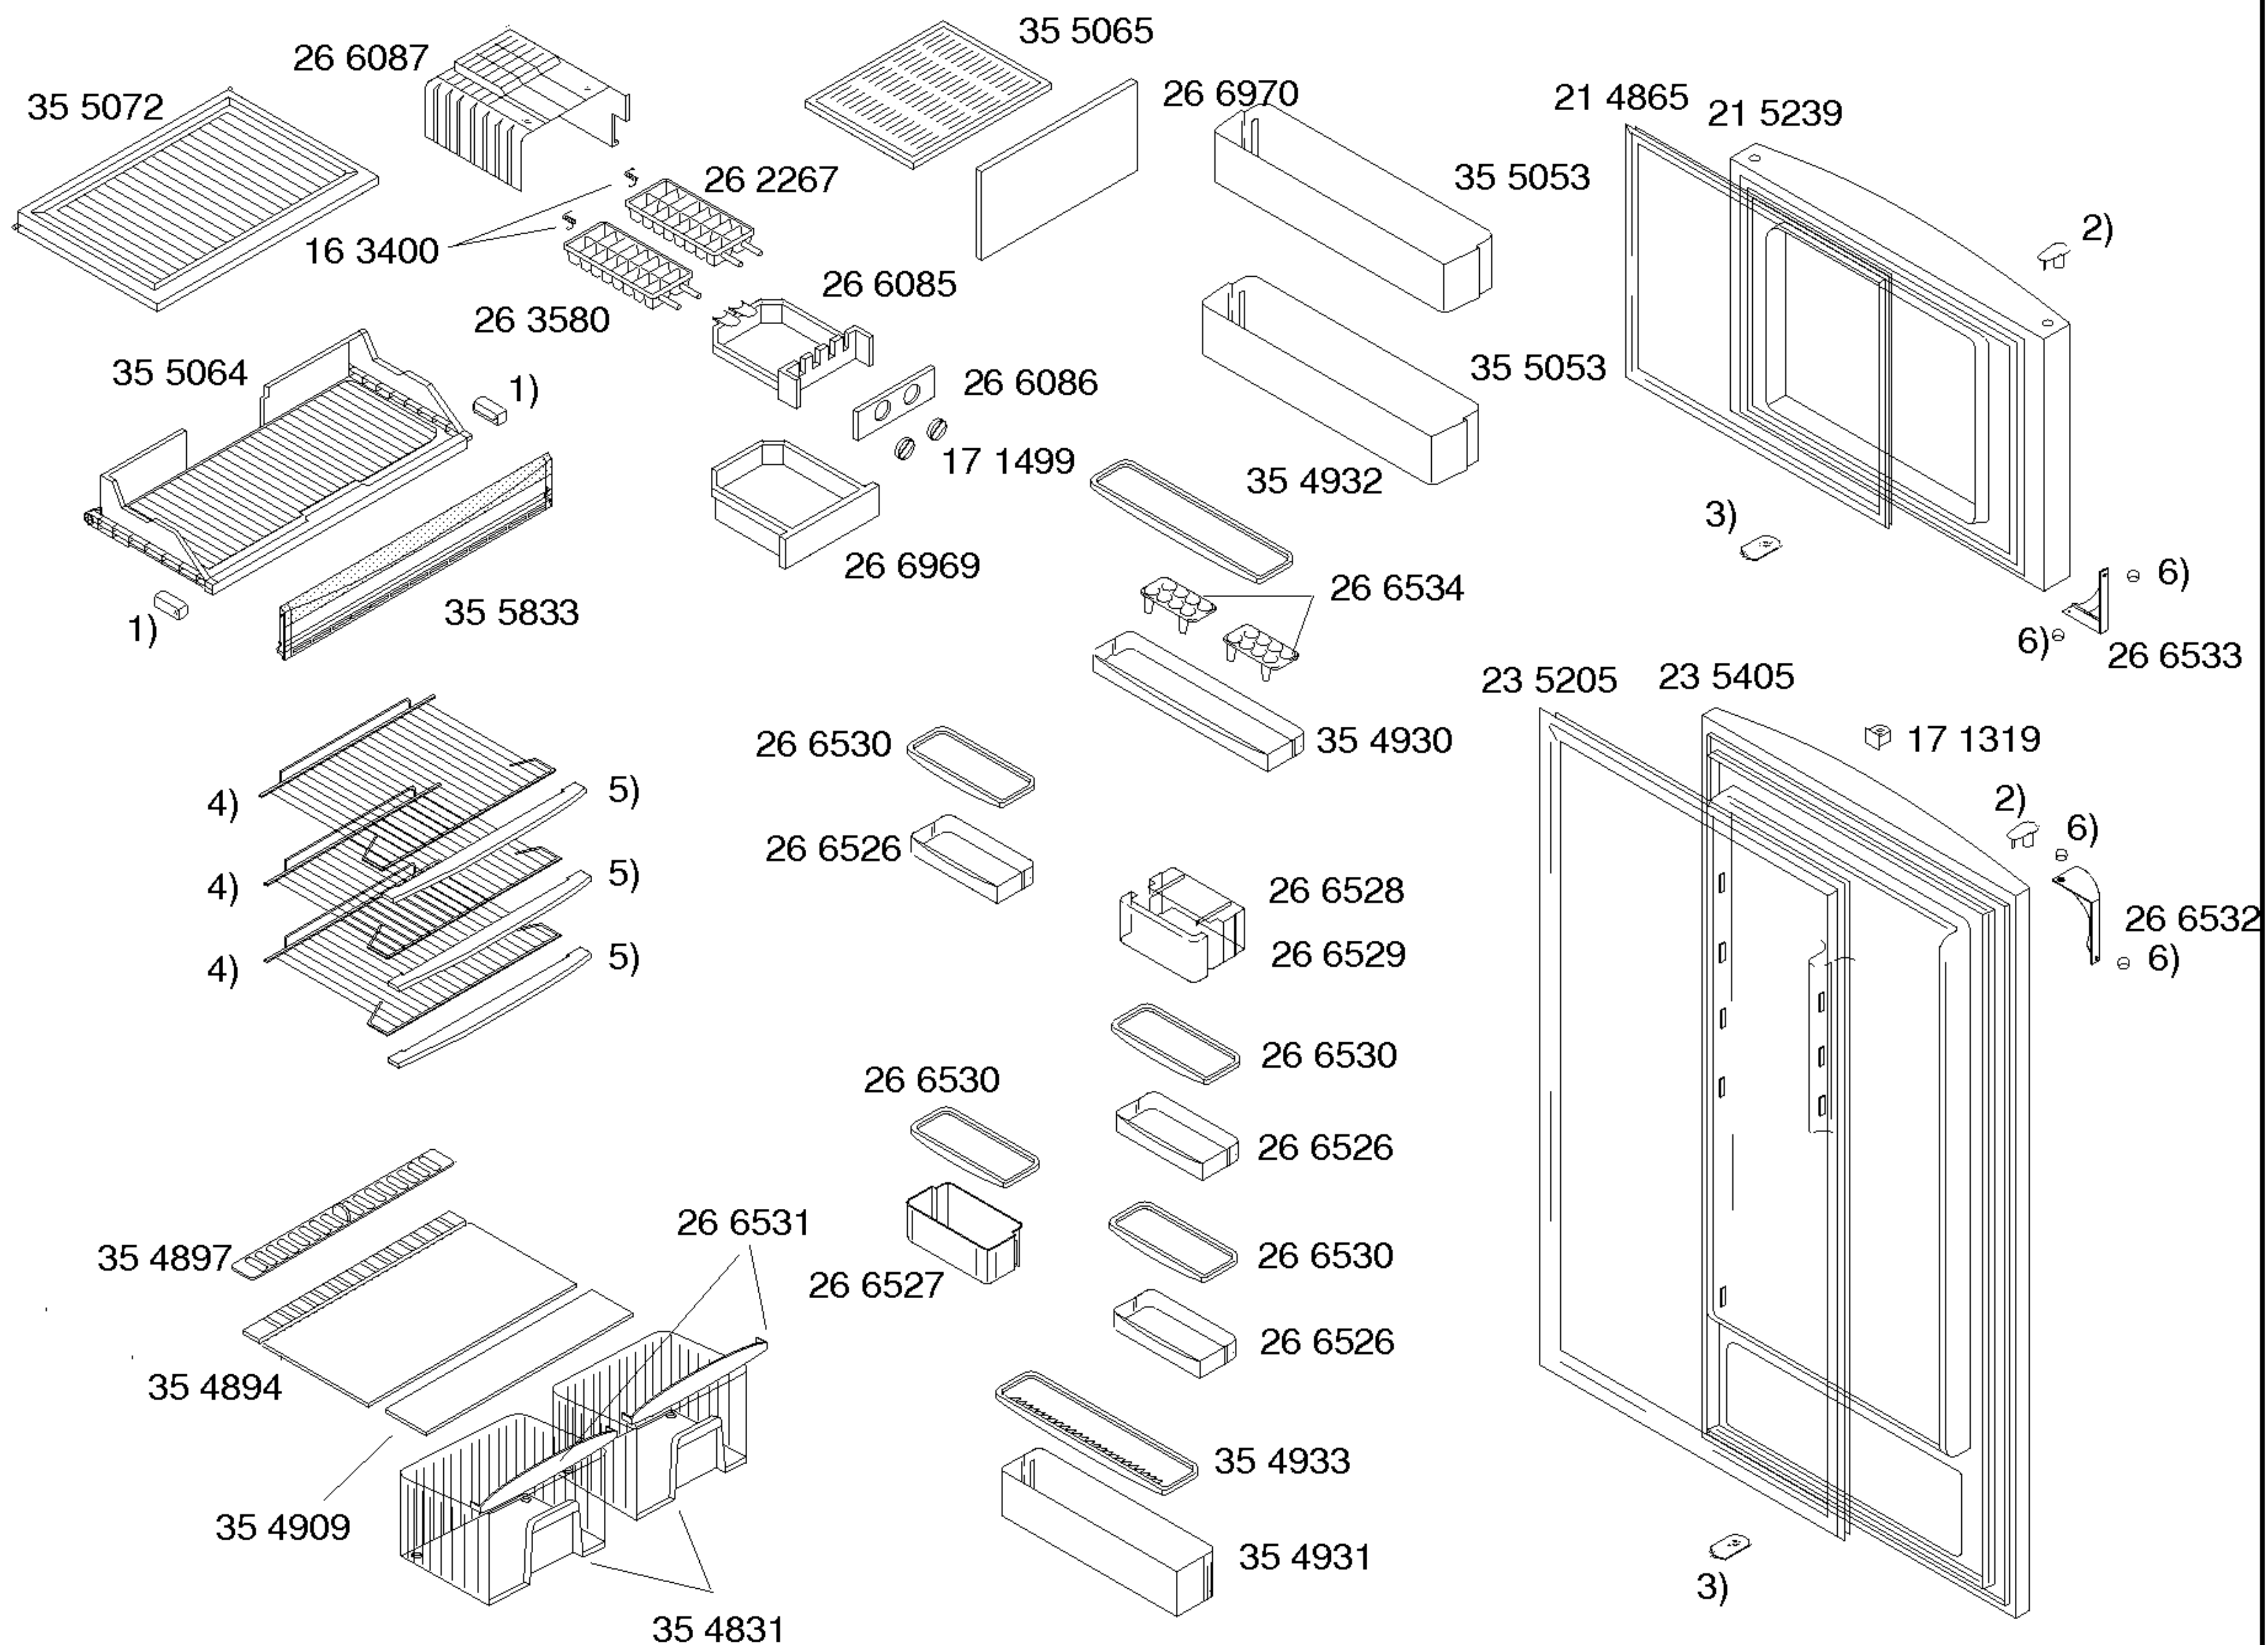

- 1) 17 1501
- 2) 17 1321
- 3) 17 1506
- 4) 35 5835
- 5) 35 4936
- 6) 16 5570

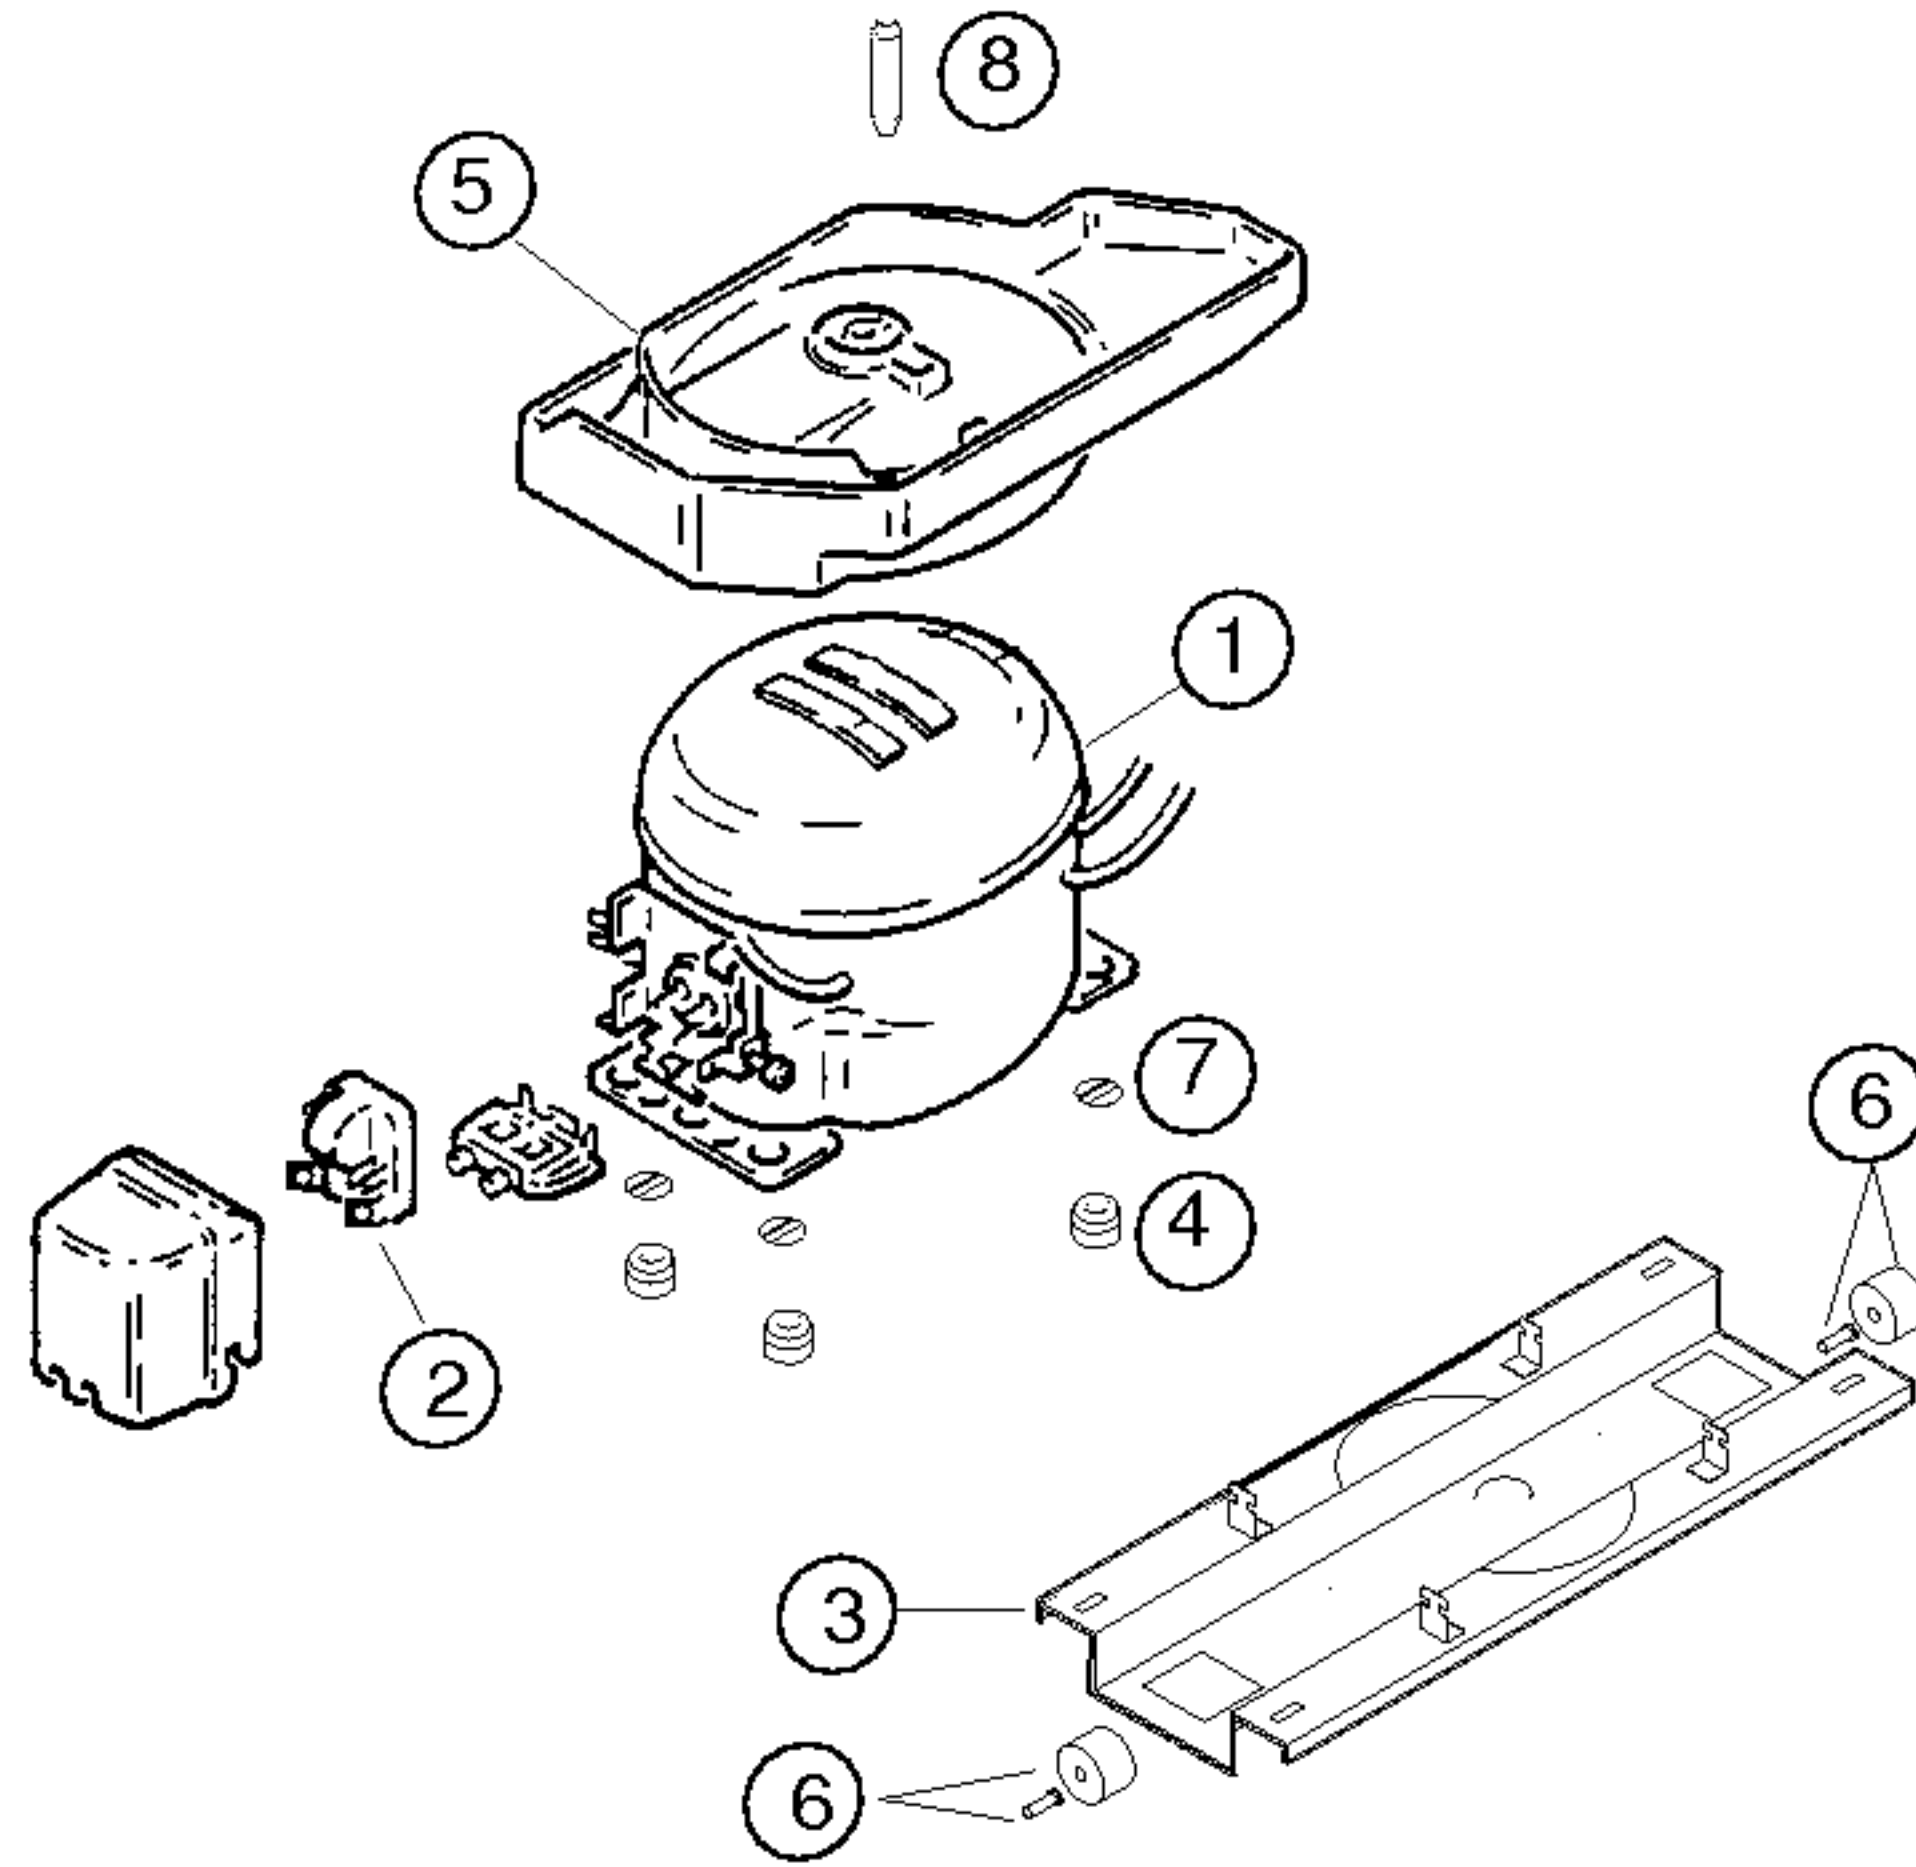

Pos.	Danfoss		
	NLE9F		
1	14 1932		
2	16 5570		
3	35 4583		
4	16 3427		
5	26 5327		
6	17 1318		
7	17 1519		
8	17 2776		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss NLE9F 6.4 12.9 18		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	Elektronisch ..ein/acma °C ..aus"/kapama ..alarm'		
Füllmenge/Fill. quantily/ Dolum miktarı	R600a	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Verdampfer 190	Ablaufrinne 20	
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Verdampfer		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz