




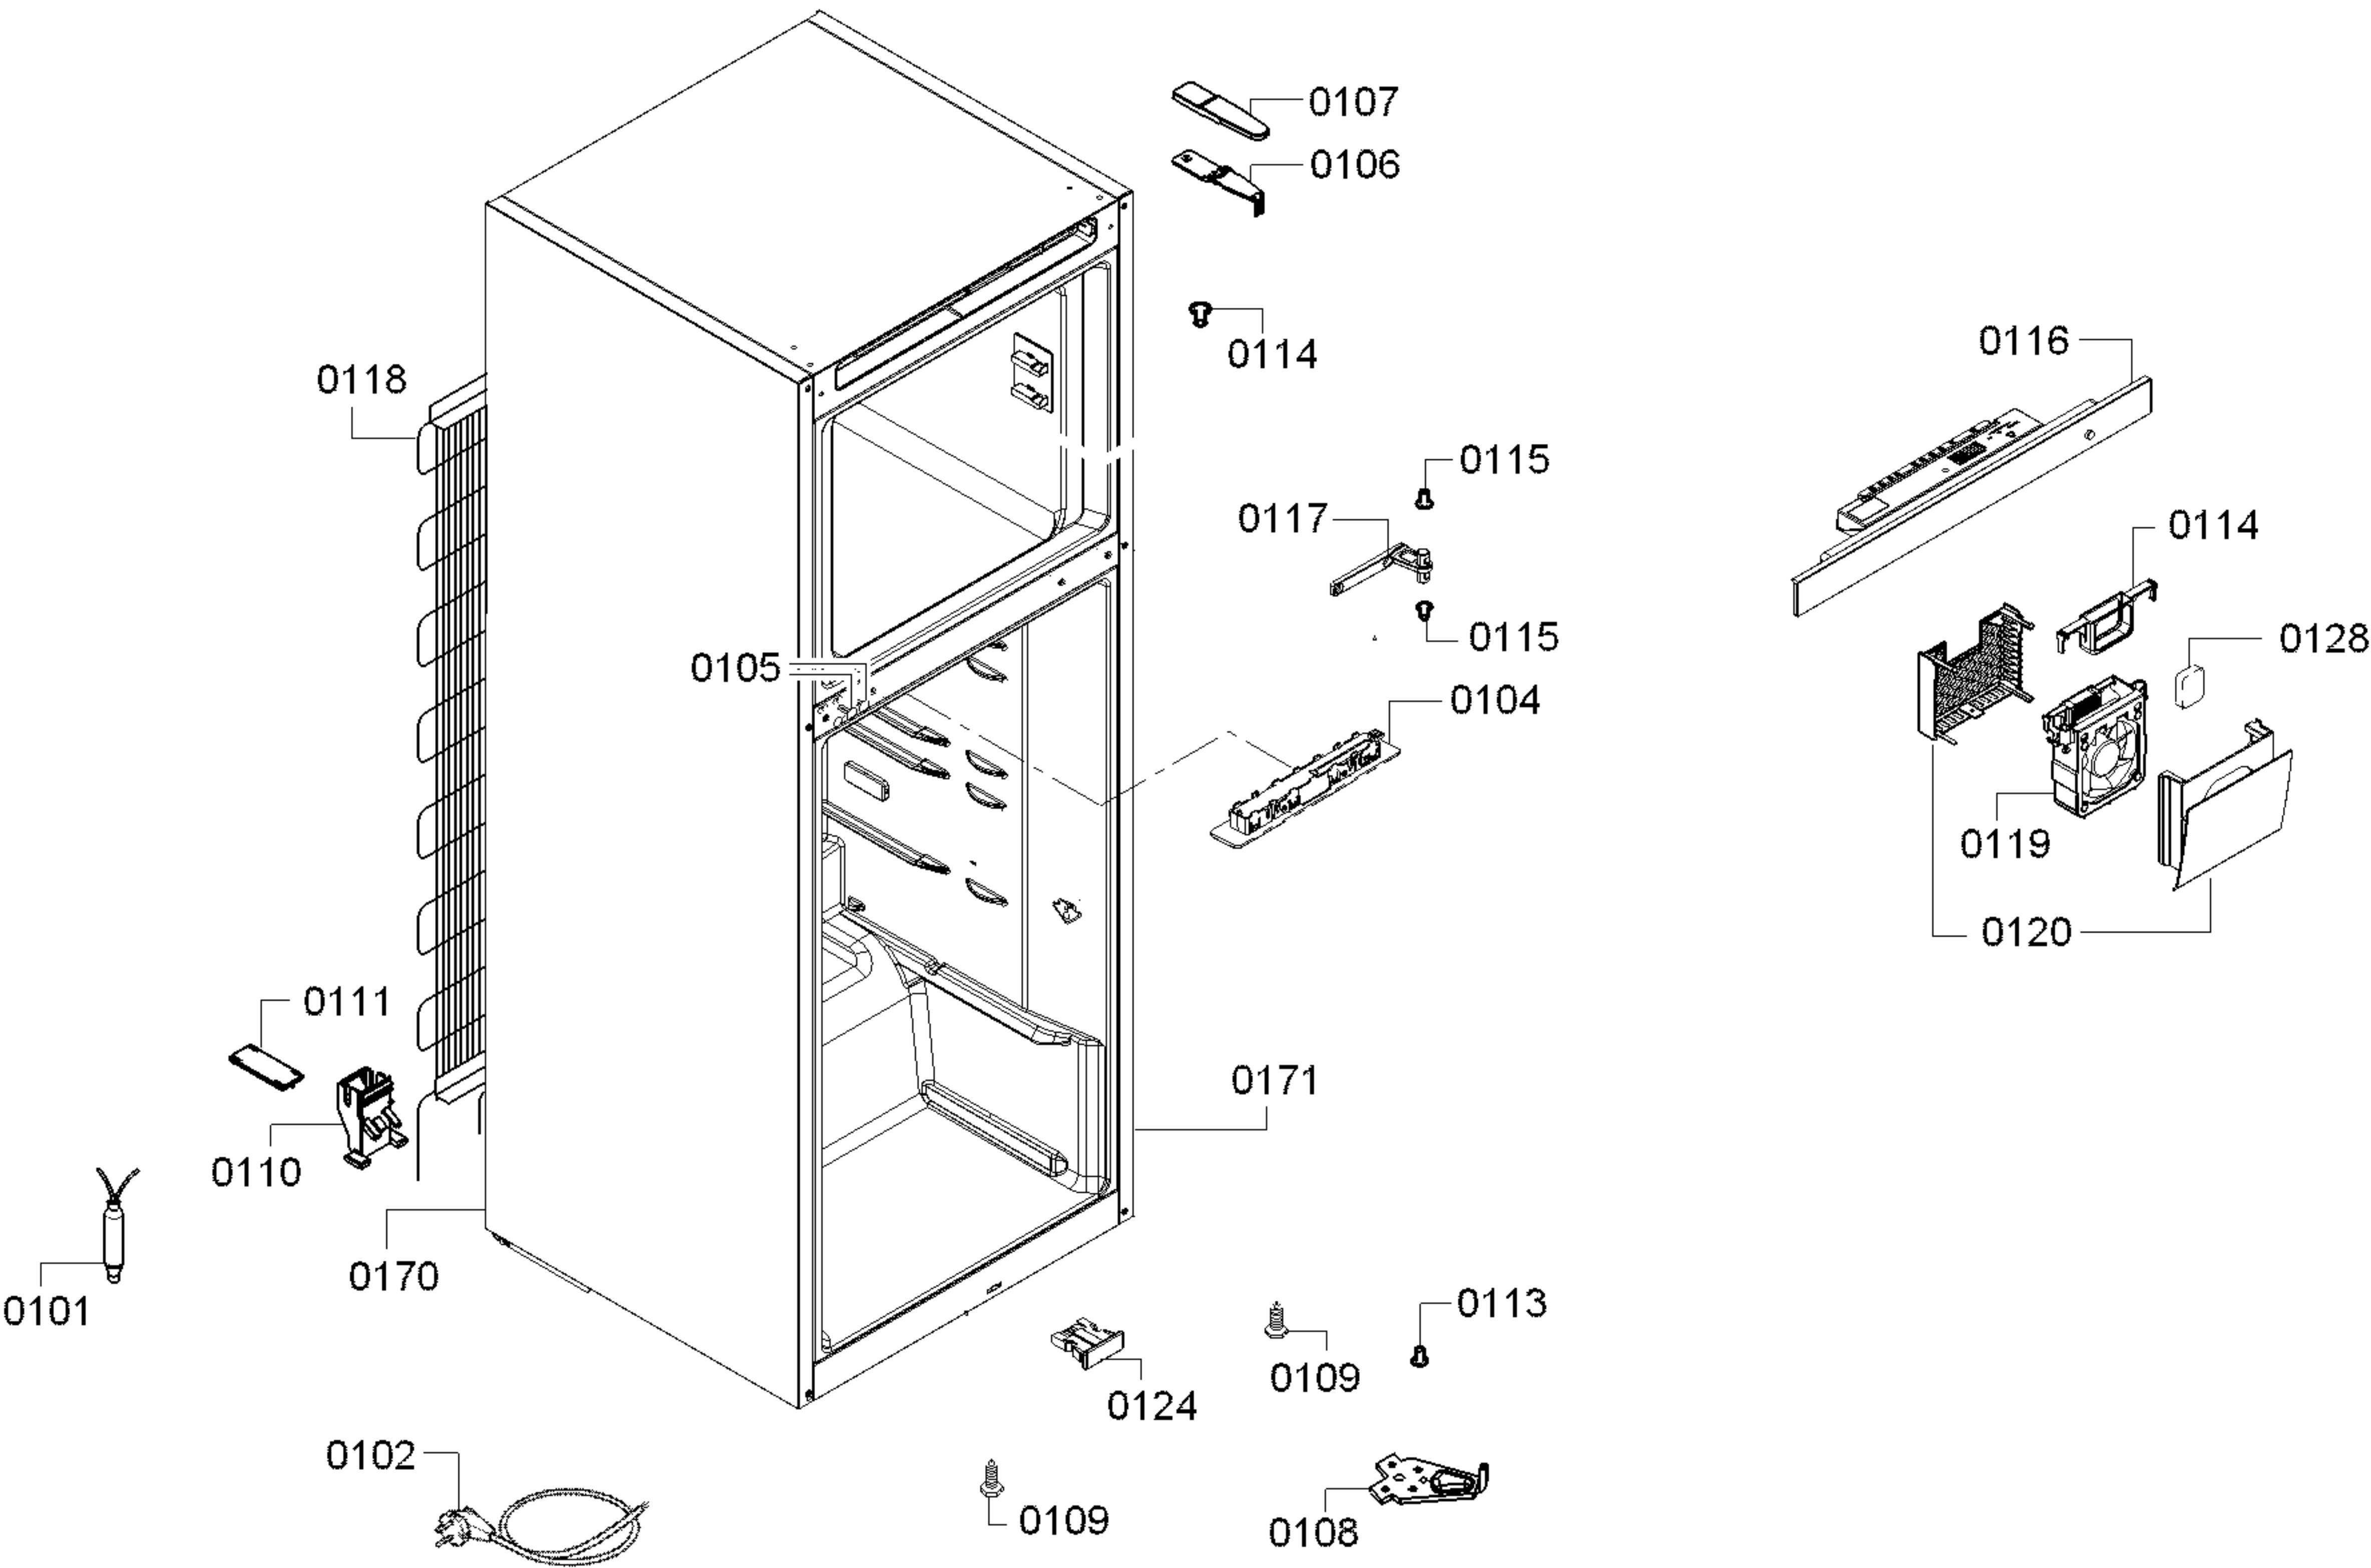


0199

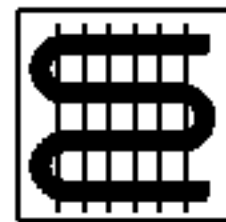

0195

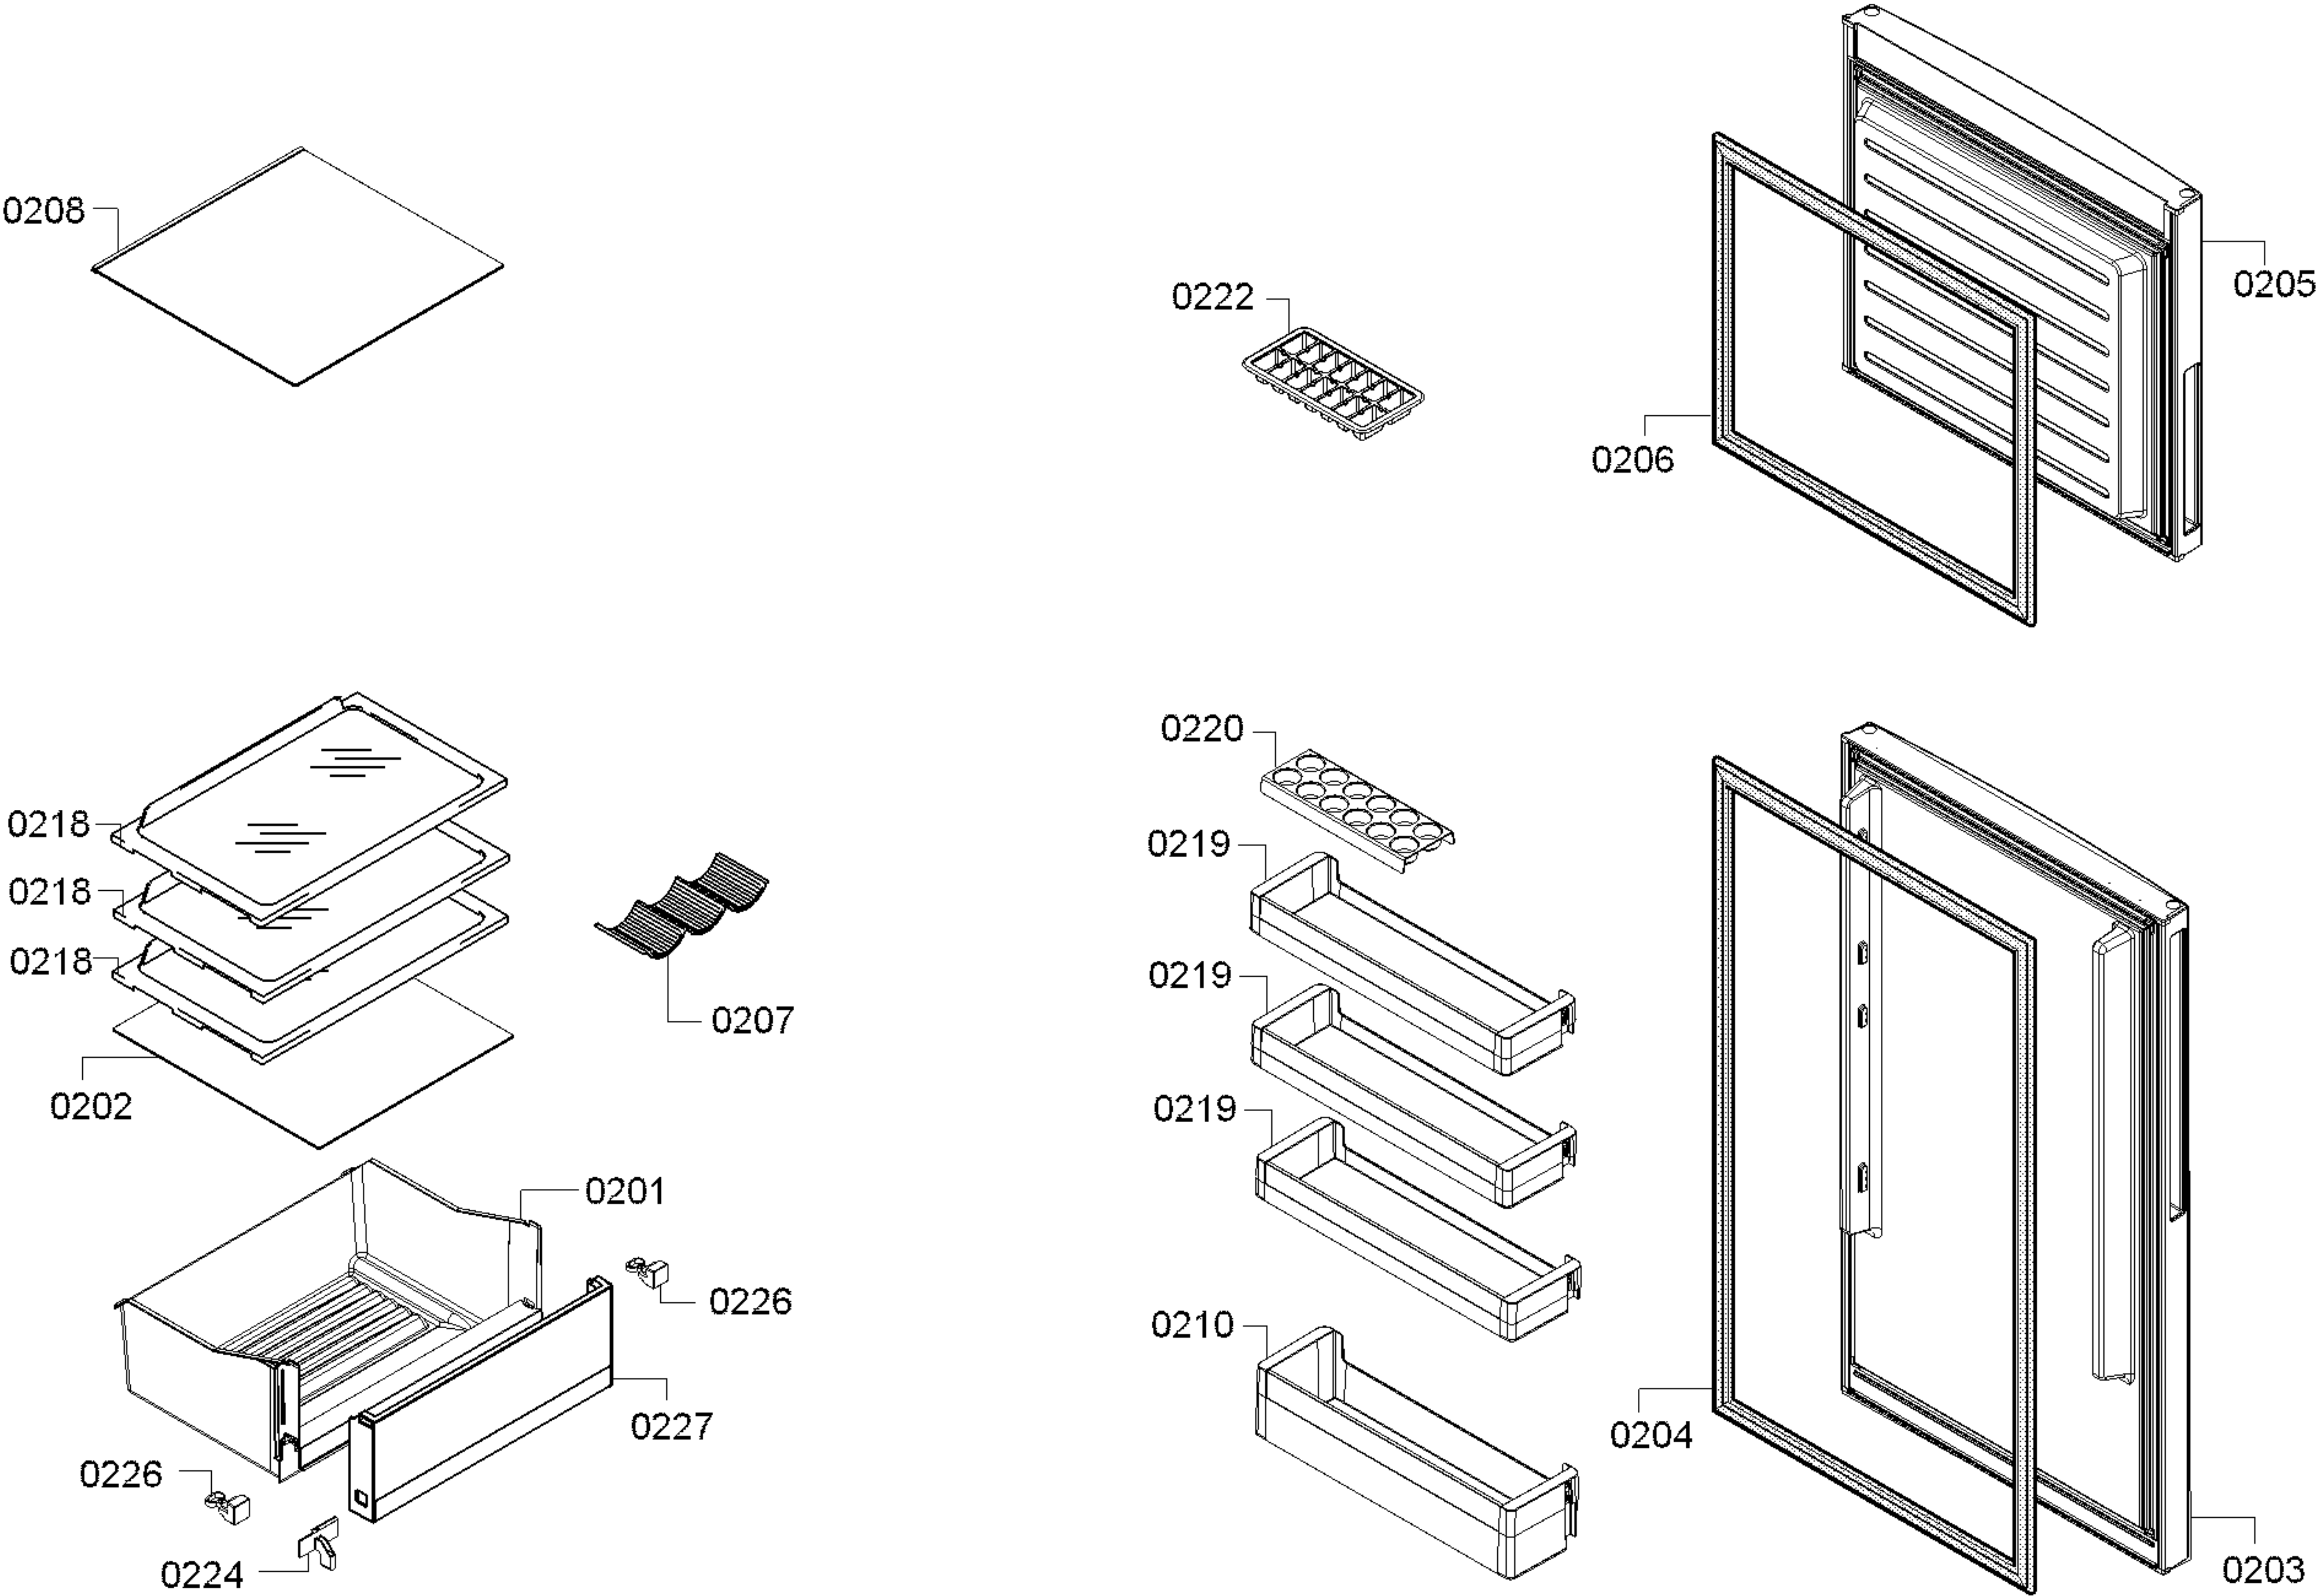

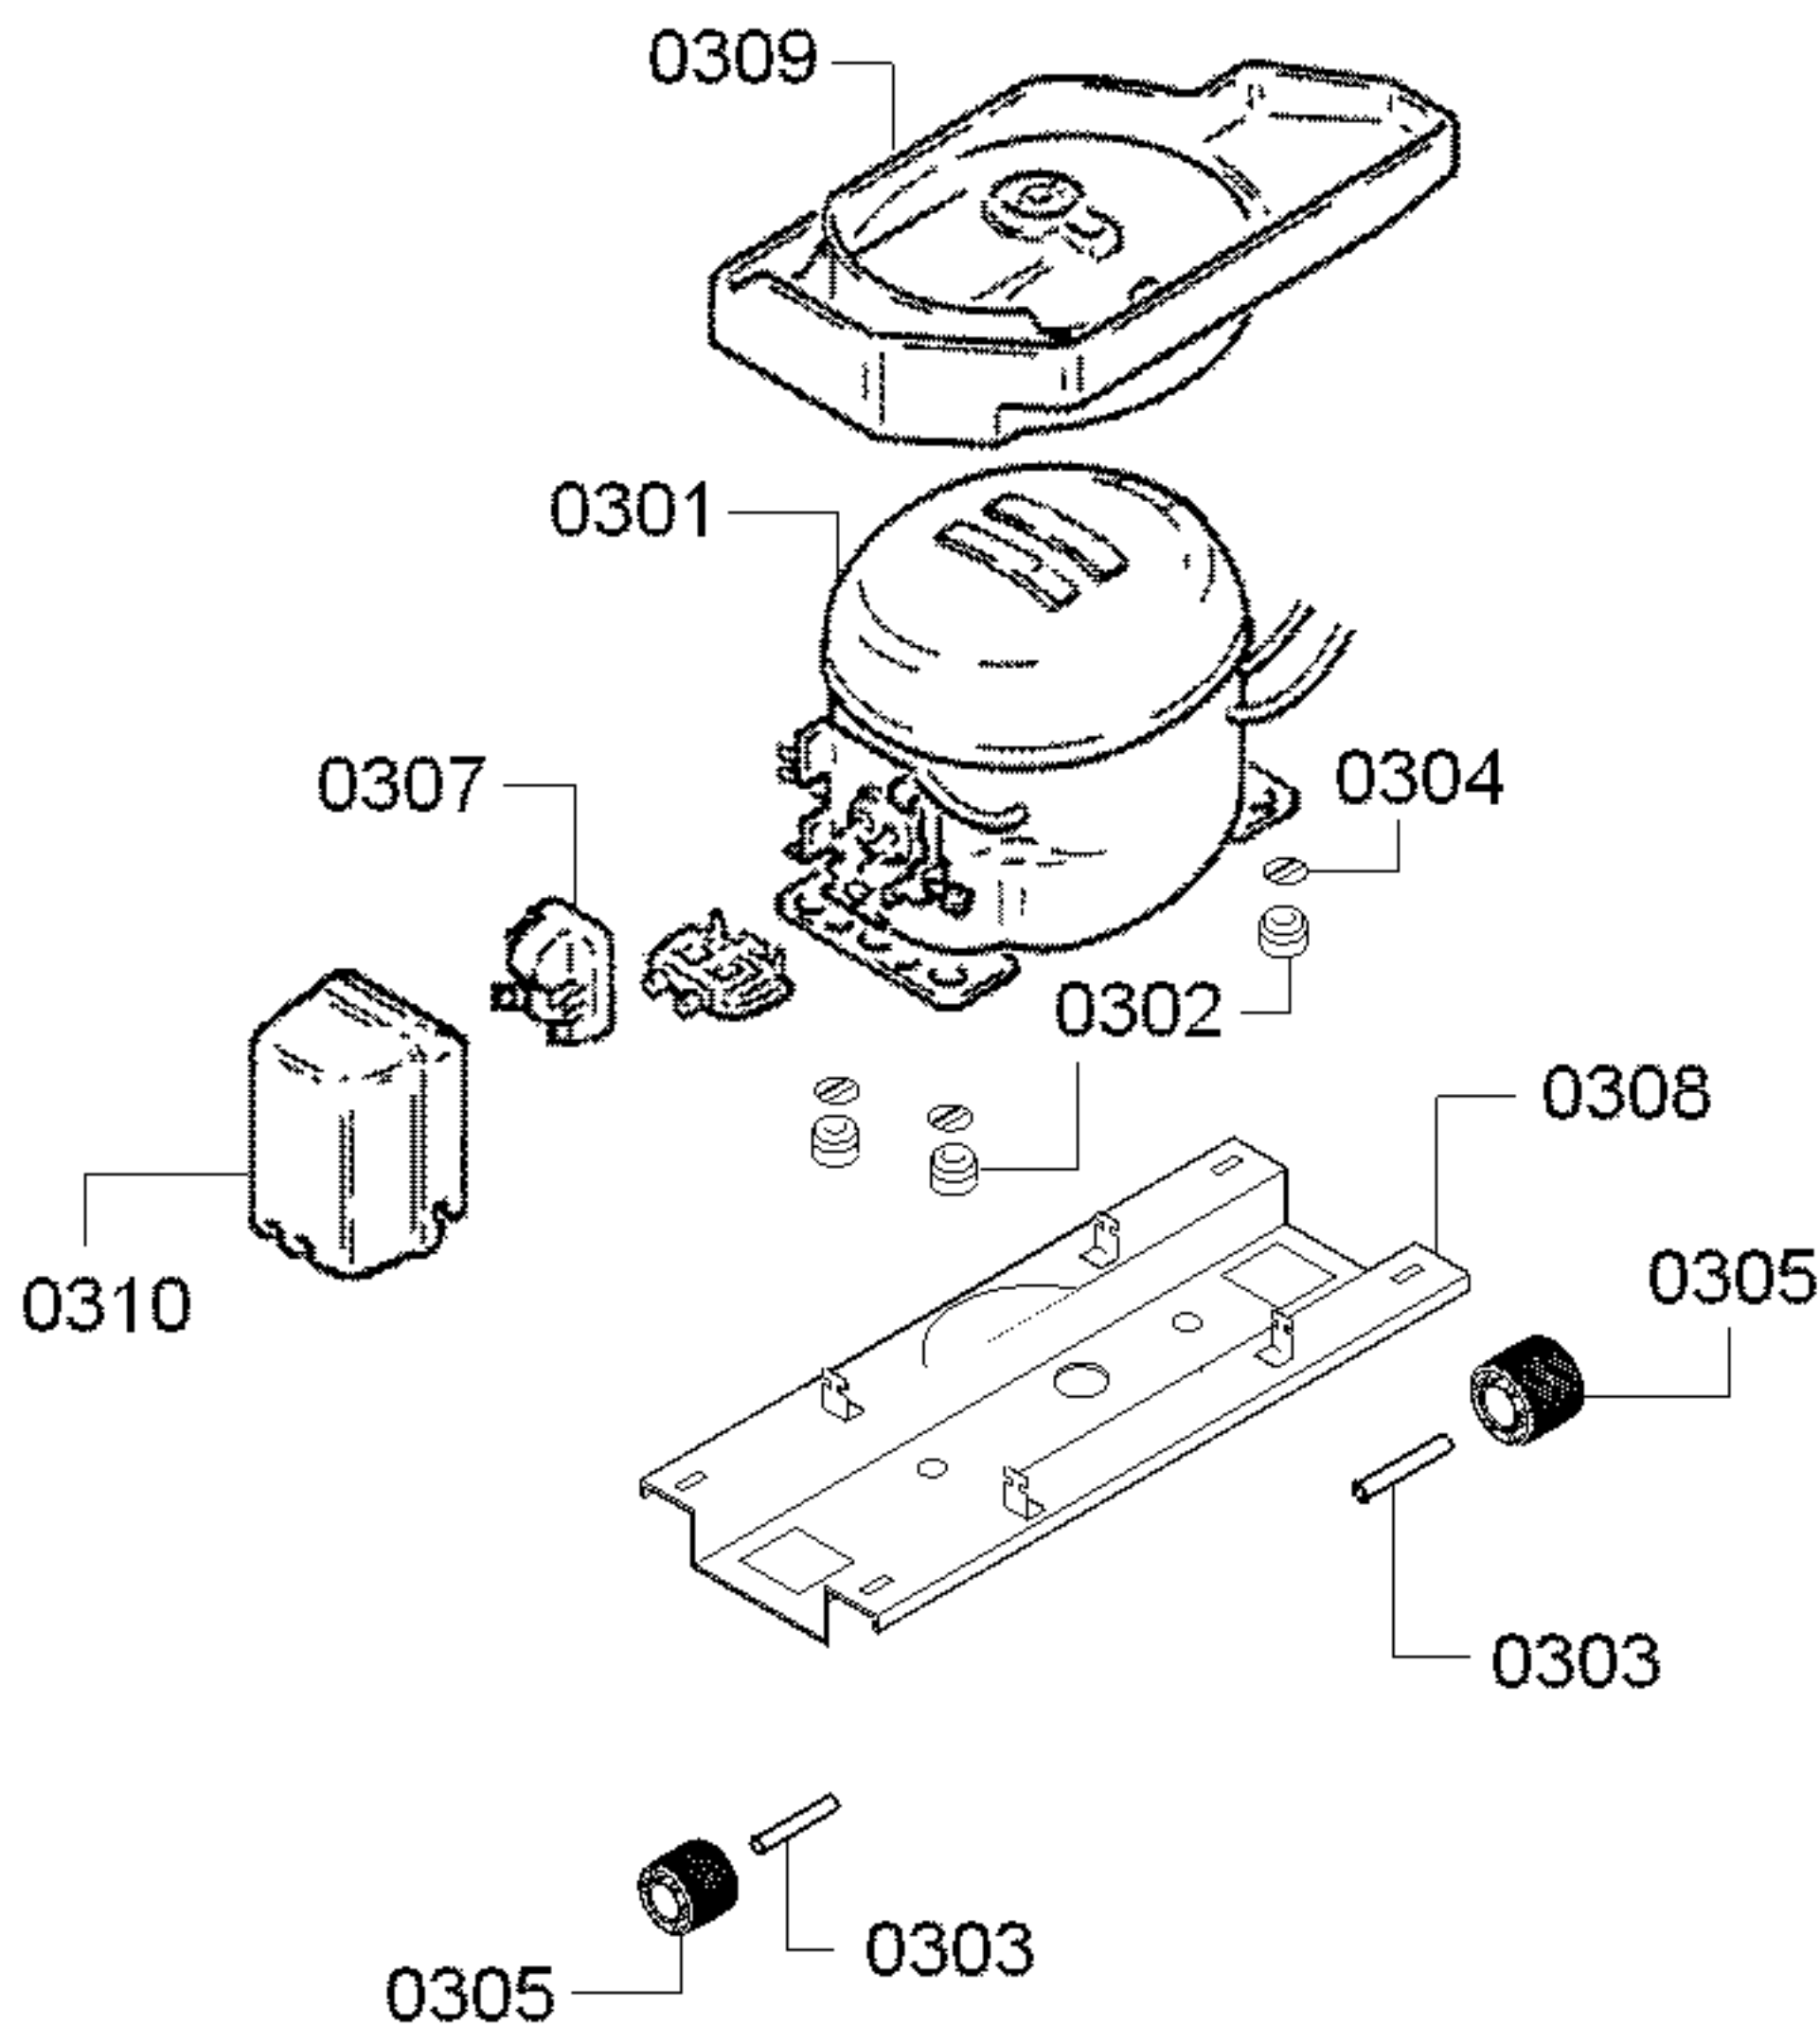

| TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER |               |   |    |
|-------------------------------------------------|---------------|---|----|
| Verdichter/Compressor/Kompresör                 | JIA XIPERA    |   |    |
| Typ/Type/Tip                                    | NT1113Y       |   |    |
| Förderleistung/Delivery/Verim/h                 |               |   |    |
| Anlaufstromm/Starting current/Giris akimi       | A             |   |    |
| Widerstand/Resistance/Rezistans Ha/Hi/aux.      | Ohm           |   |    |
| Temp.Reyler/Thermostat/Termostat                |               |   |    |
| Typ/Type/Tip                                    |               |   |    |
| Reglerstellung/Position/Termostat pozisyonu     |               |   |    |
| Schaltwerte/Acma kapama degerleri               | ..ein/acma °C |   |    |
| Valeurs de commutation/Termostat degeri         | ..aus"/kapama |   |    |
| (..abtaven' od)                                 | ..alarm'      |   |    |
| Füllmenge/Fill. quantily/ Dolum miktari         | R600a         | g | 98 |
| Anschlusswert/Comm. load/Giris gucu             | W             | * |    |
| Heizung/Heater/Rezistans                        | Ohm           |   |    |
| Widerstand/Resistance/Direnc                    | W             |   |    |
| Leistung/Power/Guc                              |               |   |    |
| Ventilador/Blower/Vantilatör                    | Ohm           |   |    |
| Widerstand/Resistance/Rezistans                 |               |   |    |
| Magnetventil/Magnetic valve/Manyetik valf       | Ohm           |   |    |
| Widerstand/Resistance/Rezistans                 | V             |   |    |
| Spannung/Voltage/Gerilim                        |               |   |    |
| Temp.Reyler/Thermostat/Termostat                |               |   |    |

\* Siehe Typenschild/Mamul etiketine bakiniz