


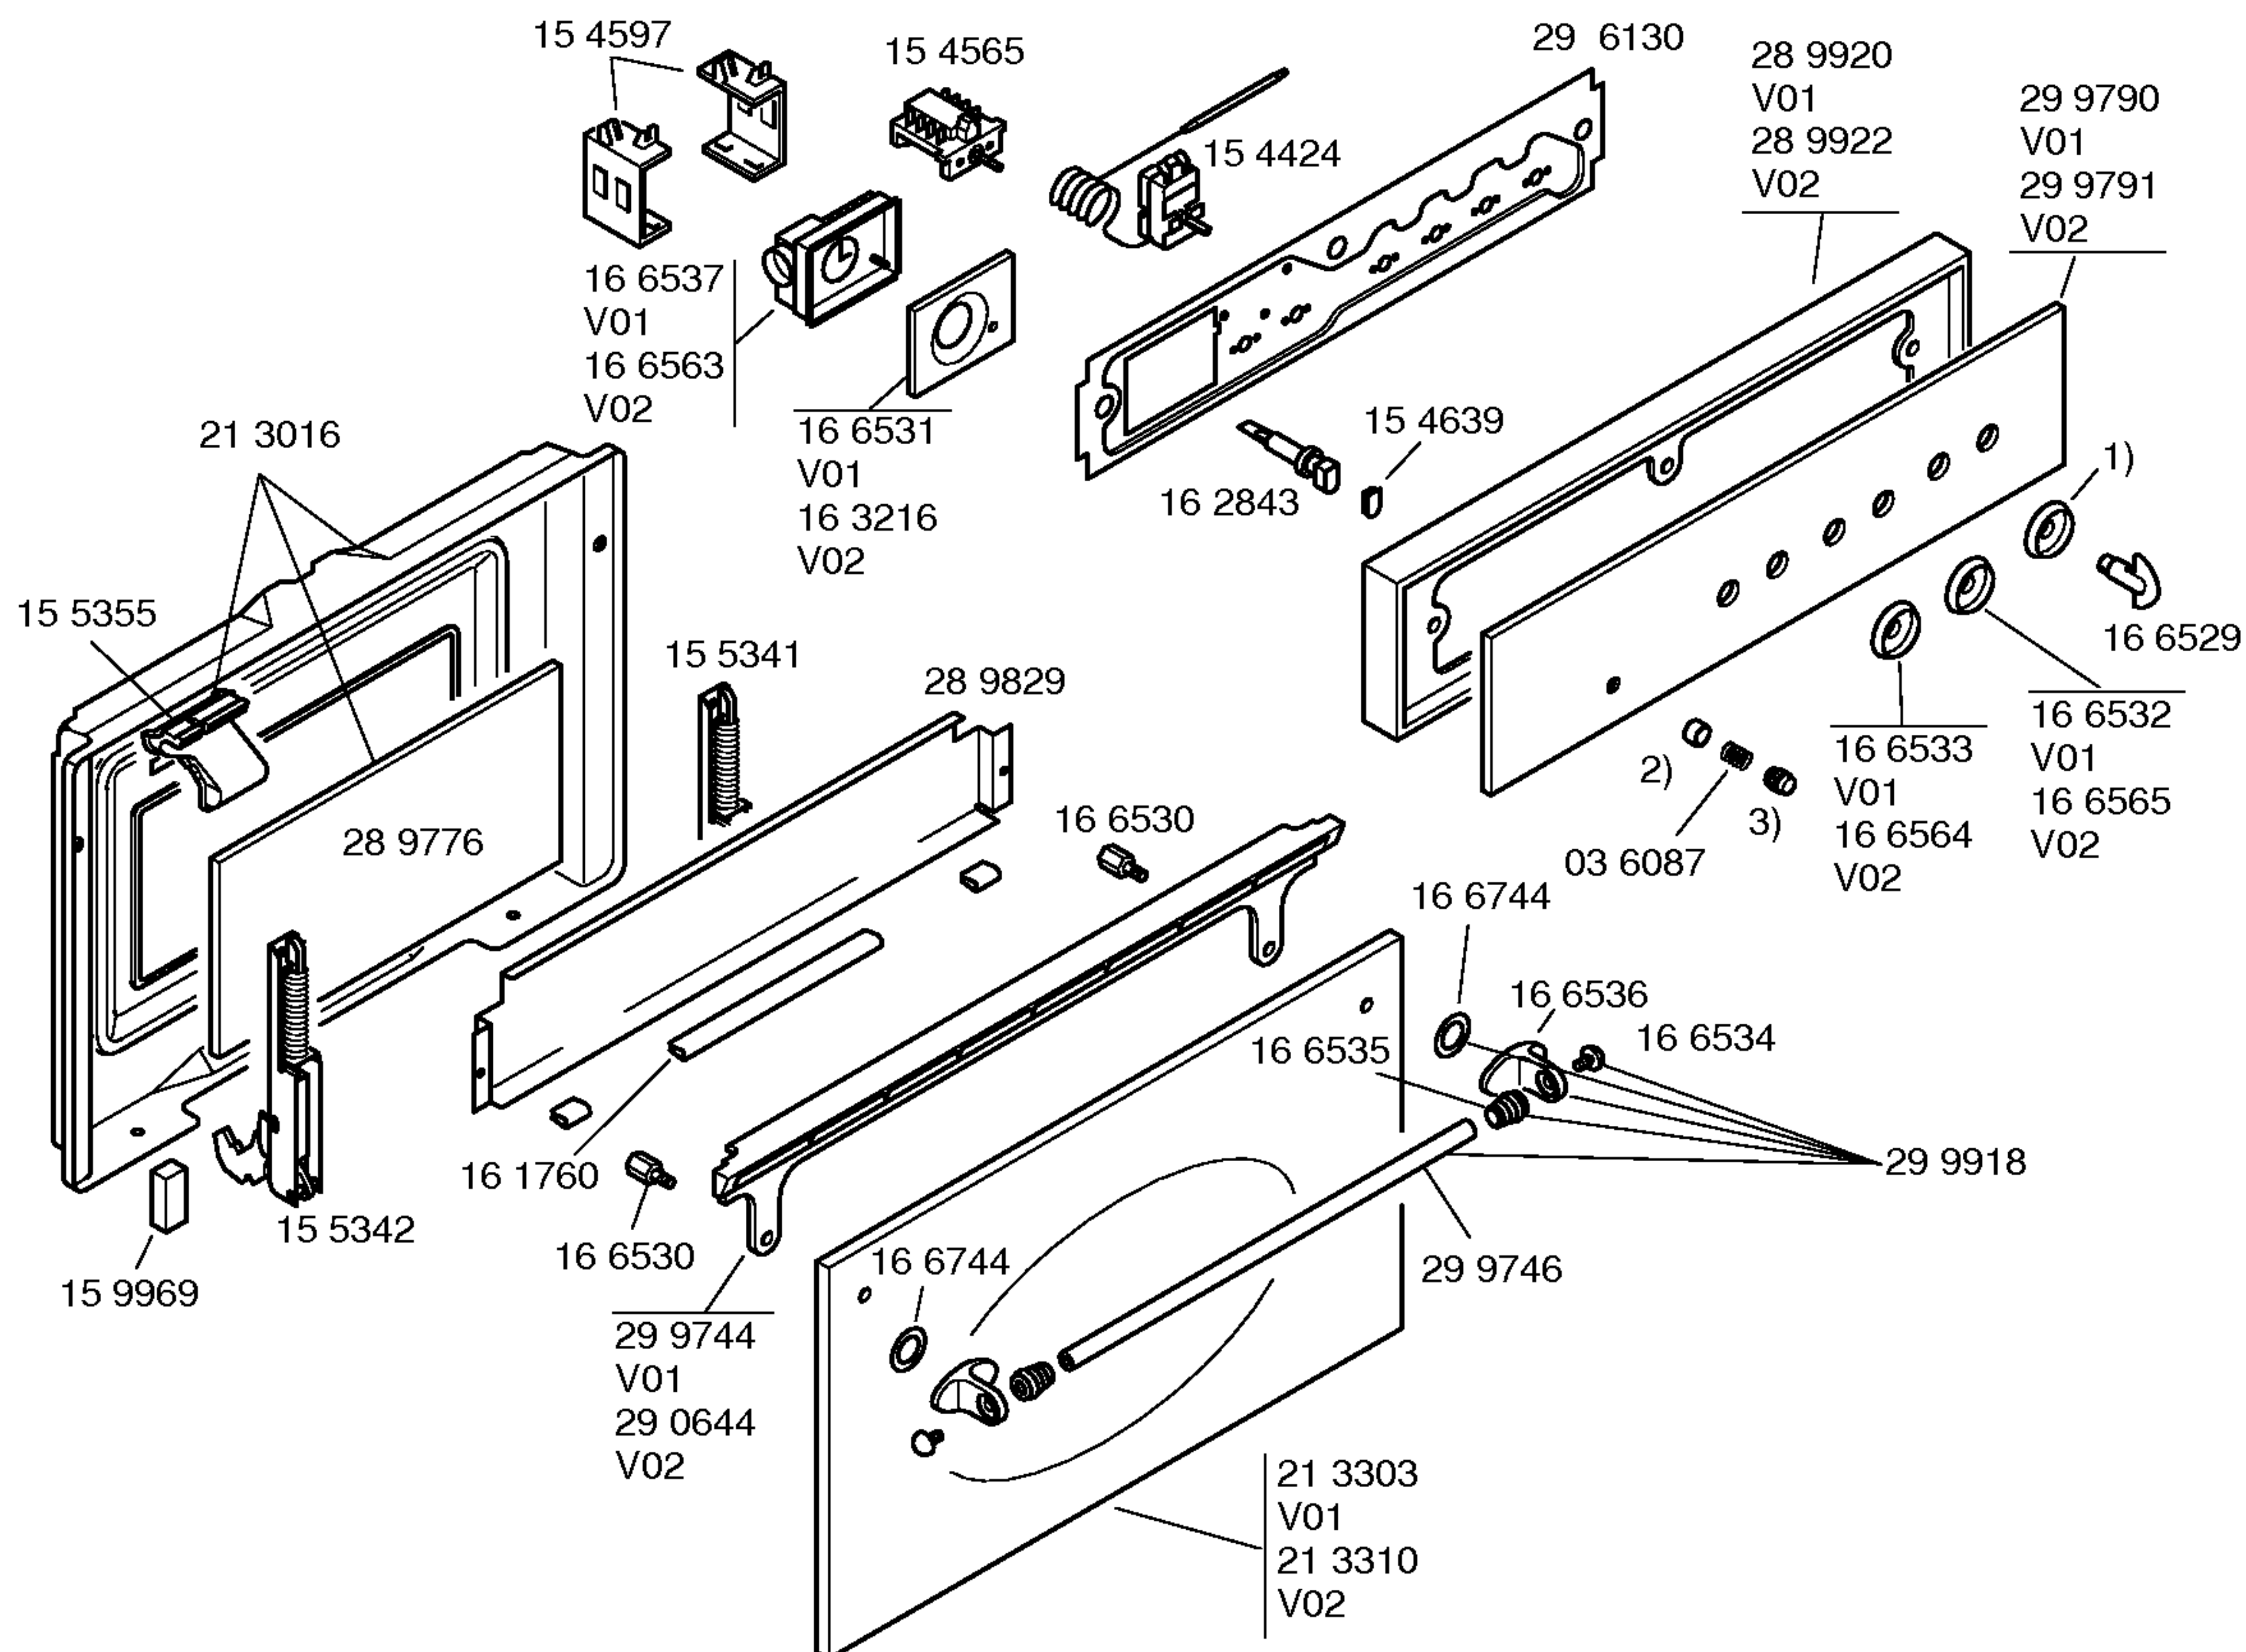

Libro de instrucciones
52 0342
(E,F,GB,P,NL)
Instrucciones de montaje
51 9827
(E,F,GB,P,NL)

1) 16 6570
V01, gas
16 6569
V01, eléctrico
16 6572
V02, gas
16 6571
V02, eléctrico

2) 16 6566

3) 16 3218
V01
16 3219
V02

