


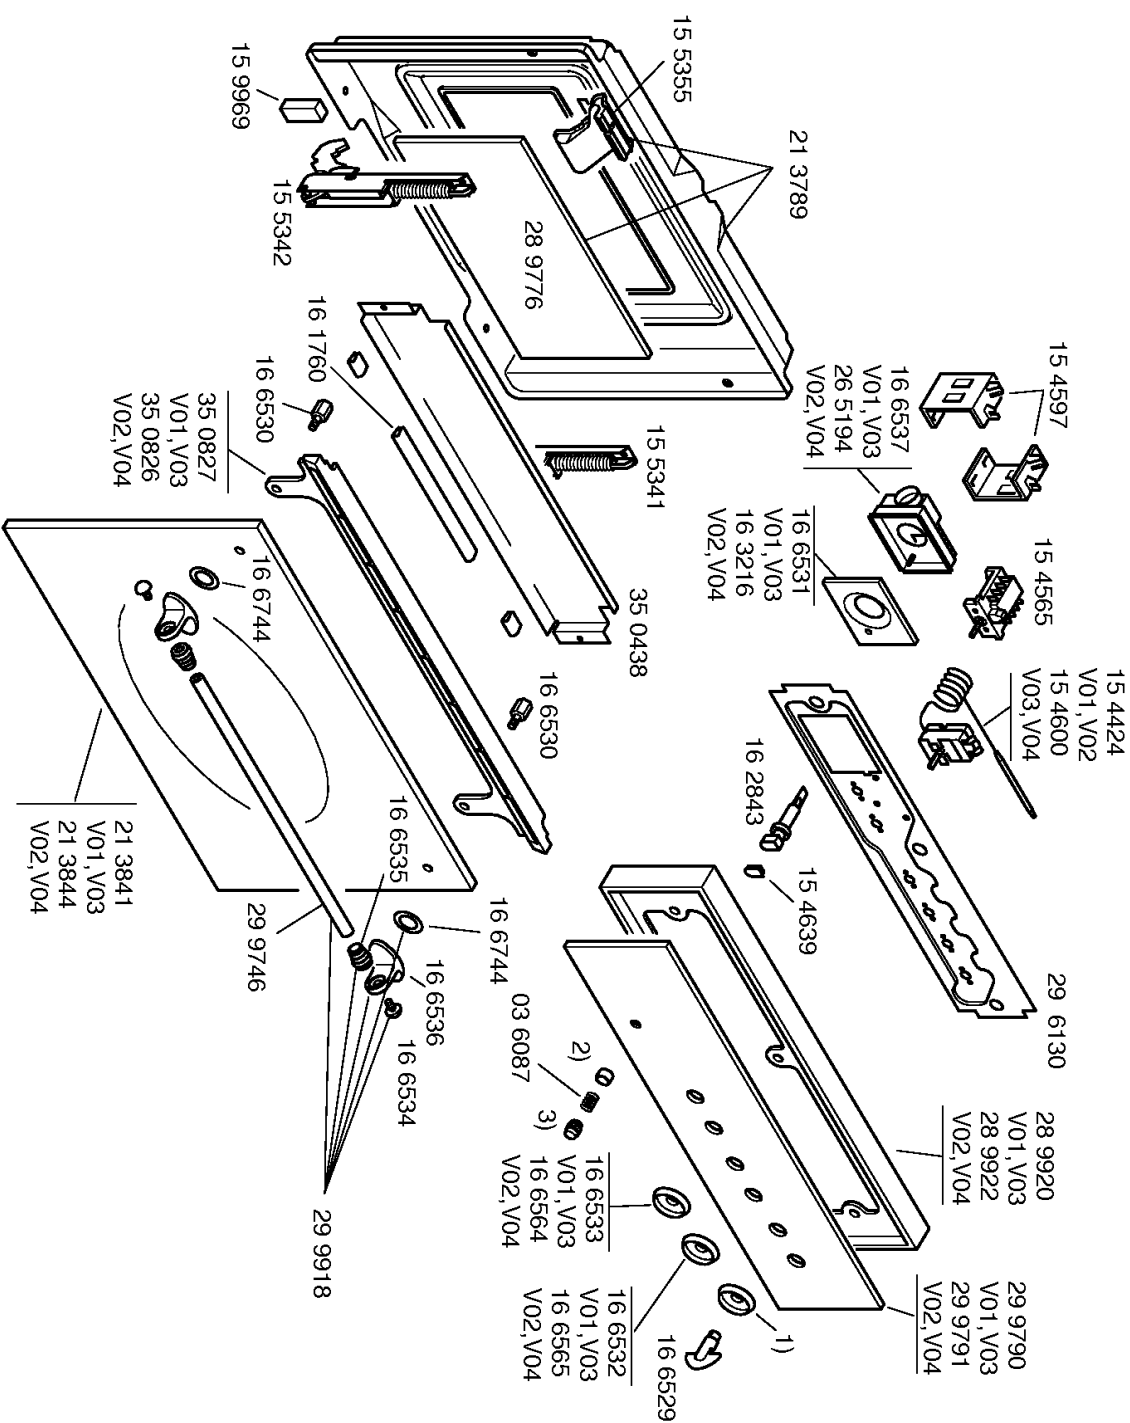

Libro de instrucciones

52 0342

(E, F, GB, P, NL)

Instrucciones de montaje

51 9827

(E, F, GB, P, NL)

1) 16 6570

V01, gas, V03

16 6569

V01, eléctrico, V03

16 6572

V02, gas, V04

16 6571

V02, eléctrico, V04

2) 16 6566

3) 16 3218

V01, V03

16 3219

V02, V04

