


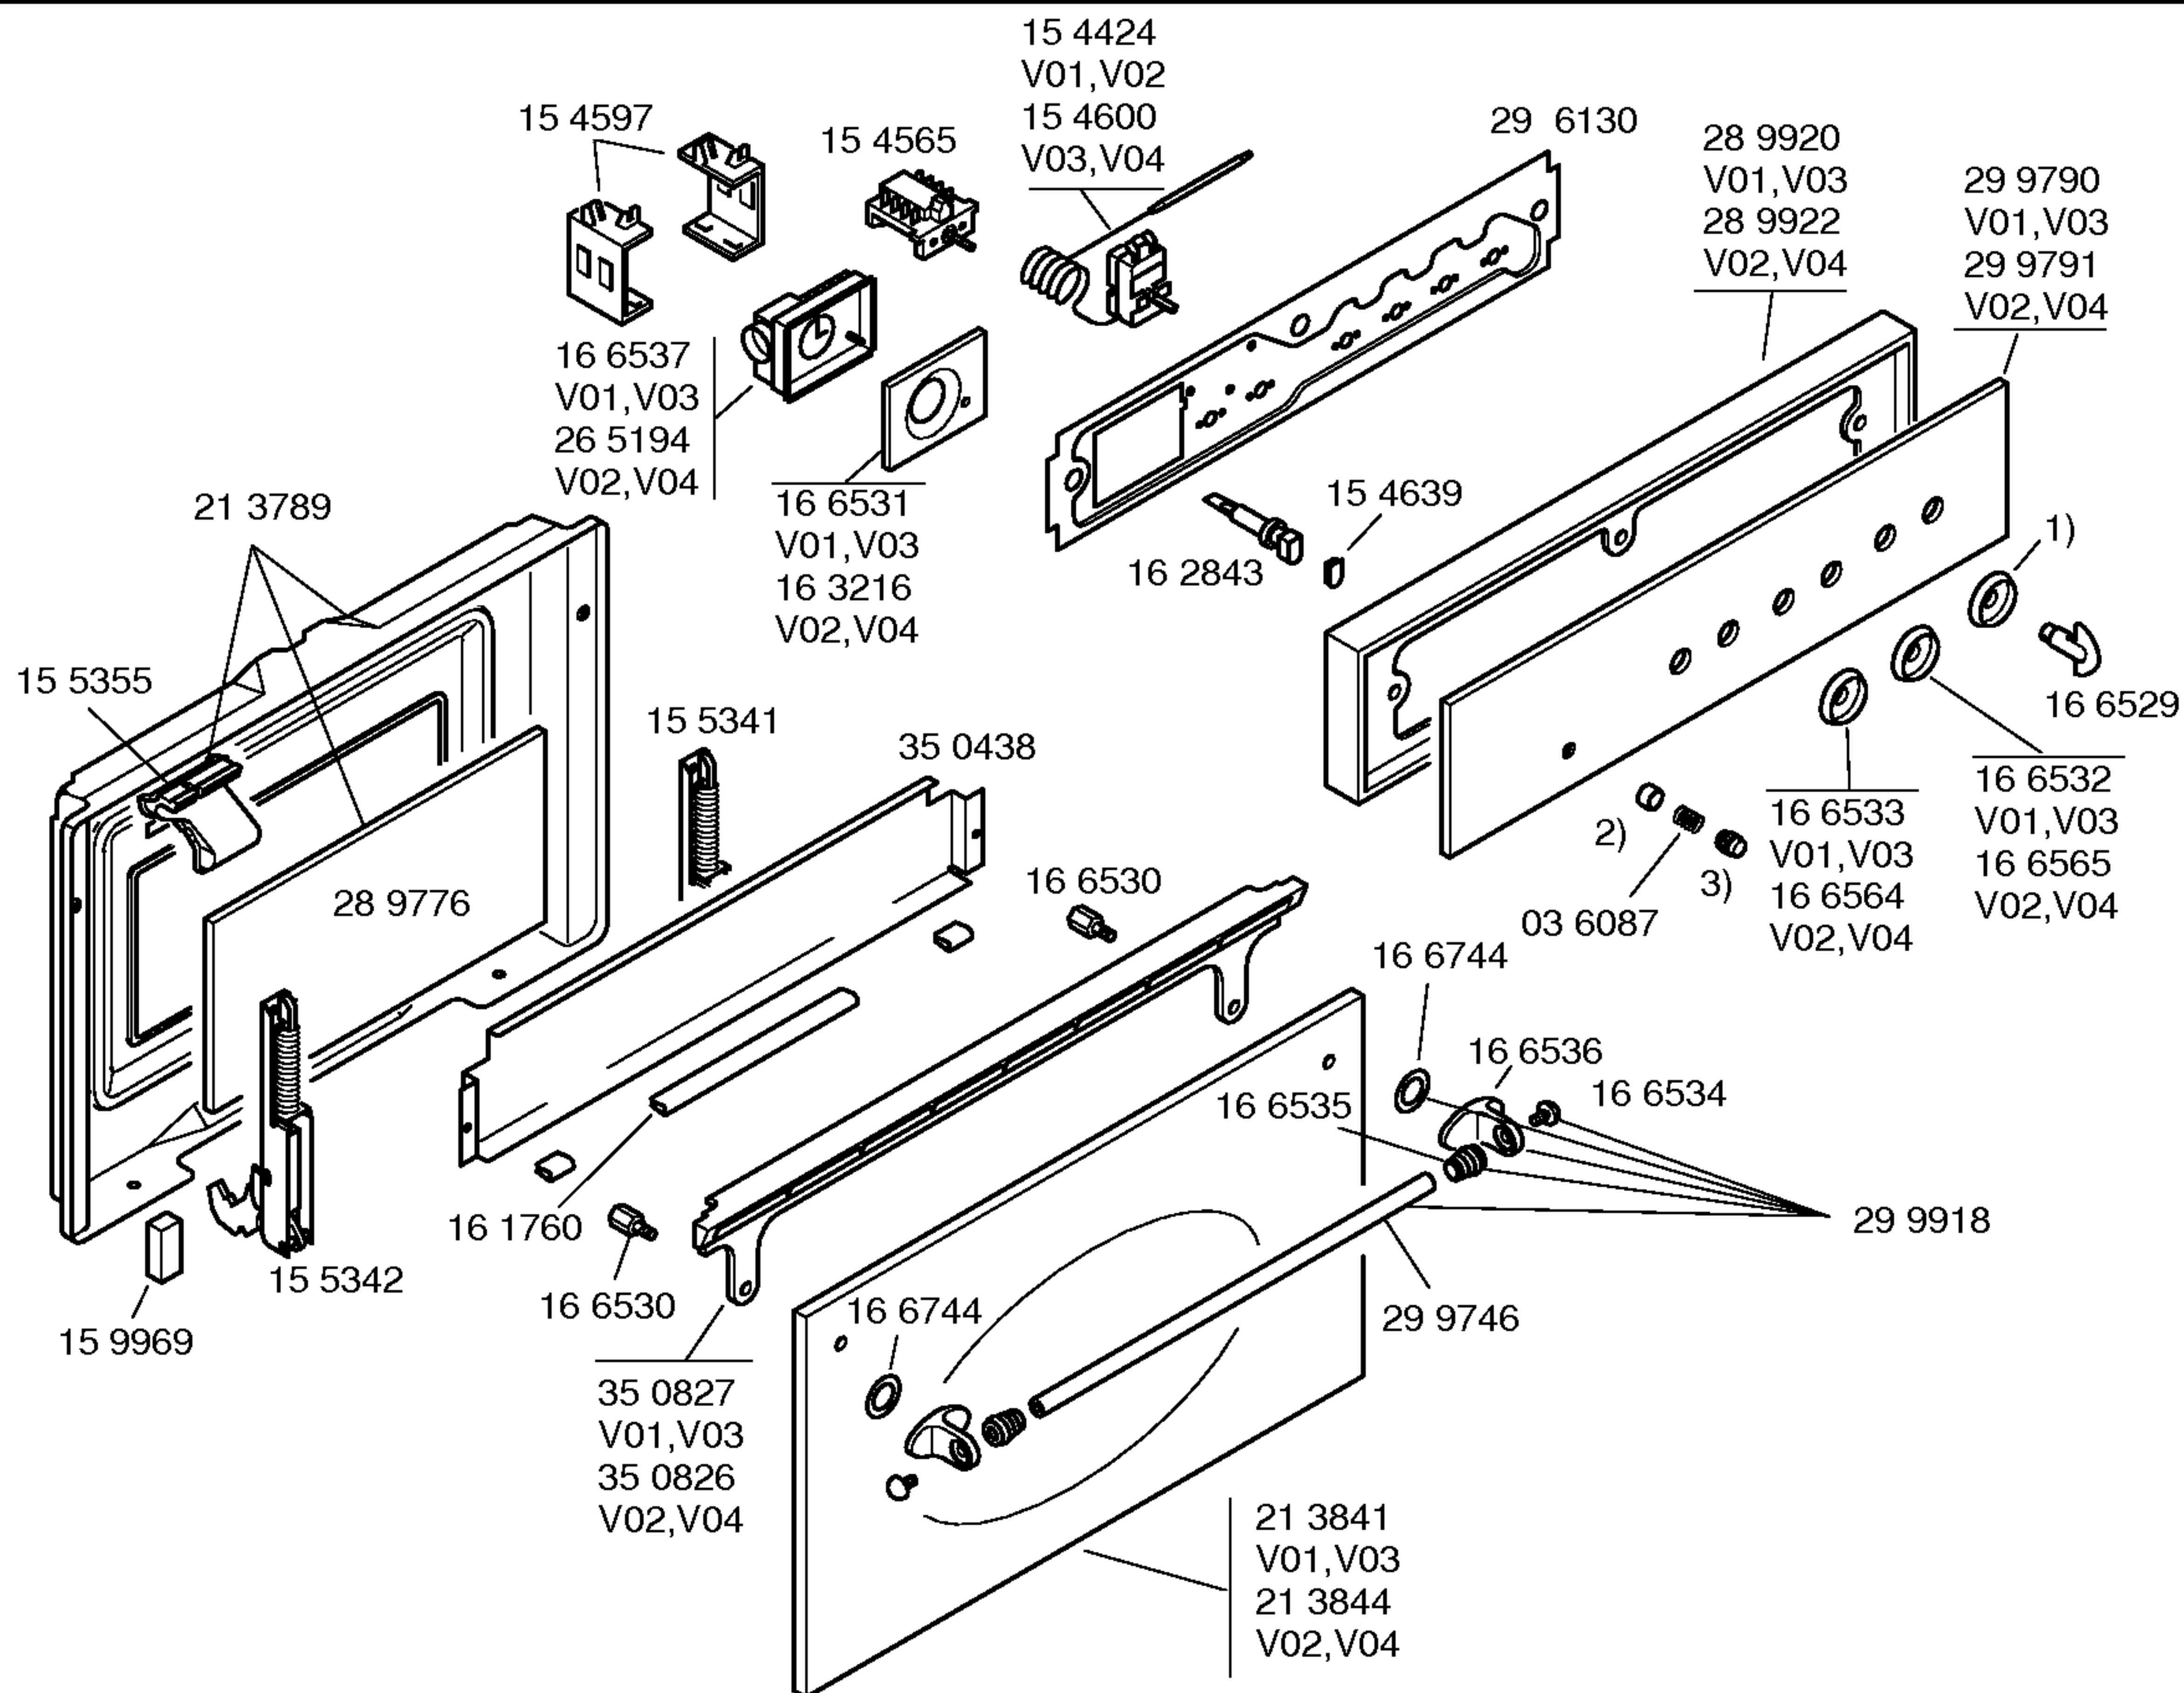

Libro de instrucciones
52 0342
(E,F,GB,P,NL)
Instrucciones de montaje
51 9827
(E,F,GB,P,NL)

1) 16 6570
V01, gas,V03
16 6569
V01, eléctrico,V03
16 6572
V02, gas,V04
16 6571
V02, eléctrico,V04

2) 16 6566

3) 16 3218
V01,V03
16 3219
V02,V04

