



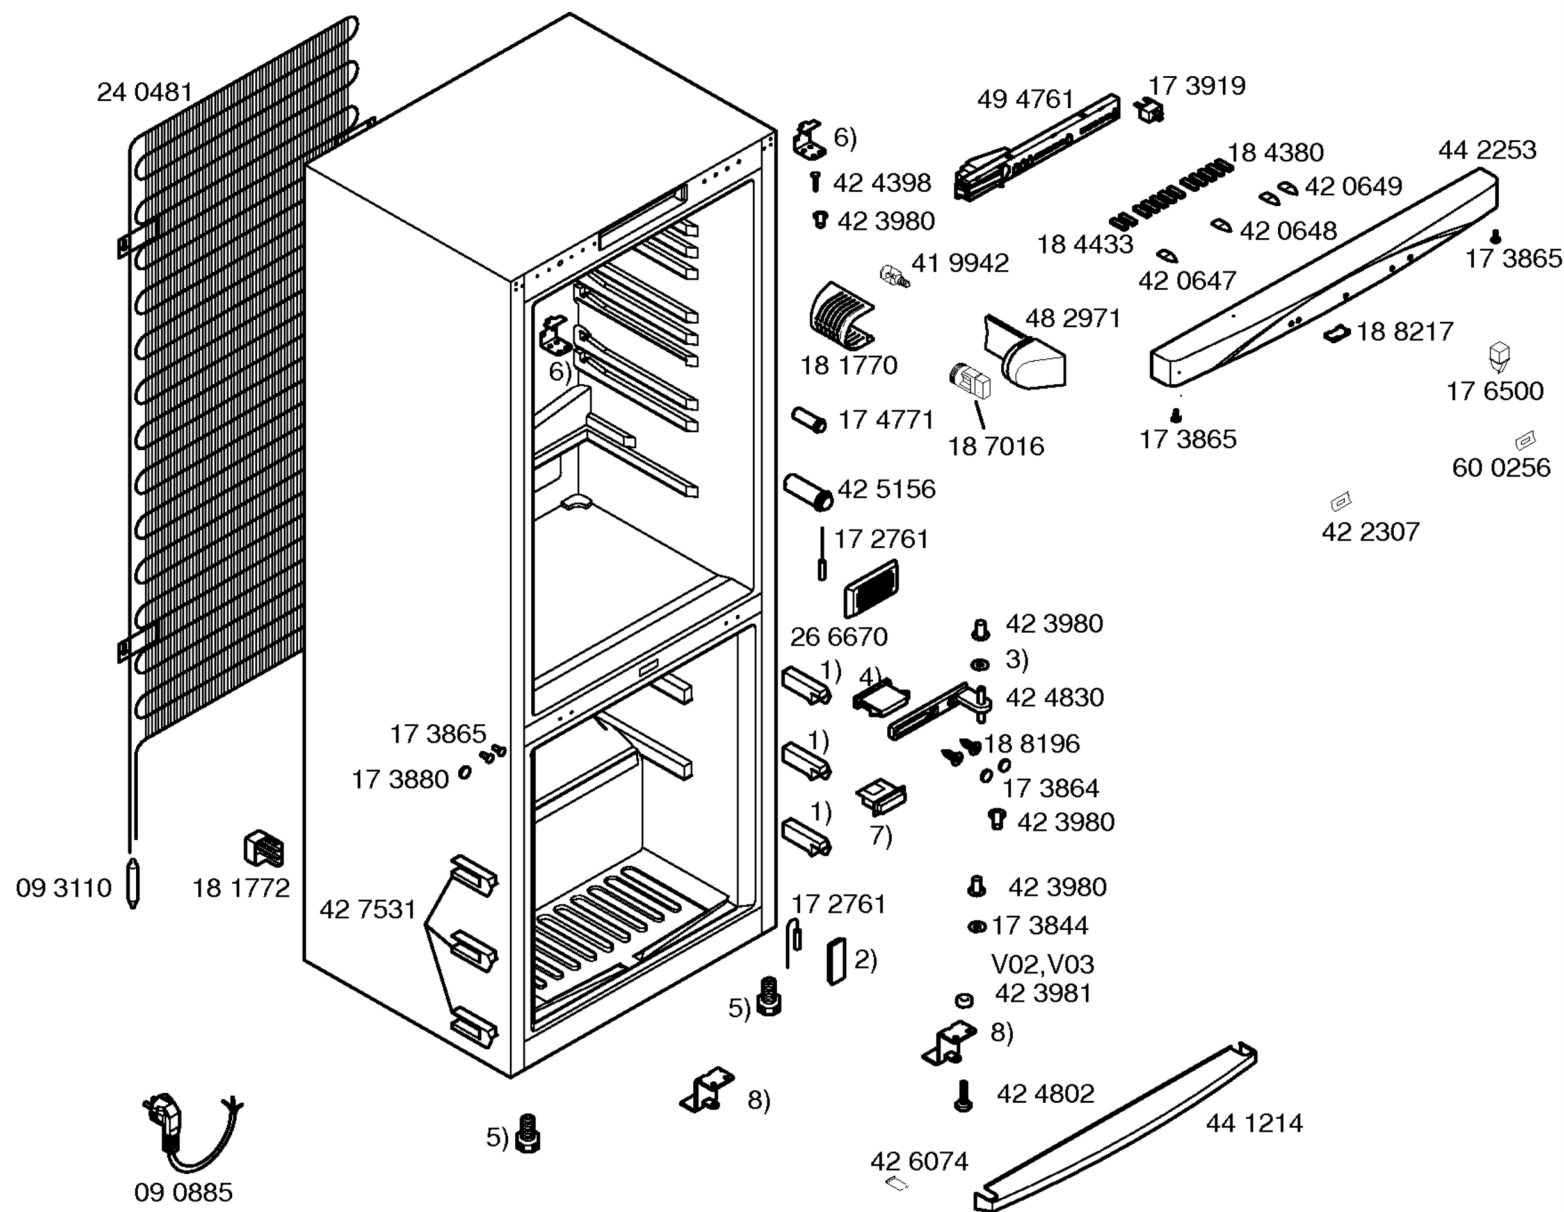



Gebrauchsanweisung
59 1422
(ES,PT)

- 1) 17 2579
V01
42 7532
V02,V03
- 2) 17 2293
- 3) 17 3844
- 4) 41 8165
- 5) 42 4340
- 6) 17 1312
- 7) 41 8381
- 8) 42 4801
V01
42 8184
V02,V03

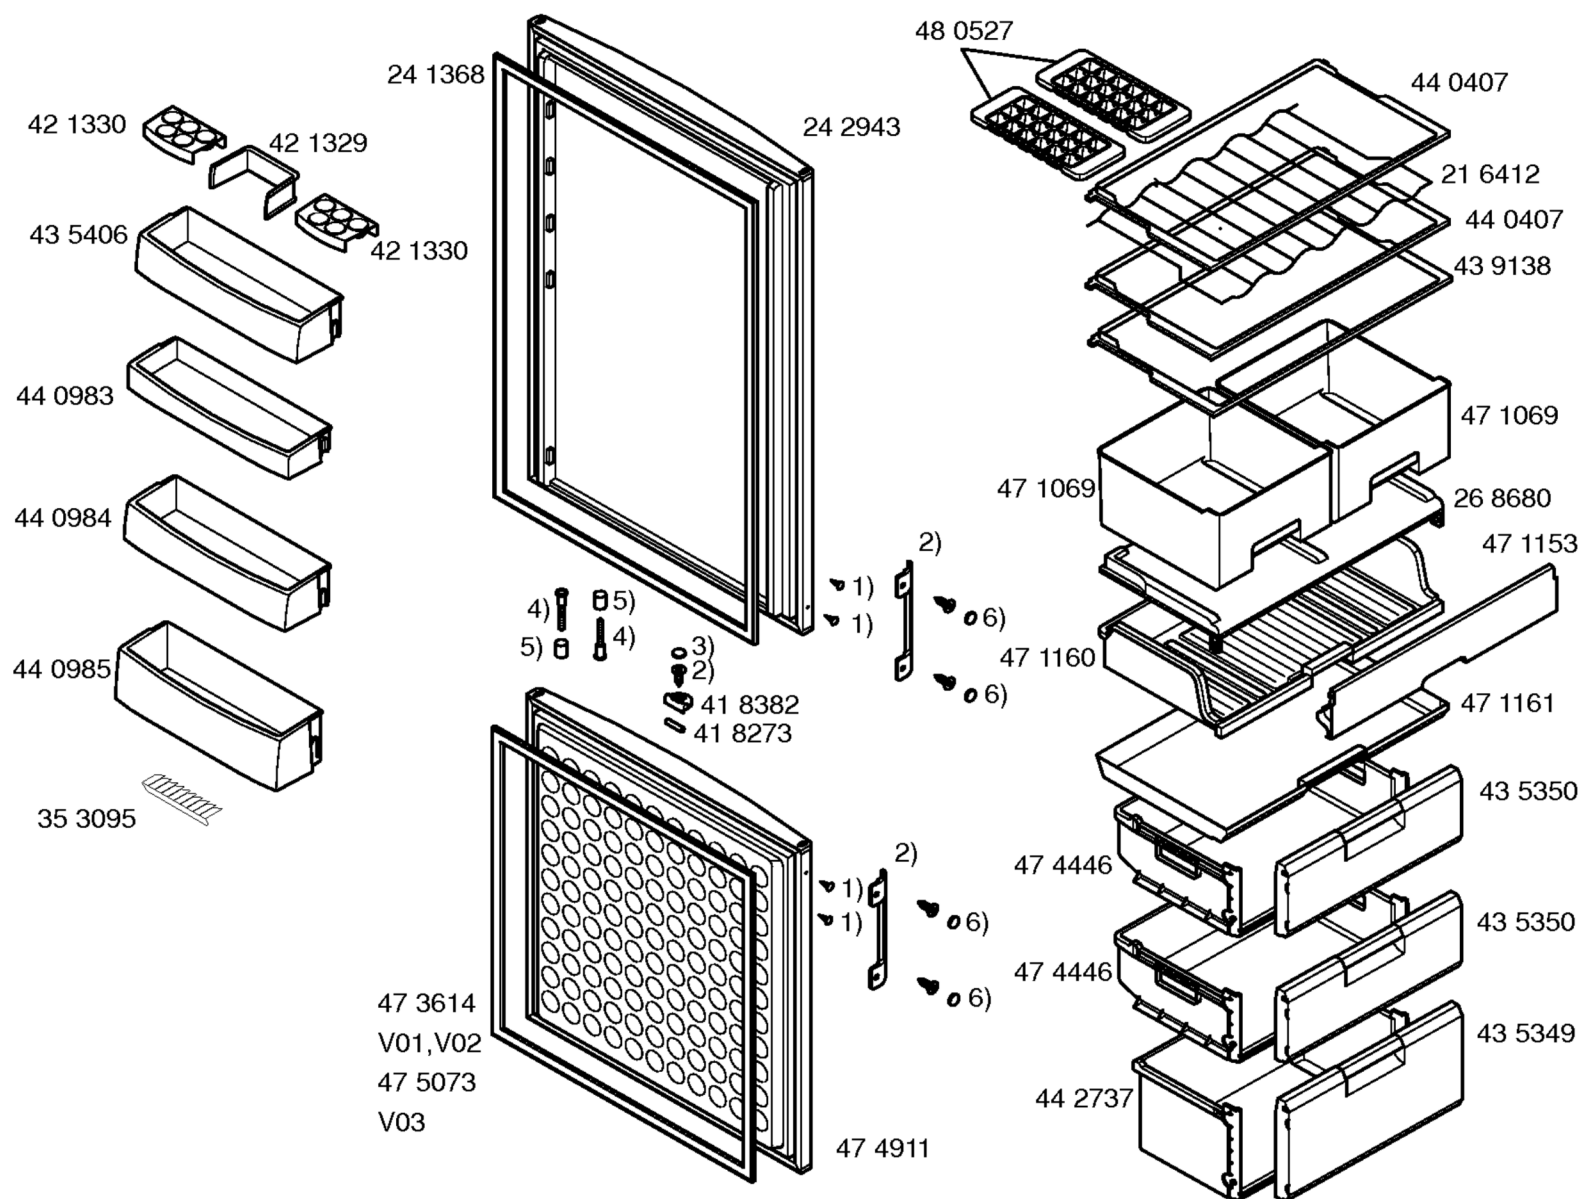

- | | |
|----|---------|
| 1) | 17 3861 |
| 2) | 44 0398 |
| | V01,V02 |
| | 49 2438 |
| | V03 |
| 3) | 17 3880 |
| 4) | 18 8194 |
| 5) | 18 8187 |
| 6) | 17 3880 |
| | V01,V02 |

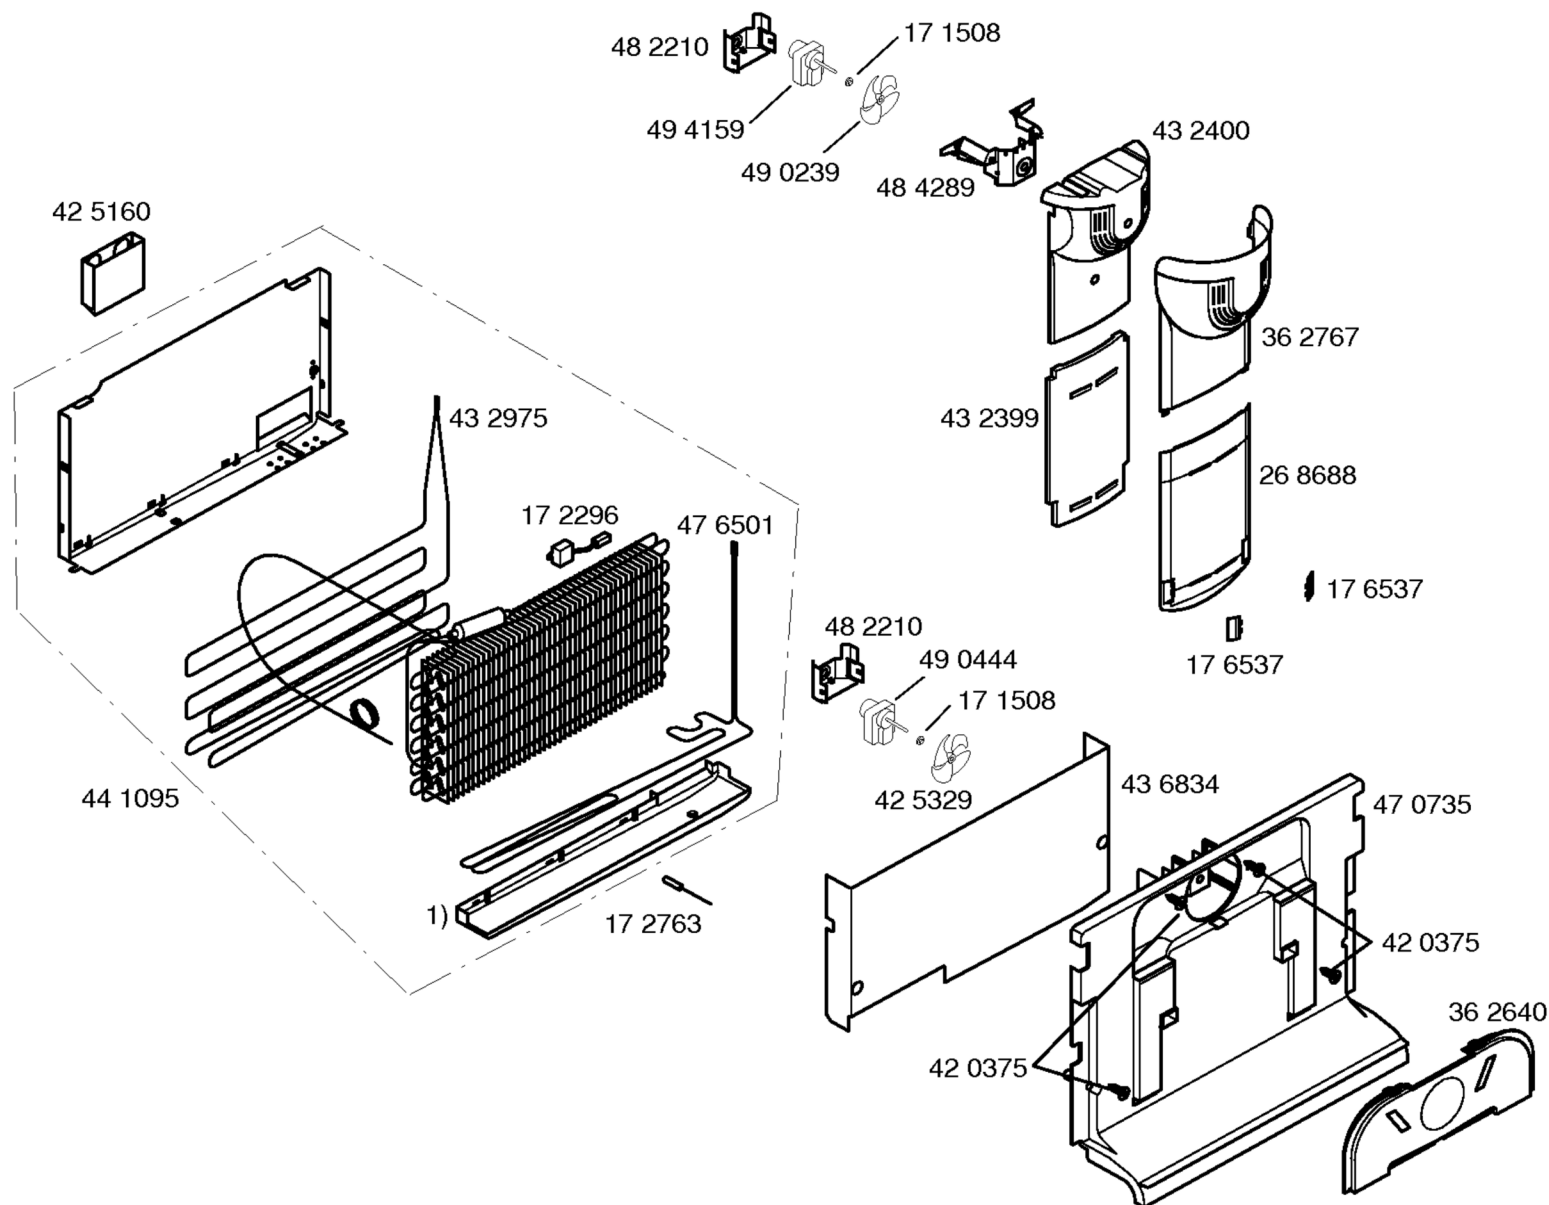

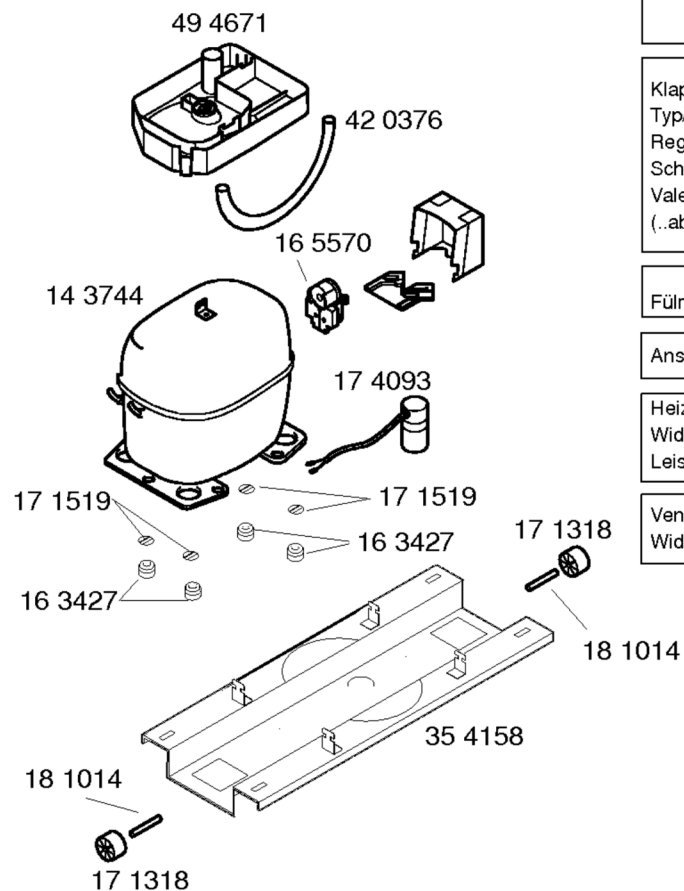

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor
Typ/Type/Tipo
Förderleistung/Delivery/Debit/Aspiración l/h
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm
Hi/aux.

Danfoss
NLX15KK

Klappe Therm./Thermostat/Termostat
Typ/Type/Tipo
Reglerstellung/Position/Conexión
Schaltwerte/Switching values/ ..ein/conex.°C
Valeurs de commutation/Desconex. ..aus"/descon.
(..abtaven' od) ..alarm'

Füllmenge/Fill. quantity/Charge/Carga R600

g

45

Anschlusswert/Comm. load/Puiss. Connect./Potenc.

W

Heizung/Heater/Chaufrage/Resistenc.descong.
Widerstand/Resistance/Resistencia
Leistung/Power/Puissance/Potencia

KW
W

Ventilador/Blower/Ventilateur/Ventilador
Widerstand/Resistance/Resistencia

KW