



Instrucciones de uso 52 9636 (es) 52 9637 (pt) 58 0576 (en,fr,de) 58 0577 (ca,eu,ga)

Tabla de programas 18 4717 (es) 18 4718 (pt)

1) 36 3363

Tapa metalica – VDE 21 5174











