




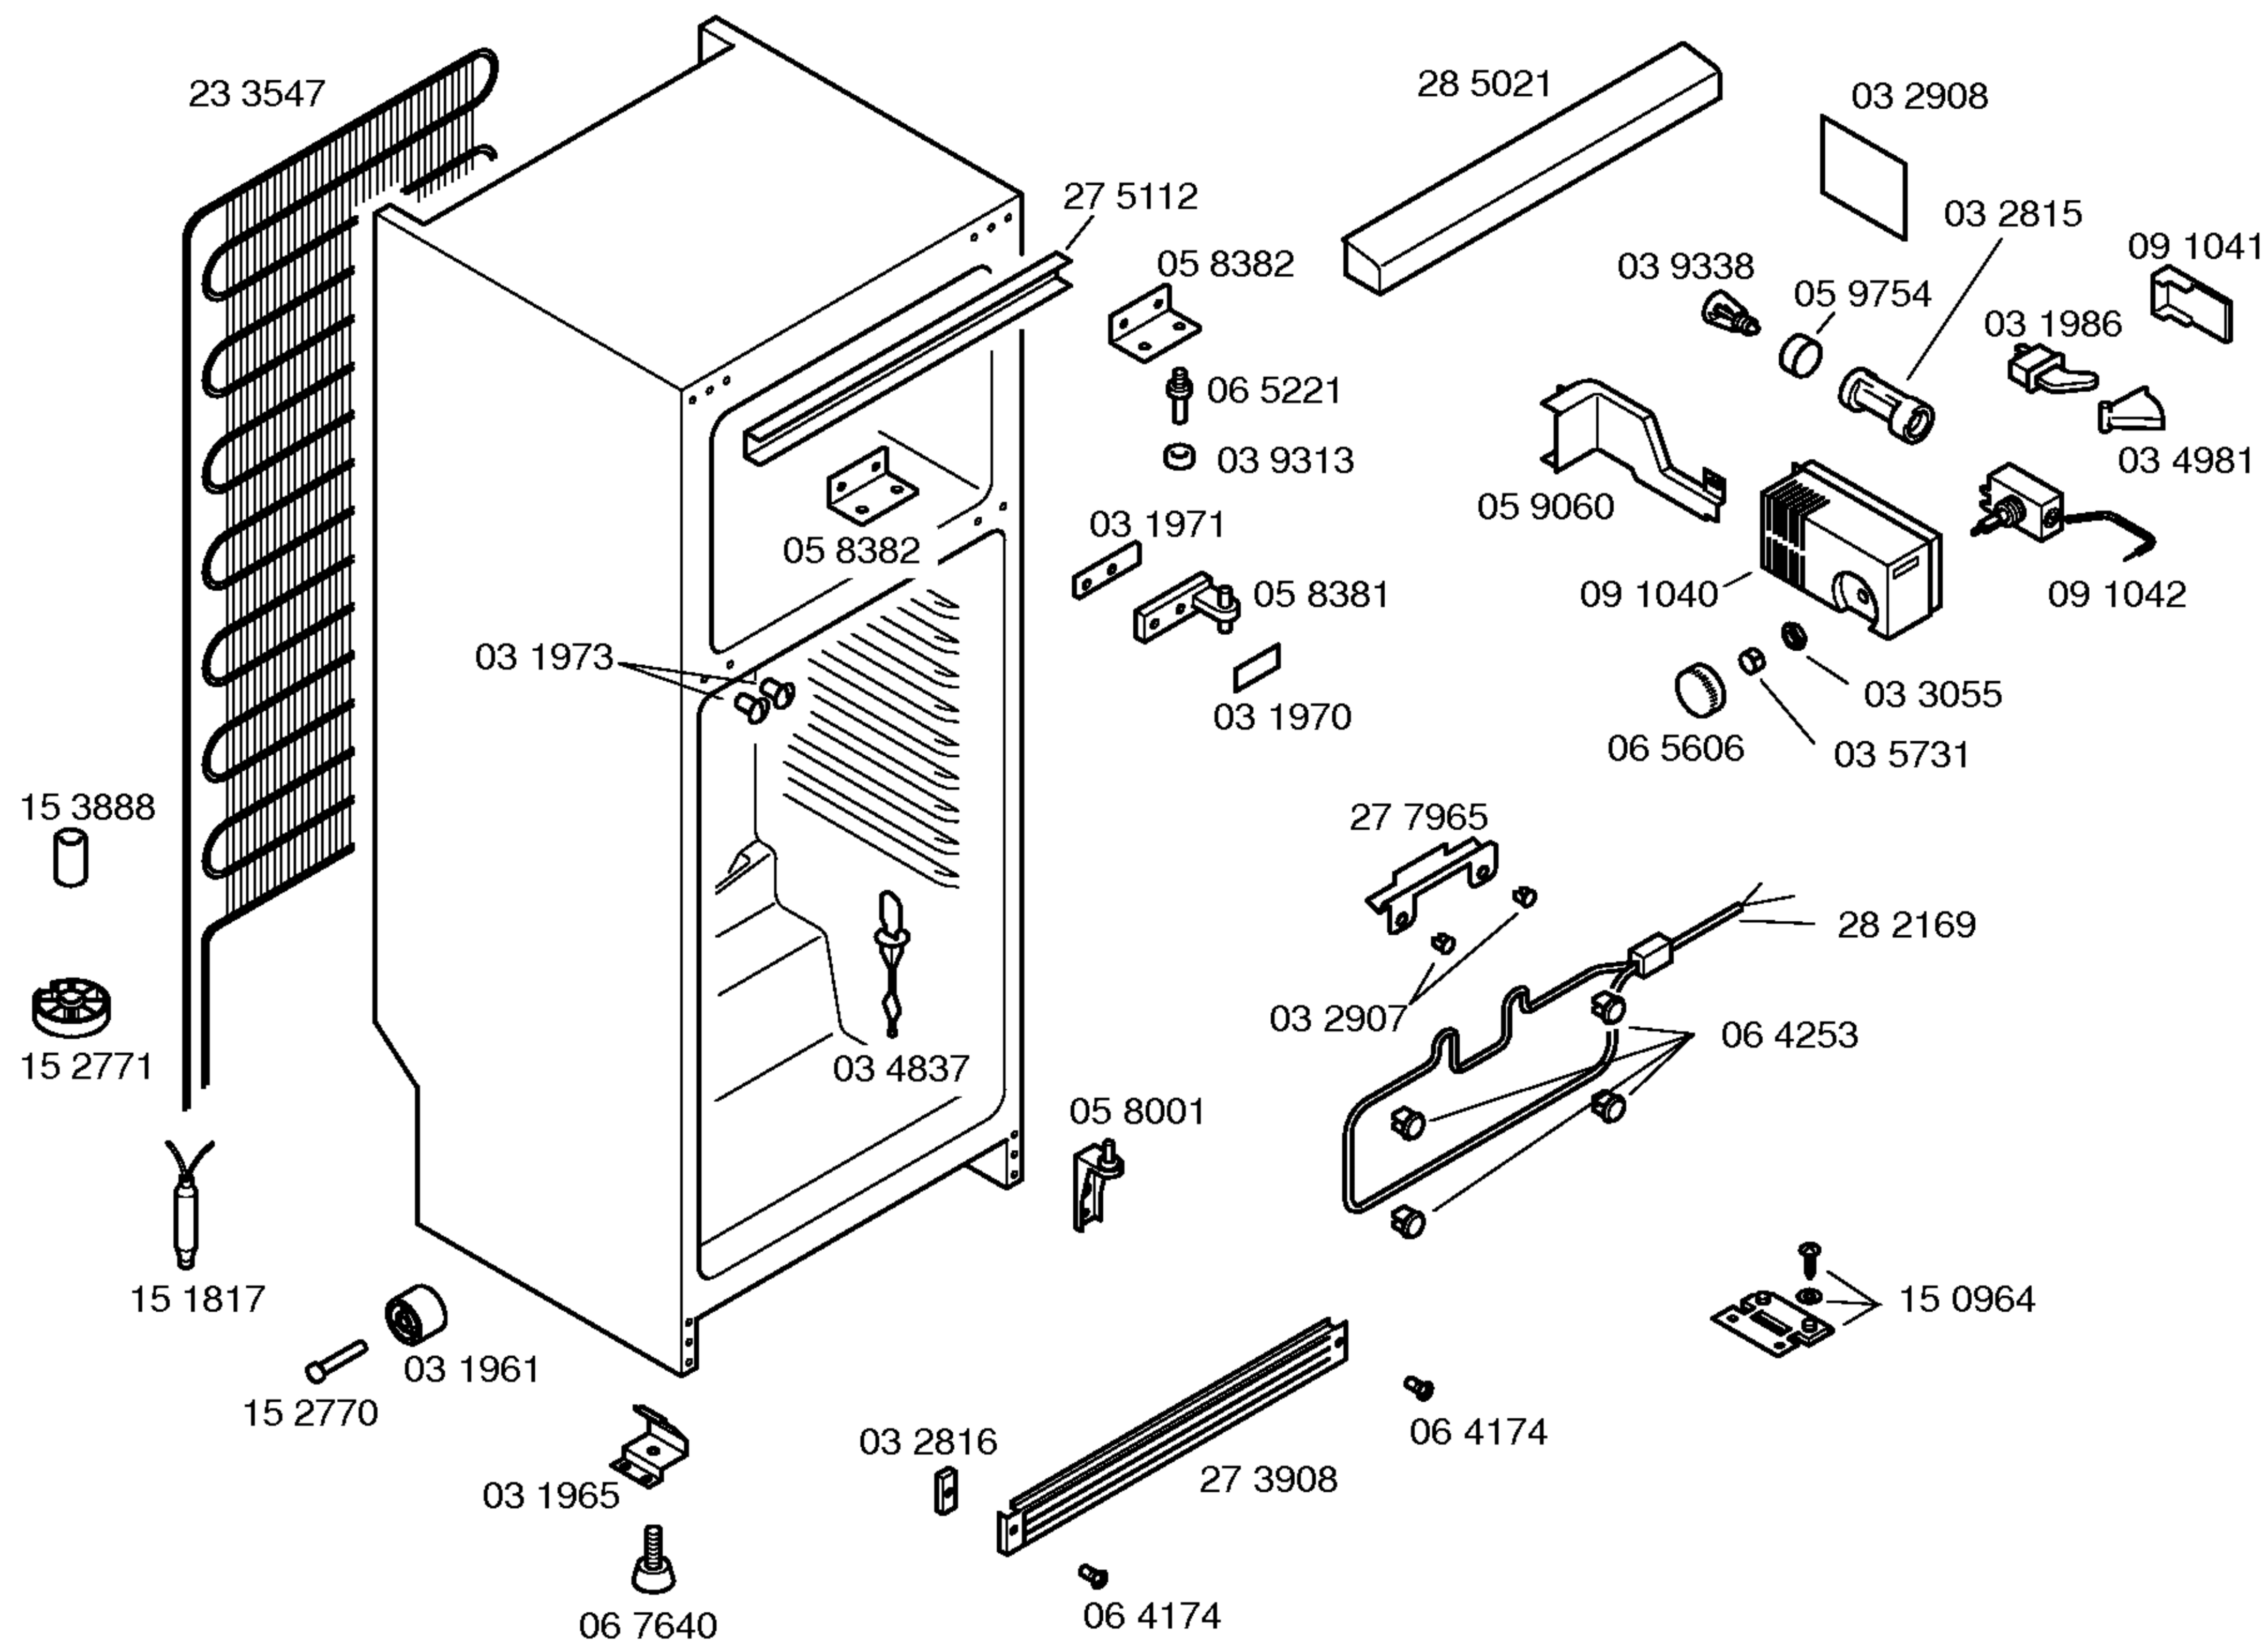

Libro de instrucciones
51 5200
(E, P, GB, F, NL, GR)

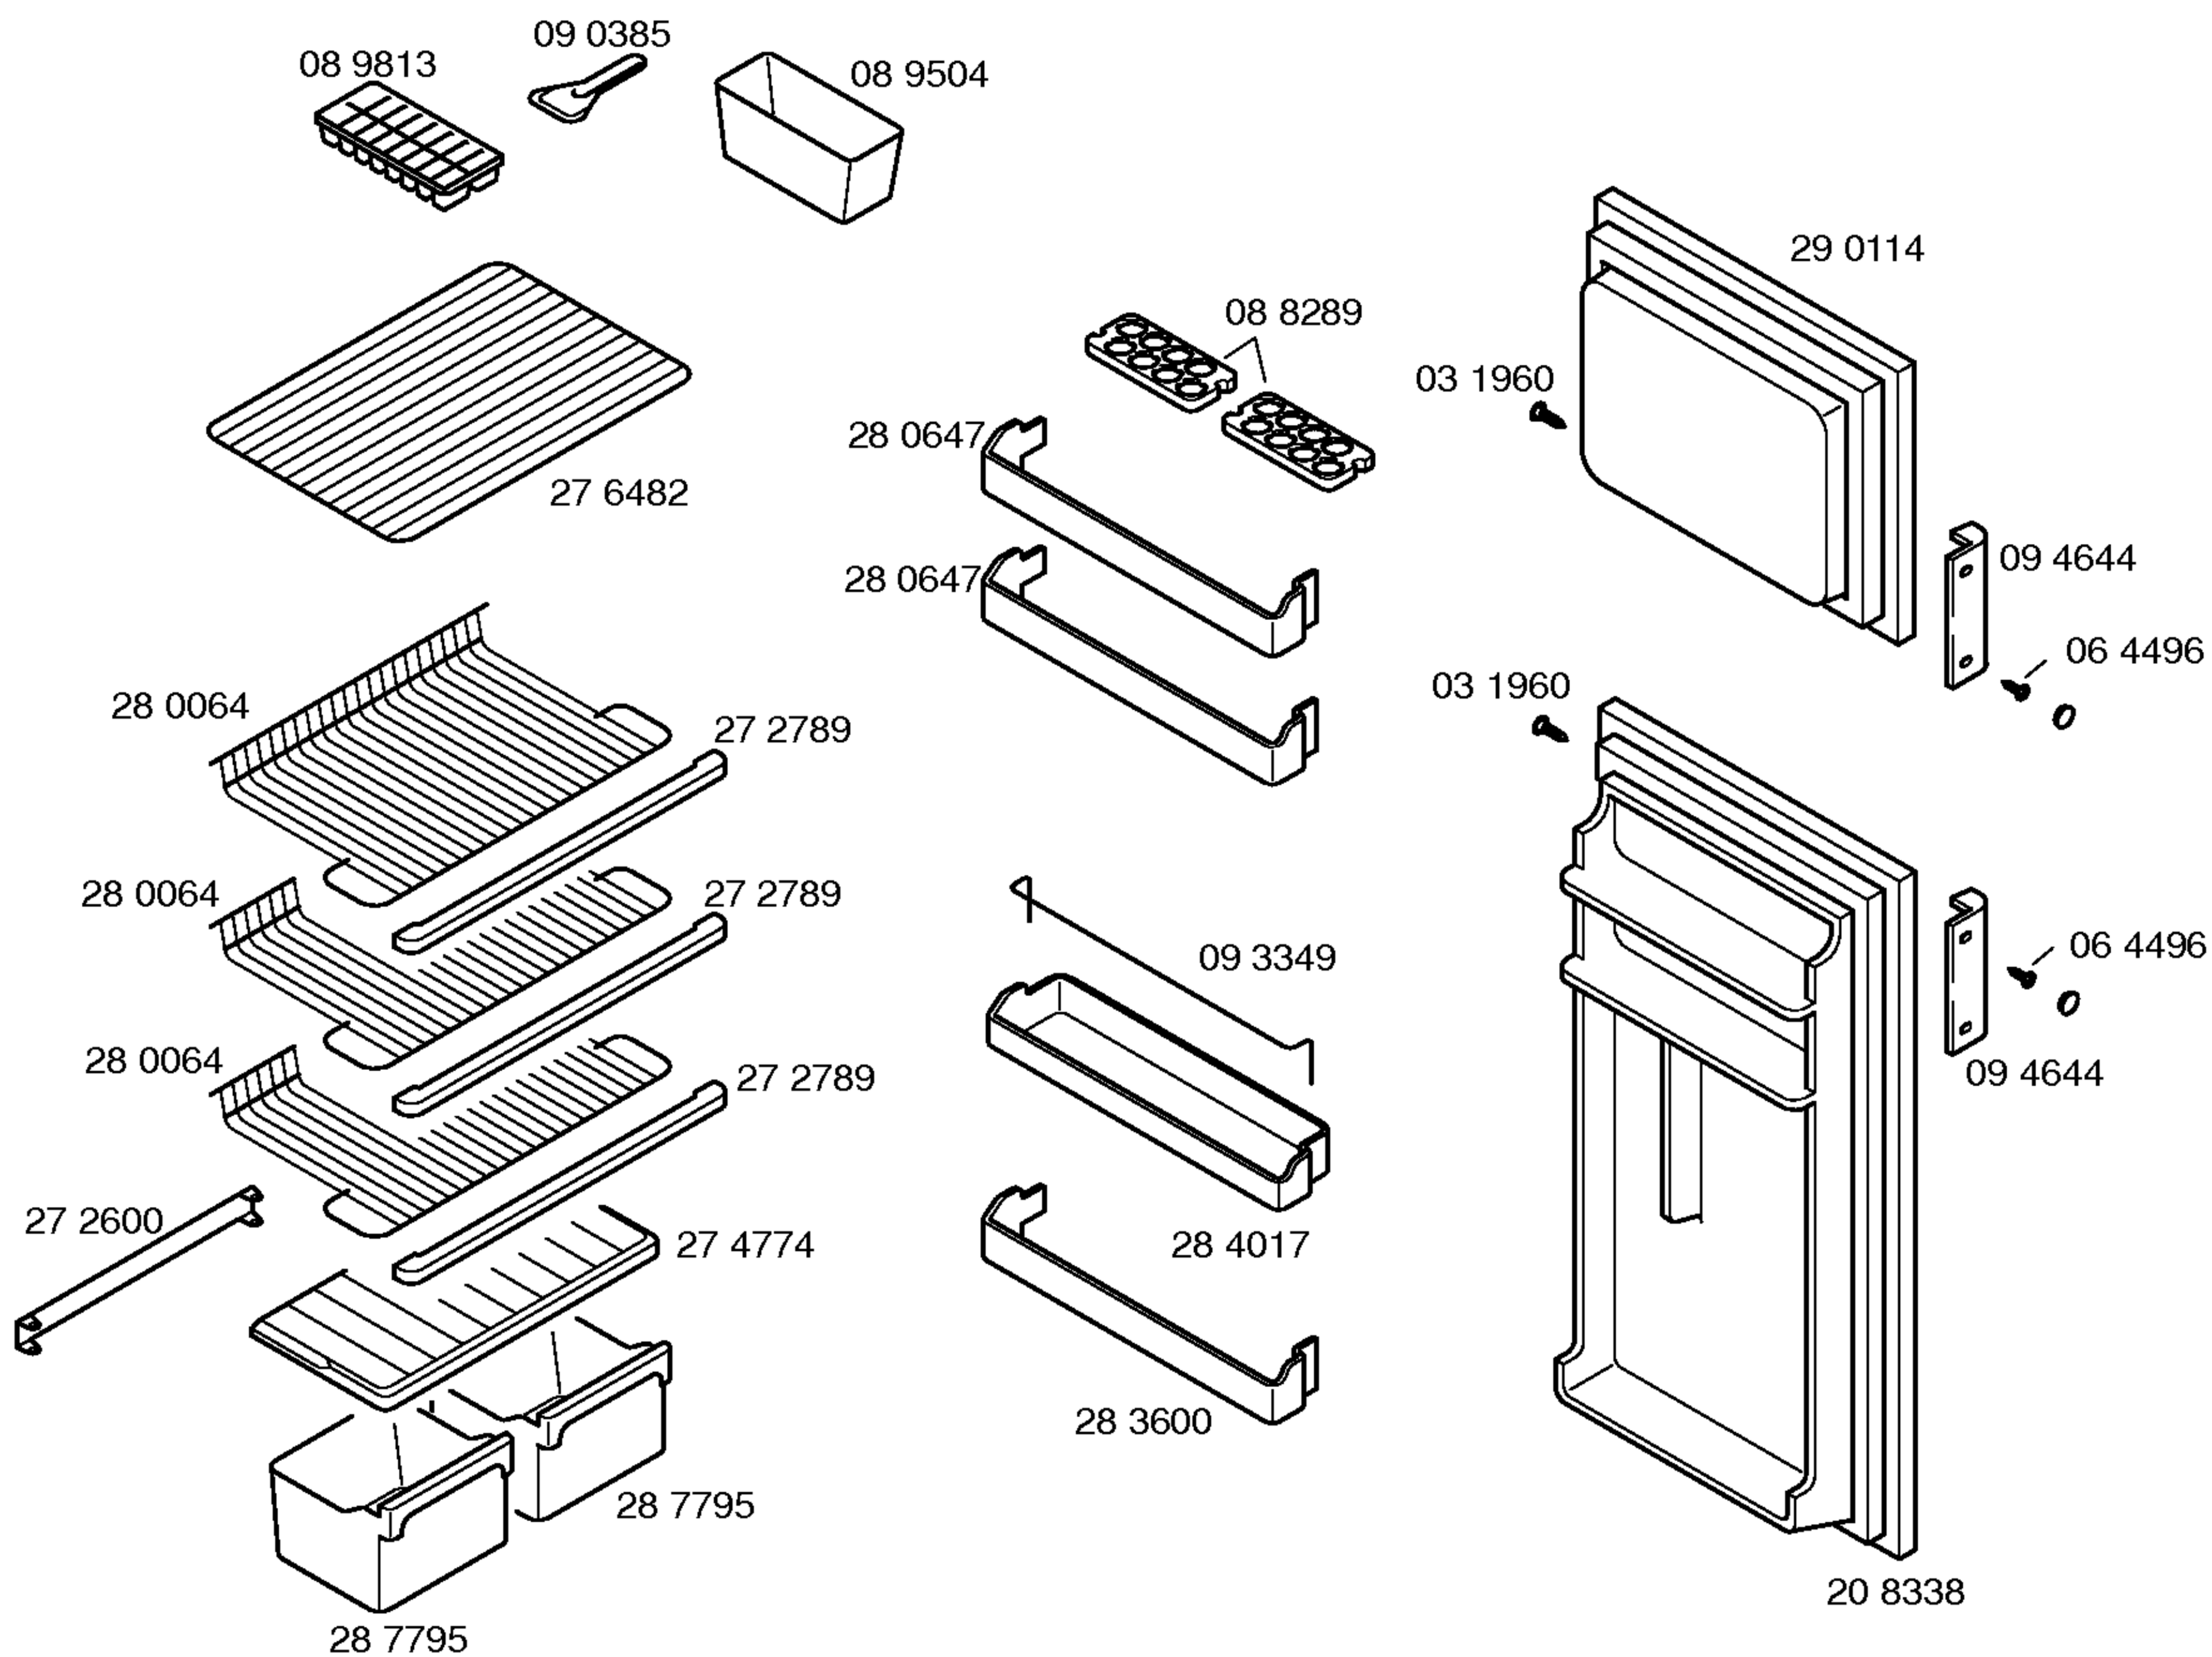

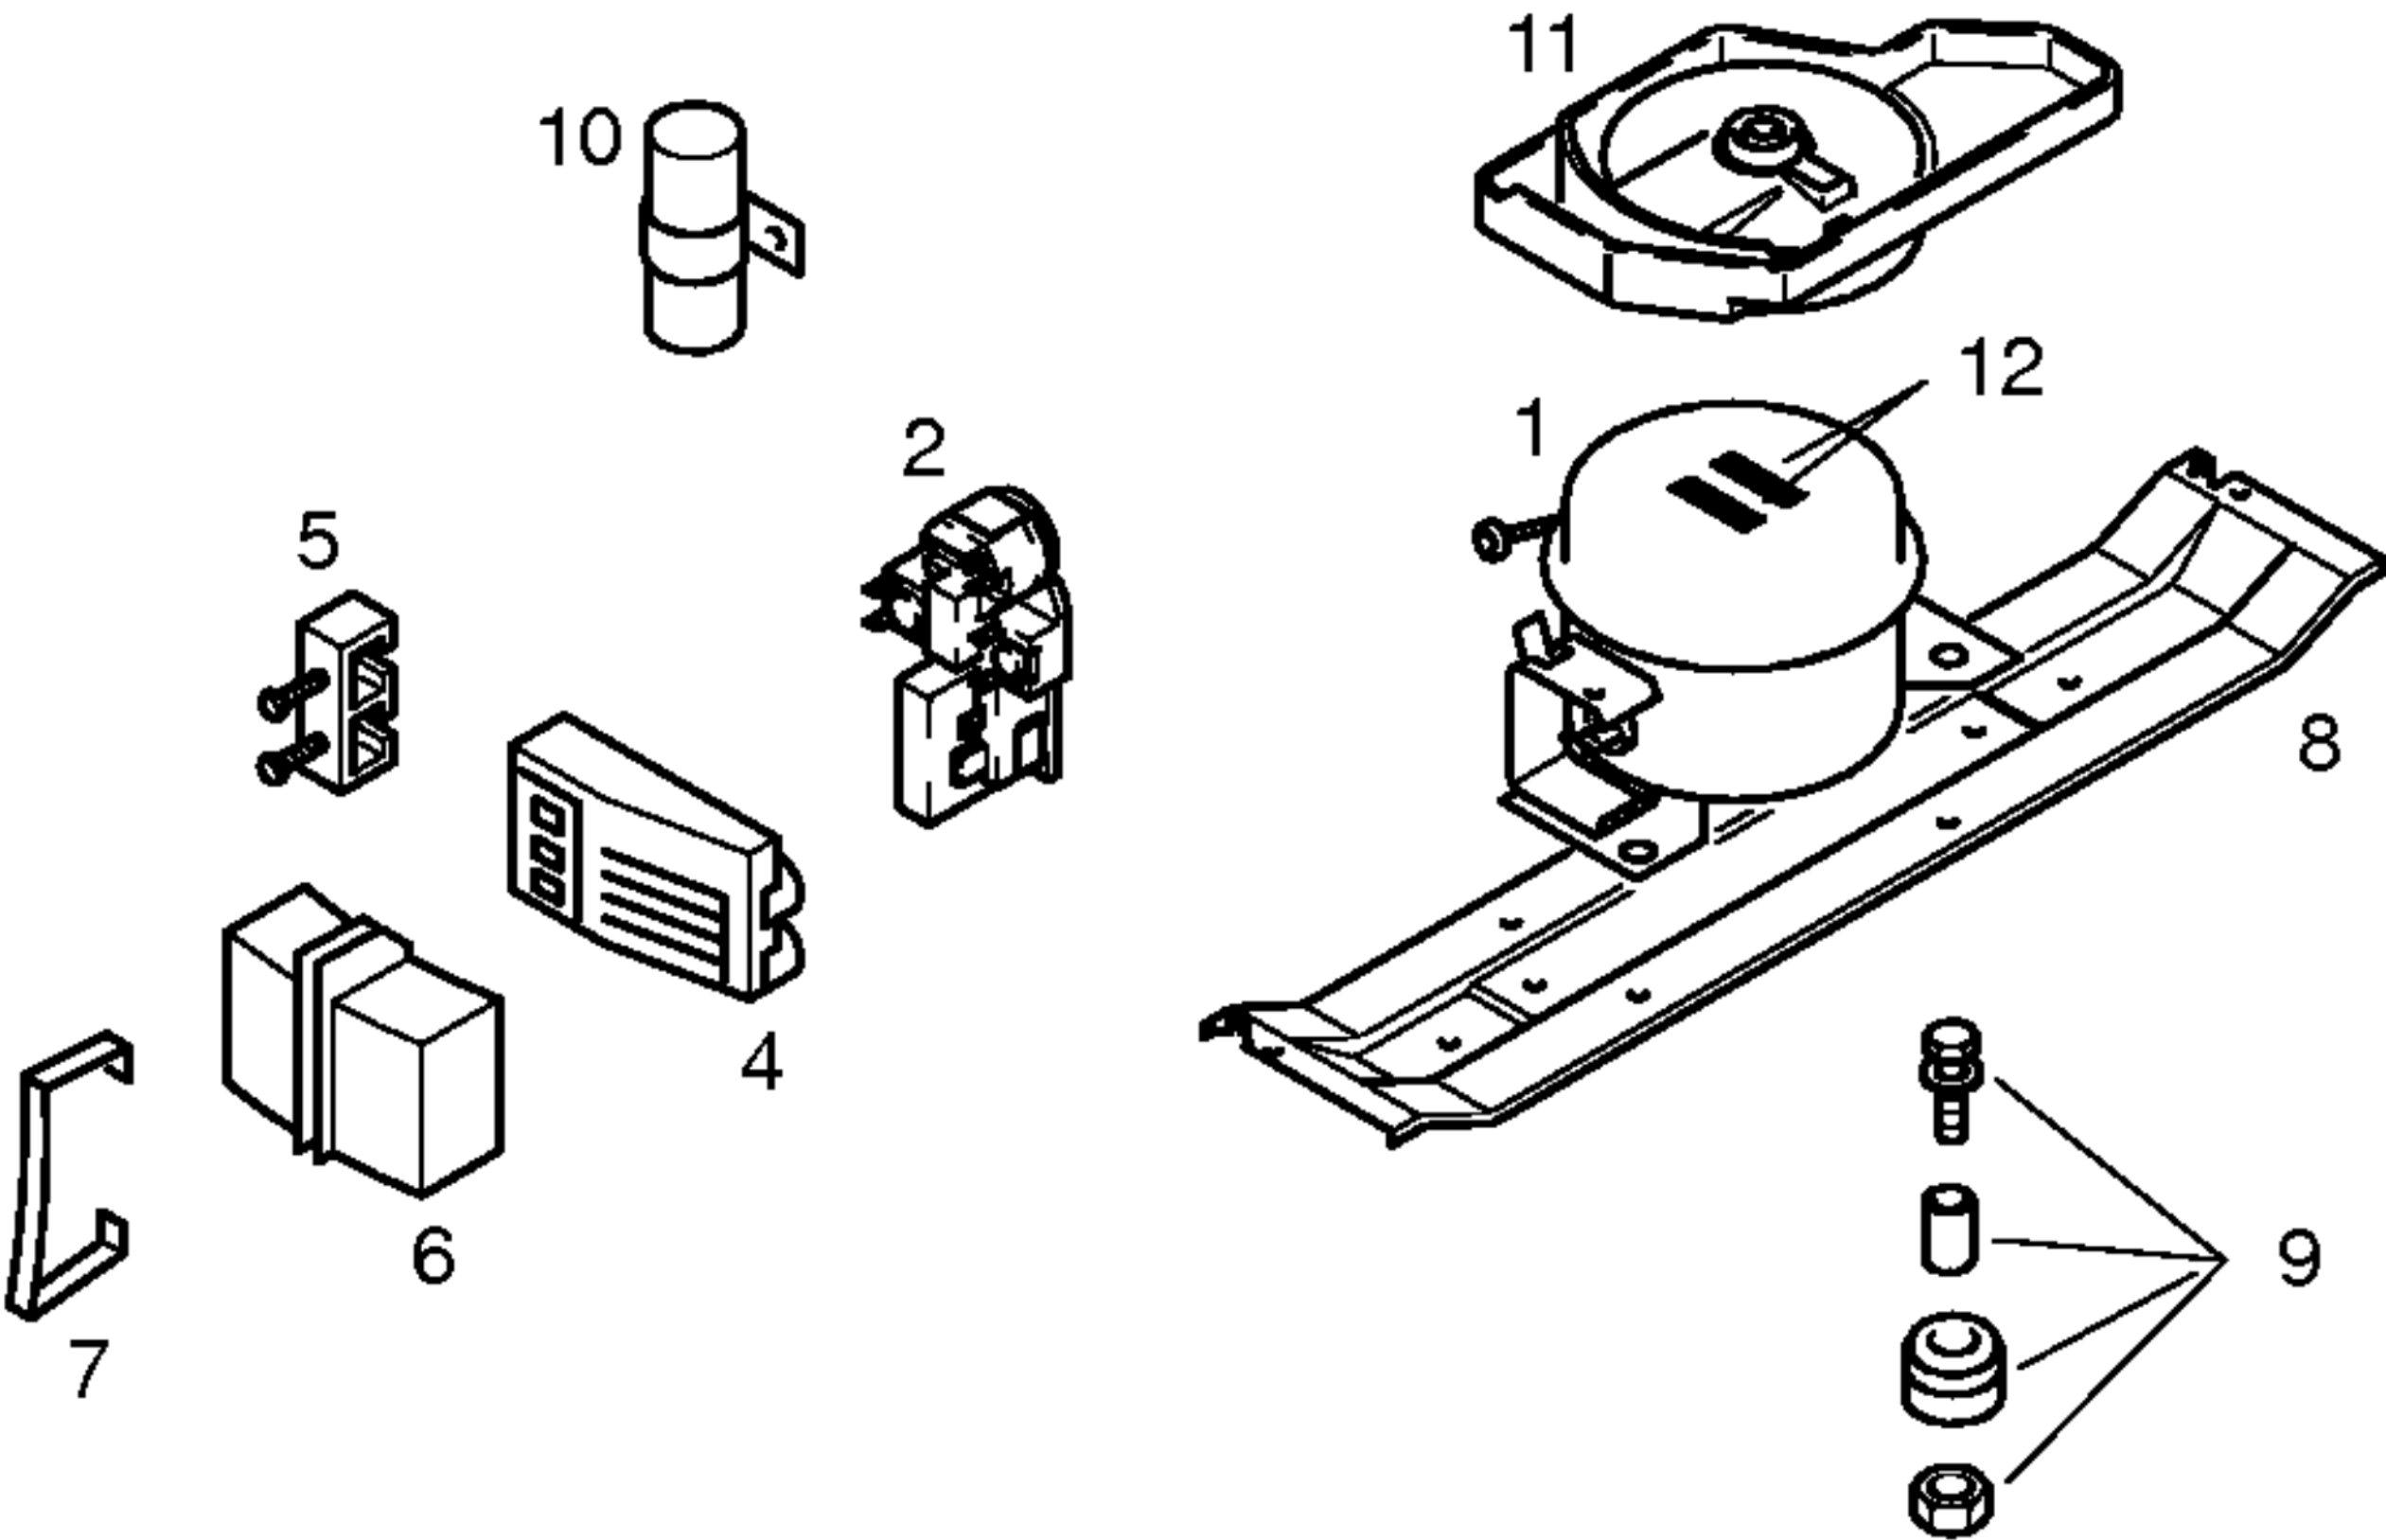

Pos.	KÜHLGERÄTE	
	U. HERMÉT.	
	GL90AA	
1	14 1360	
2	15 4851	
3		
4		
5		
6		
7		
8	28 8253	
9	05 0166	
10		
11	09 6864	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor	U. Hermét.	
Typ/Type/Tipo	GL90AA	
Förderleistung/Delivery/Debit/Aspiración l/h		
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A	12,8	
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	9,0	
Hi/aux.	22,4	

Temp.Reyler/Thermostat/Termostato	ATEA	
Typ/Type/Tipo	MANUAL	
Reglerstellung/Position/Conexión	MÁX.-MÍN.	
Schaltwerte/Switching values/	5°	
Valeurs de commutation/Desconex.	15°	
(..abtaven' od)	32°	

Füllmenge/Fill. quantity/Charge/Carga	134a	g	180	
---------------------------------------	------	---	-----	--

AnschluBwert/Comm. load/puiss. Connect./Potenc.	W	184		
---	---	-----	--	--

Heizung/Heater/Chauflage/Resistenc.descong.				
Widerstand/Resistance/Resistencia	Ohm			
Leistung/Power/Puissance/Potencia	W			

Ventilador/Blower/Ventilateur/Ventilador				
Widerstand/Resistance/Resistencia	Ohm			

Magnetventil/Magnetic valve/Electrovanne/Electrovalvula				
Widerstand/Resistance/Resistencia	Ohm			
Spannung/Volare/Tension/Tensión	V			

Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador				
---	--	--	--	--

