


Libro de instrucciones 51 7464 (E,P,GB,F,NL,GR)


Instrucciones de montaje 51 9729 (D,GB,F,I,NL,E,P,GR)

- 1) 06 7746
- 2) 03 3058
- 3) 16 9346 Set
- 4) 16 9821 Poliamida, 1mm.
- 5) 16 9823 Teflón, 0'5mm.

## **CROLLS**

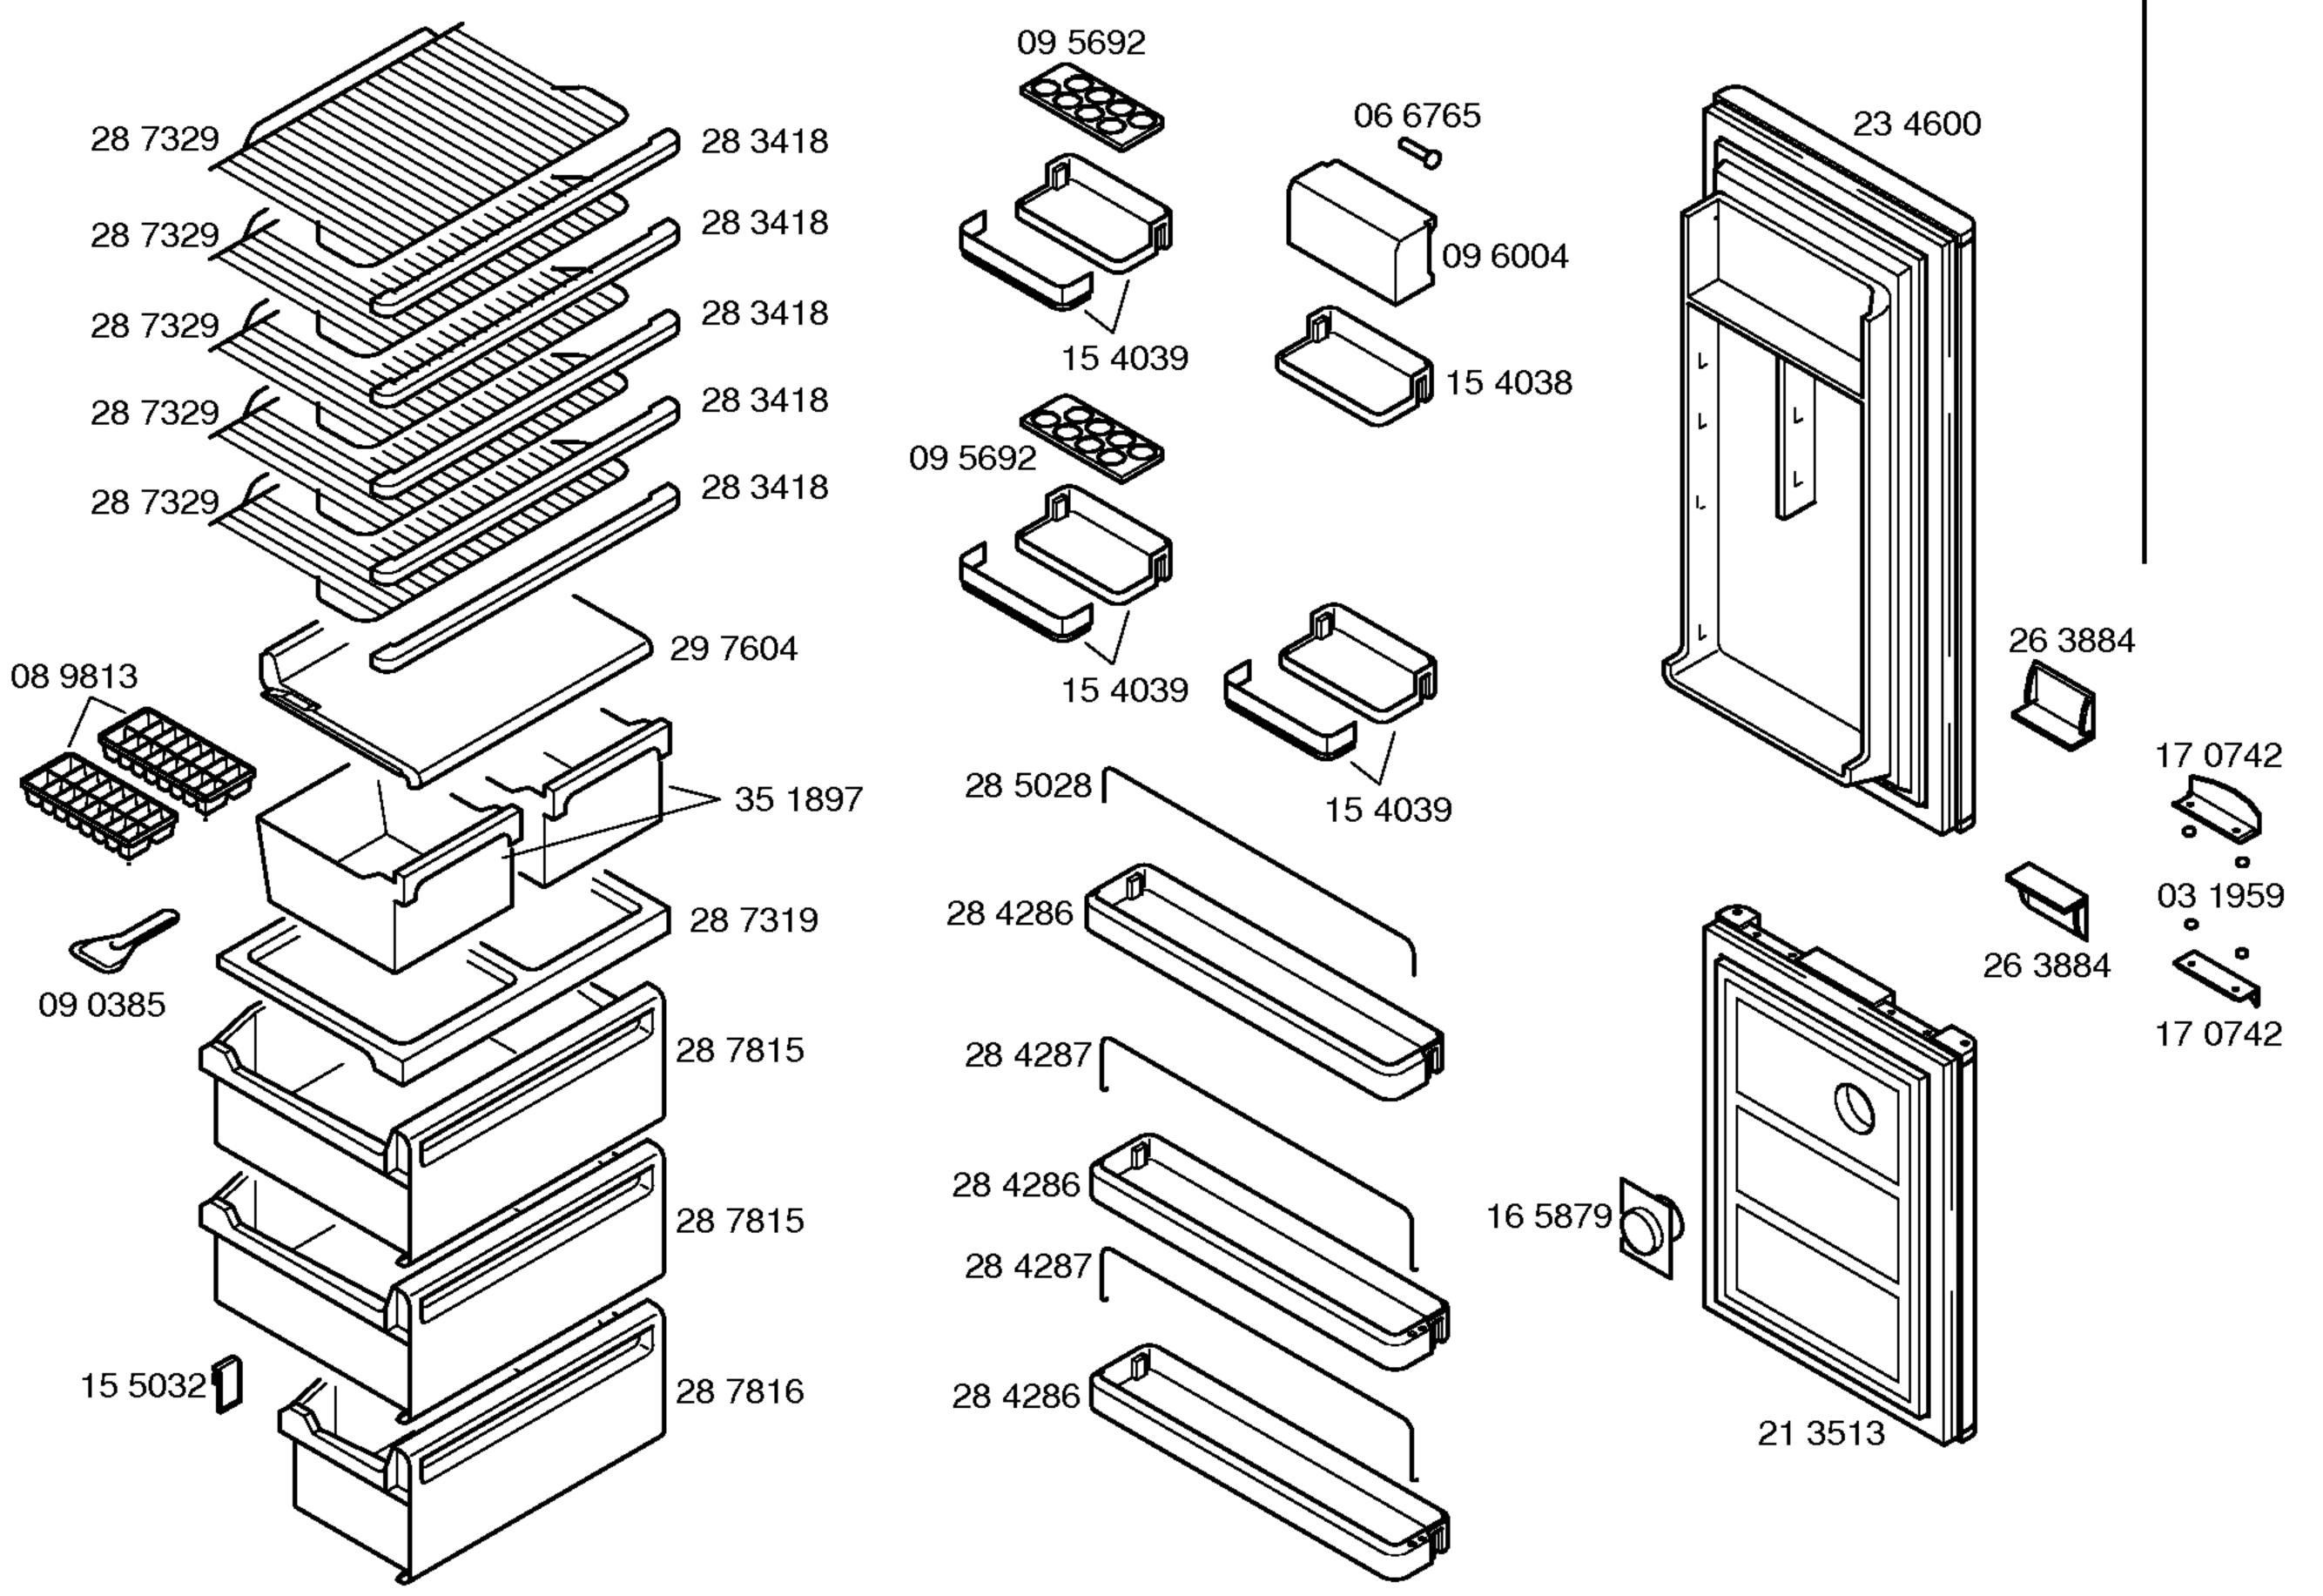

## **CROLLS**

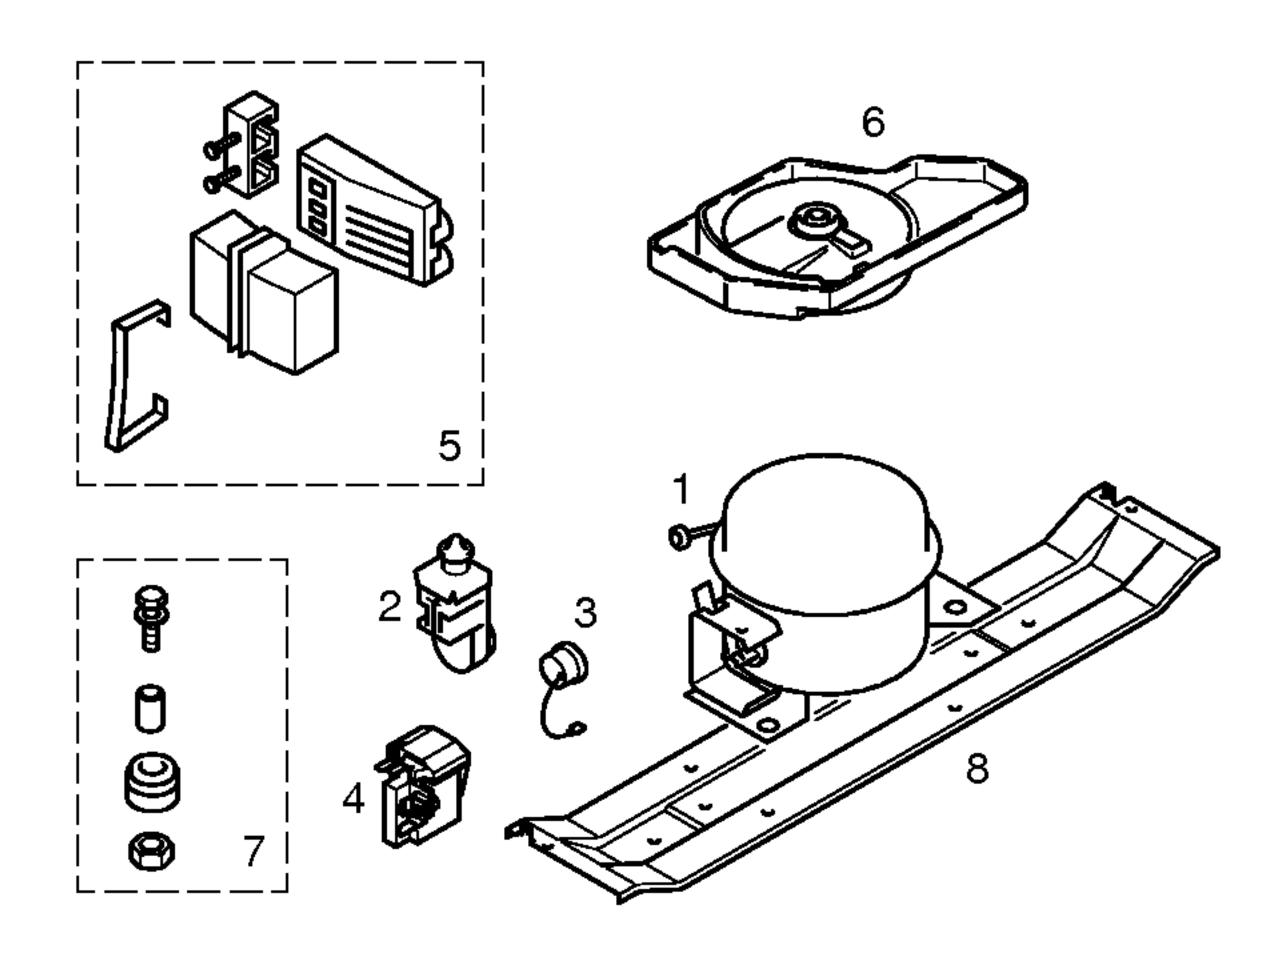

		****	
Pos.	Aspera	Gold Star	
	BMP1084Y	NR80NAEG	
1	14 1723	14 1605	
2	15 4315		
3	16 7769		
4		17 1011	
5			
6	26 4123		
7	05 0166	05 0166	
8	28 0162	28 0162	
9			
10			
11			
12			
13			

TEQUINIONIE BATENITEQUINIONI BATA/BONNIEGO TEQUI	NIOUEO/DATO			
TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECH	NICUES/DATC	S TECNICOS	<u> </u>	<u> </u>
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración I/h	Aspera BMP1084Y	Gold Star NR80NAEG		
Anlaufstromm/Starting current/Cour.démarrage/Int.arranq. A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	3,60 29,60 38,50	3,80 24,44 35,25		
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ein/conex.ºC Valeurs de commutation/Desconexaus"/descon. (abtaven' od)alarm'	Ranco K59-L6050 MIN. MAX. +6º -11º -28º	Ranco K54-L2007 MIN. MAX. -14º -22º -20º -28º -10º -18º		
Fülmenge/Fill. quantily/Charge/Carga R600a g	*	*		
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	71	87		
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W				
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm				
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V				
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador				

<sup>\*</sup> Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques / Ver plaqueta de características