



Pos.	Referenz	Bezeichnung
000	118940	LIVRET INSTRUCTIONS GB-ES-PT IND
001	081571	HABILLAGE POSTERIEUR
002	081573	HABILLAGE SUPERIEUR
006	121897	THERMOSTAT 16A 250V 250[C
007	081591	RESISTANCE GRILL
009	039578	CLIPS BULBE THERMOSTAT
010	088318	COMMUTATEUR FOUR ELECTR.
012	082349	ISOLANT FOUR ELECTRIQUE
013	074135	LENTILLE LAMPE TEMOIN
014	118967	TABLEAU DE BORD FI52.B IX IB
015	114923	MANETTE NOIRE INDESIT RESTYLING
016	115541	POIGNEE HABILLAGE LATERAL FOUR E
016	115543	HABILLAGE LATERAL DROIT
018	090670	SUPPORT CHARNIERE PORTE FOUR DRO
019	081585	VIS TAPTITE
020	084750	PAROI DE REPARTITION DE CHALEUR
022	081577	LECHE-FRITES EMAILLE
023	081578	GRILLE FOUR
024	115135	PORTE FOUR INOX INDESIT RESTYLIN
026	033431	VIS NOIR M5 X 20 TSP
026	115134	POIGNEE NOIRE PORTE FOUR INDESIT
027	090677	CHARNIERE PORTE FOUR
028	115137	CONTRE-PORTE FOUR EMAILLIERTE+VE
031	082486	SOCLE FOUR
031	138829	BOITIER DE RESISTANCE SOLE
033	081590	RESISTANCE FOND FOUR 230V/1200
035	090671	SUPPORT CHARNIERE GAUCHE
036	115541	POIGNEE HABILLAGE LATERAL FOUR E
036	115545	HABILLAGE LATERAL GAUCHE
037	081580	PANNEAU ISOLANT POSTERIEUR FOUR
038	076978	LAMPE FOUR 25W 220V
039	078426	DOUILLE 25 W 230 V
040	081601	BORNIER ELECTRIQUE MONOFASE ITW
041	081574	TRAVERSE ARRIERE
042	026767	CABLE ALIMENTATION 10A(3X1)
043	081589	MOTEUR TURBINE (AIR BRASSE) 220-
044	115648	MINUTERIE ELECTRIQUE 120' PEAPSA
045	074157	LAMPE TEMOIN ROUGE
046	083853	ARRET CABLE
047	082365	THERMOSTAT ELECTRIQUE
048	081579	JOINT PORTE FOUR
049	090695	FACADE INDESIT NOIRE
050	095111	FOUR ELECTRIQUE FB52AC.1
052	115136	BOUCHE EVAC. FUMEEES
055	084753	PANNEAU LATERAL GAUCHE FOUR AUTO
056	084752	PANNEAU LATERAL DROIT FOUR AUTO-
057	084756	DOUILLE FIXATION M4
099	033163	RONDELLE CONCAVE NOIRE
099	082509	VIS TAPTITE M4X10
099	088347	VIS TRC 3.5X25 TSP
099	093670	VIS 8PX19,05 TSP ZN.