


2.2 XC-P410T

2.2.1 Exterior

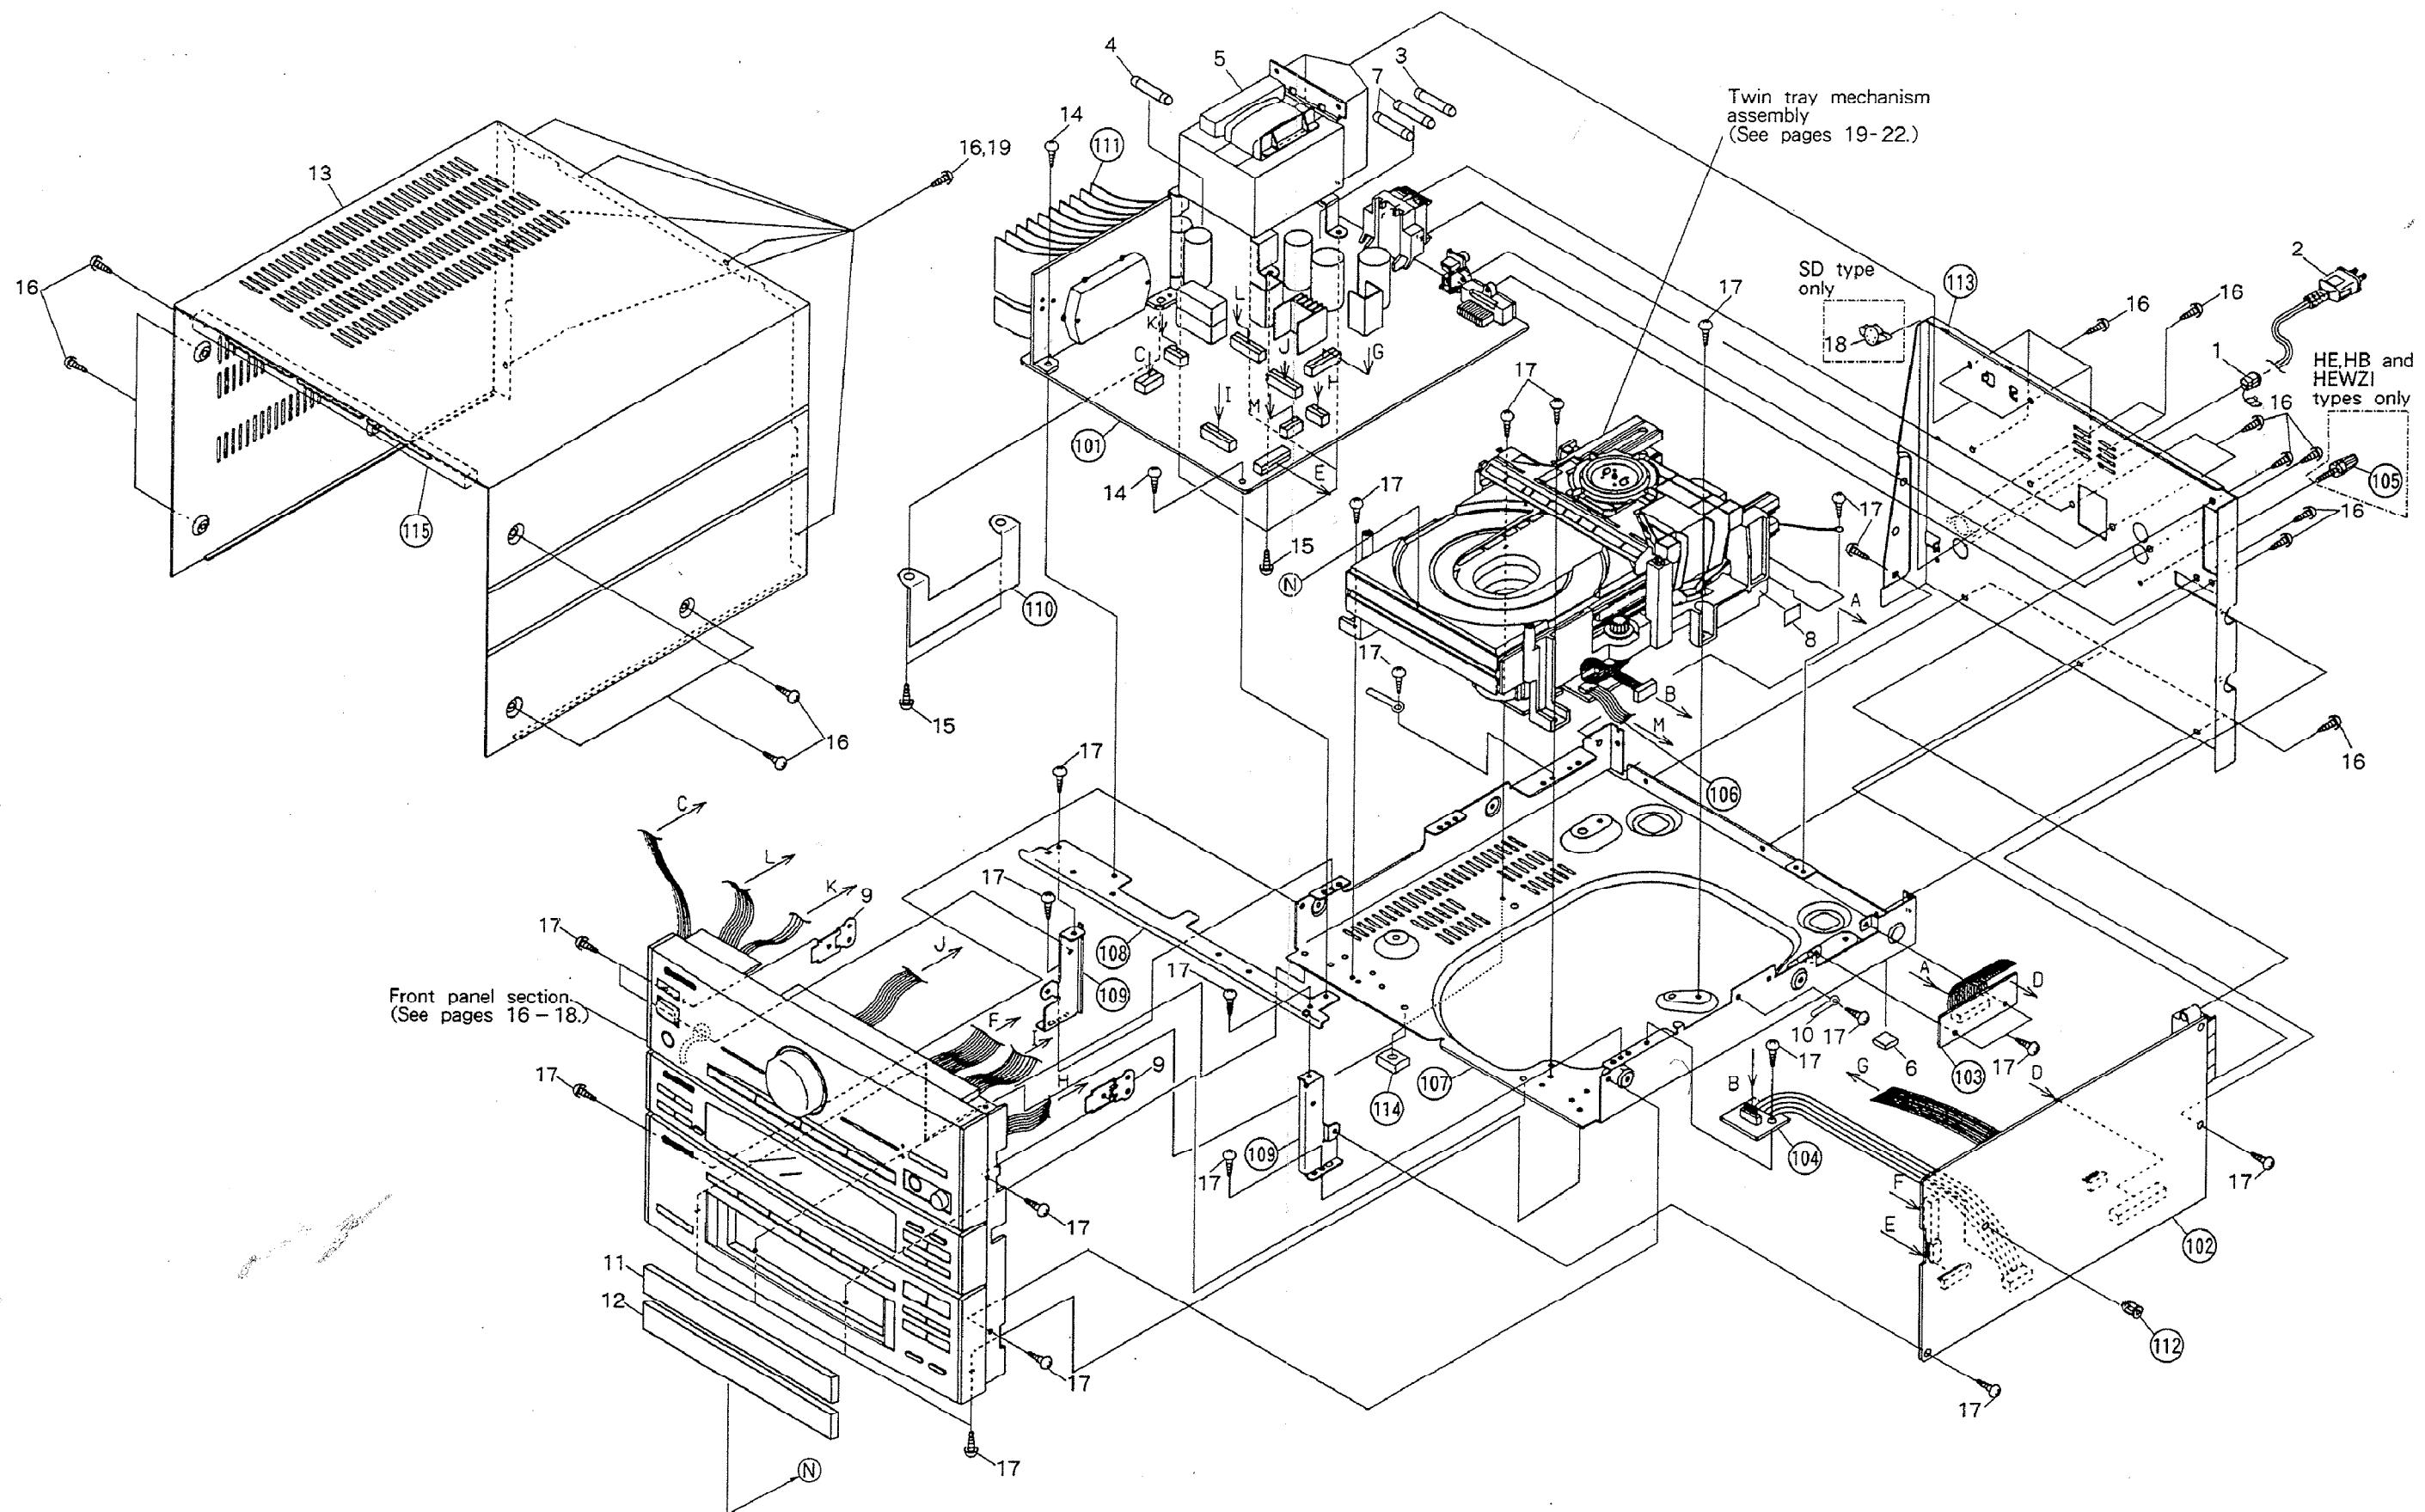

1

2

3

4

5

A

A

B


B

C

C



D

D

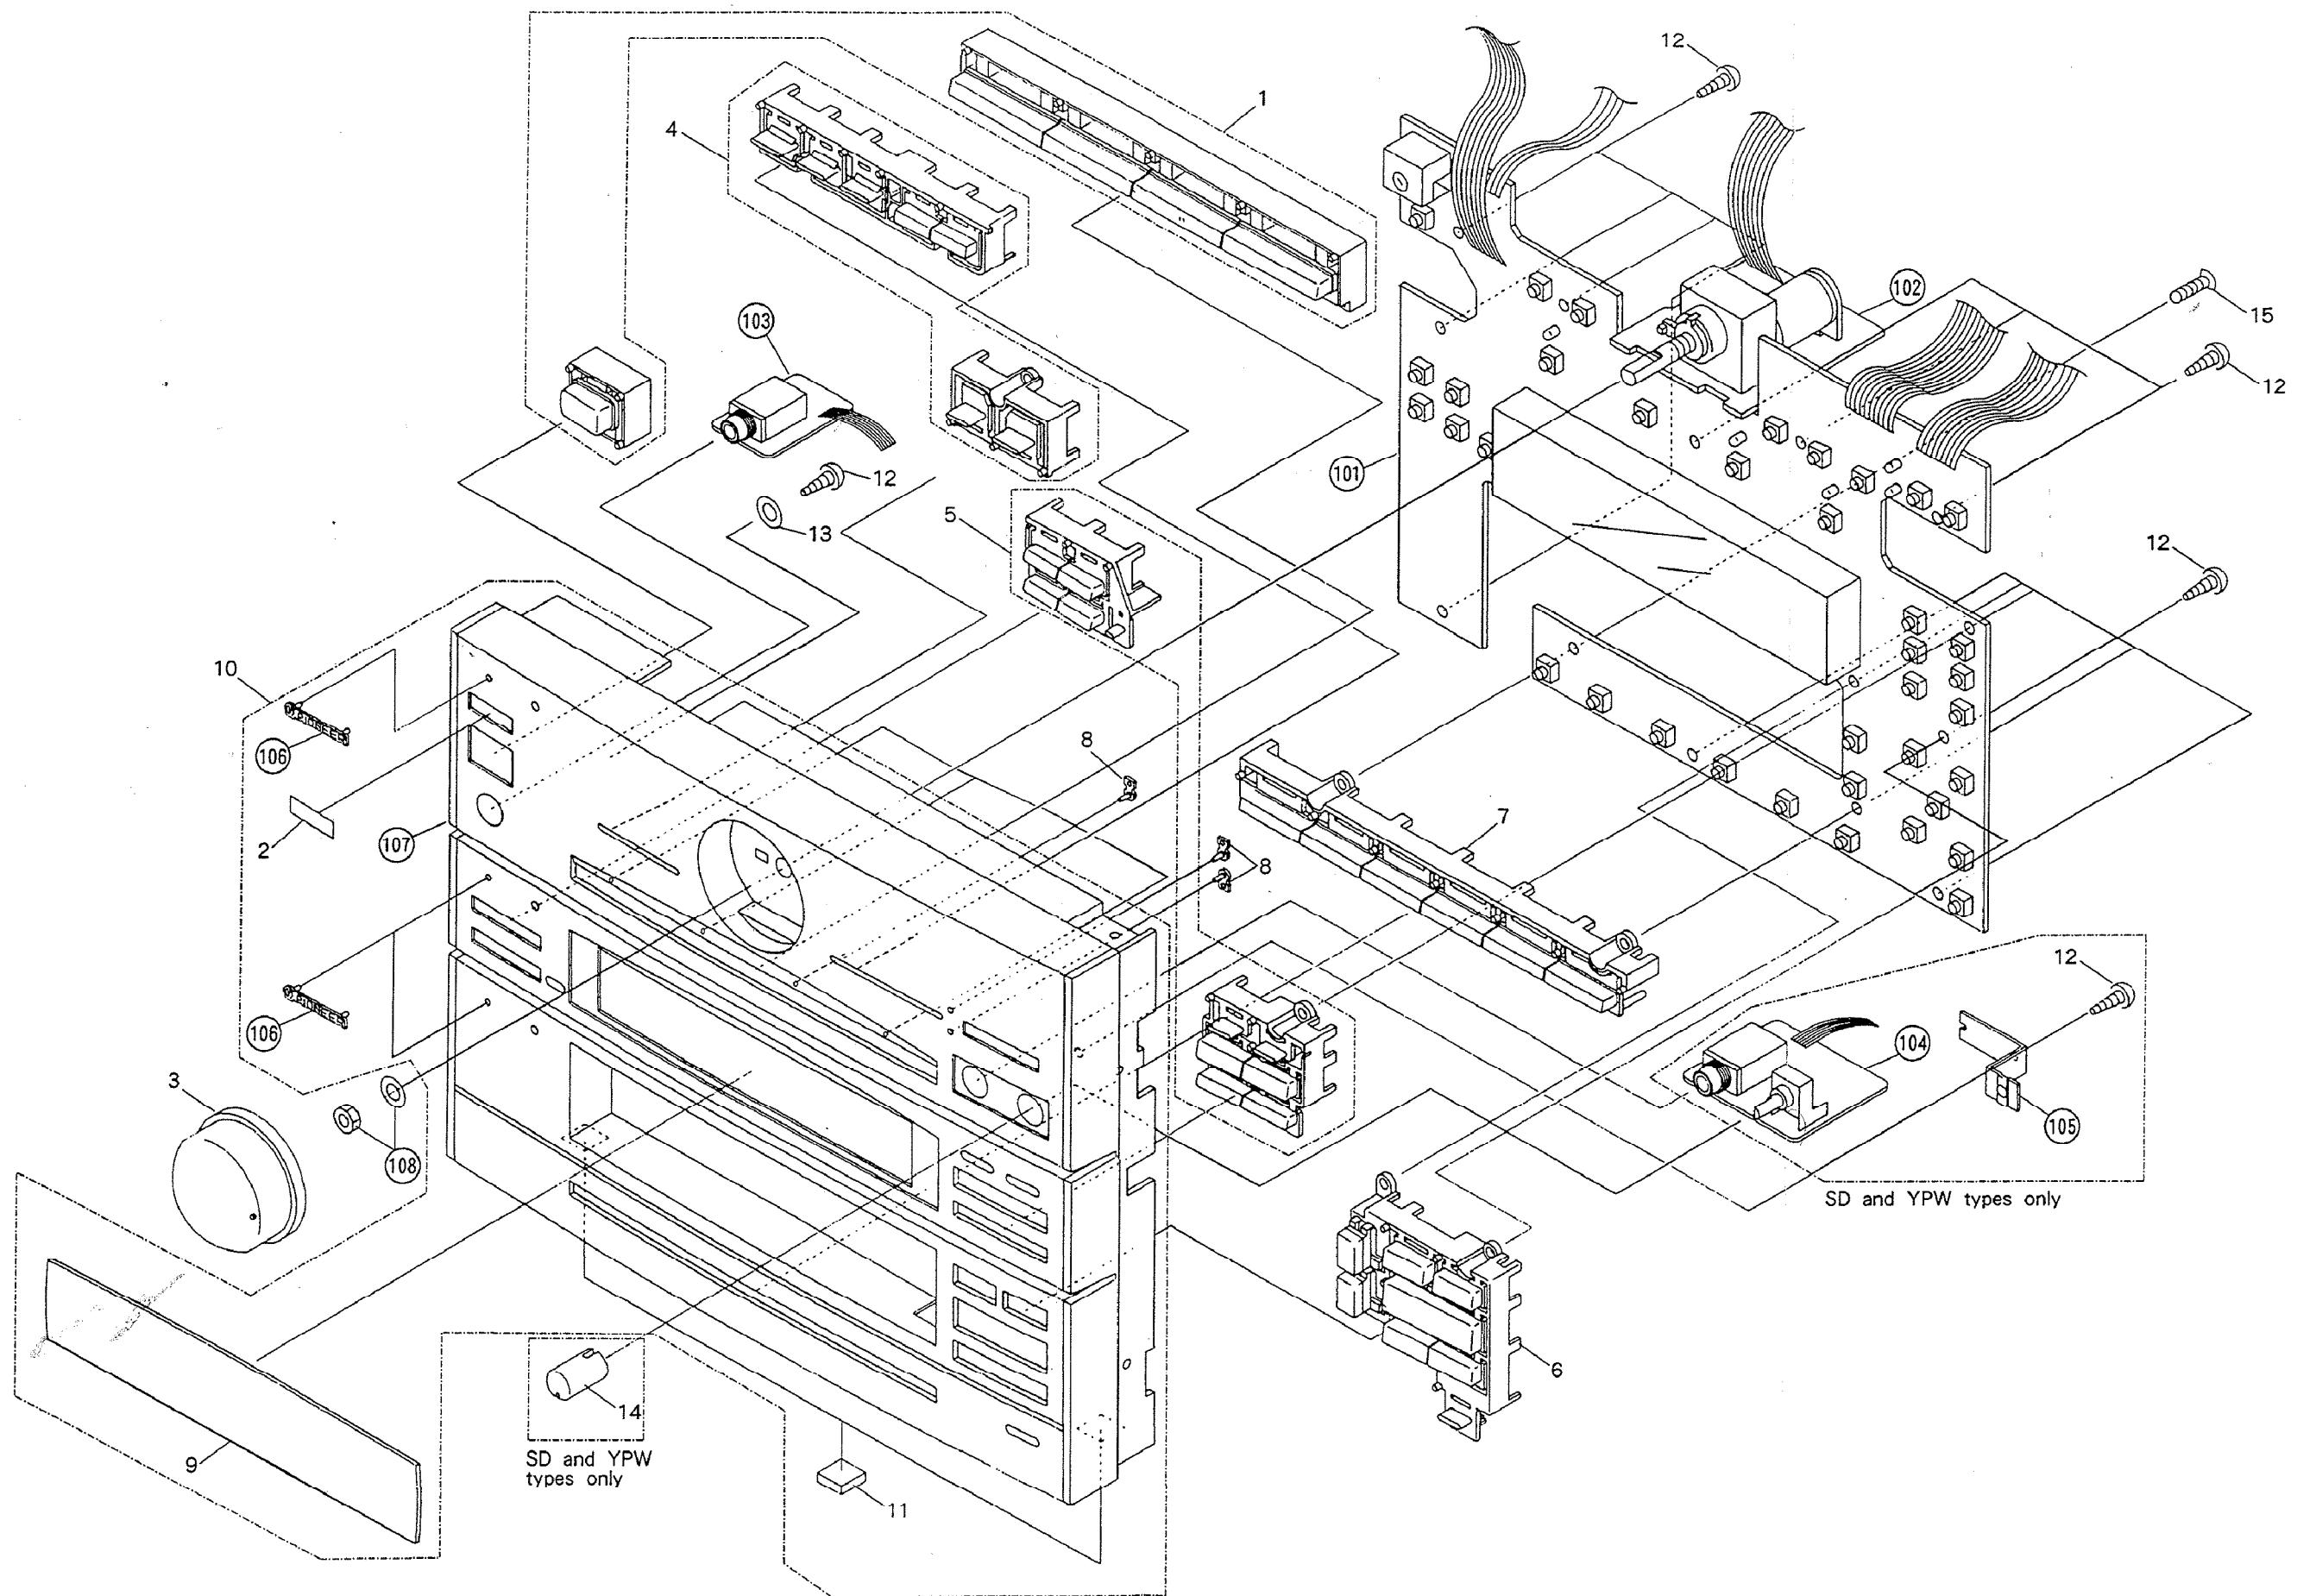


2.2.3 Twin-tray mechanism assembly

A

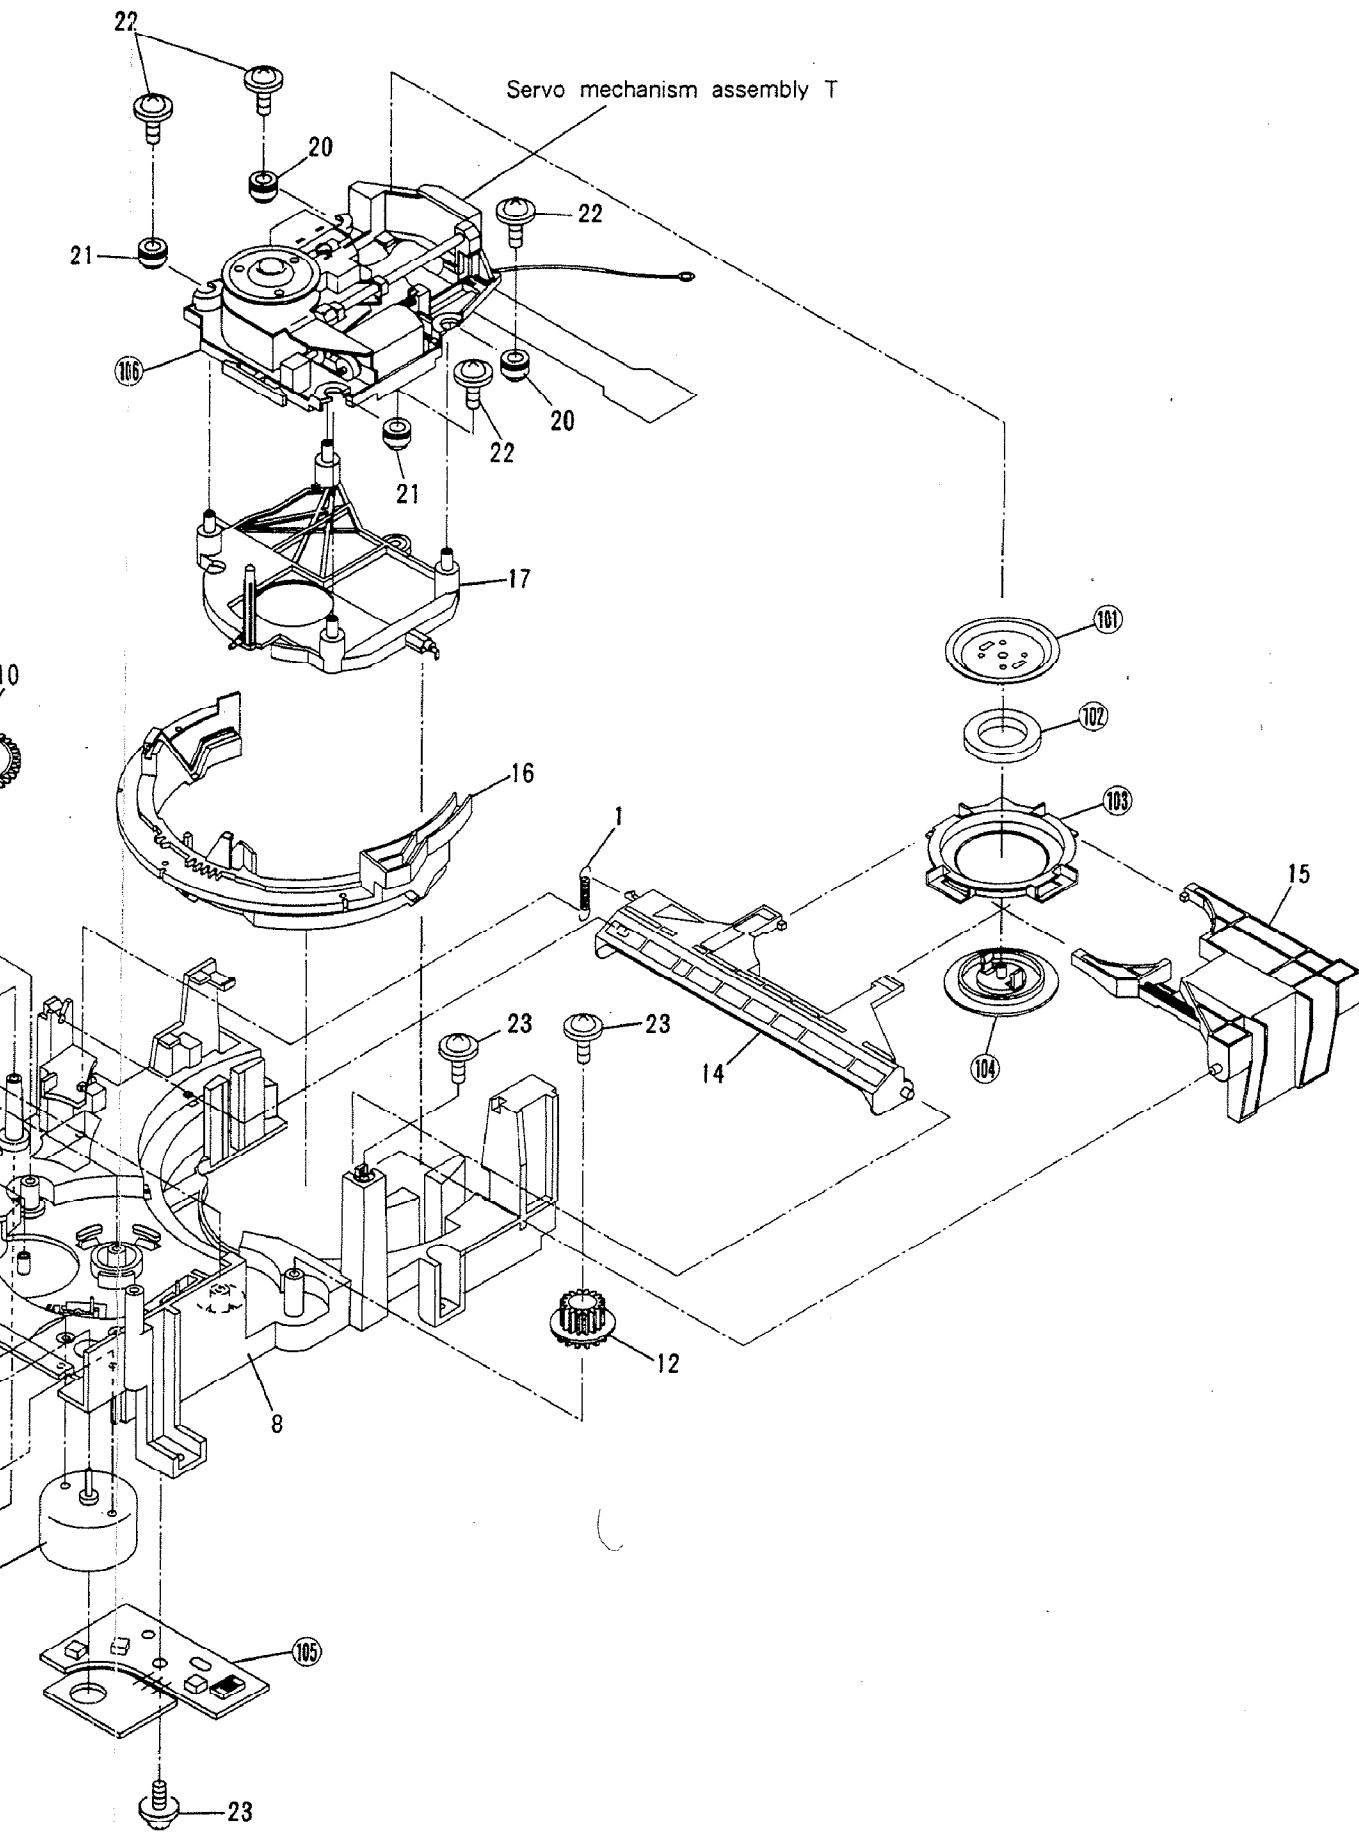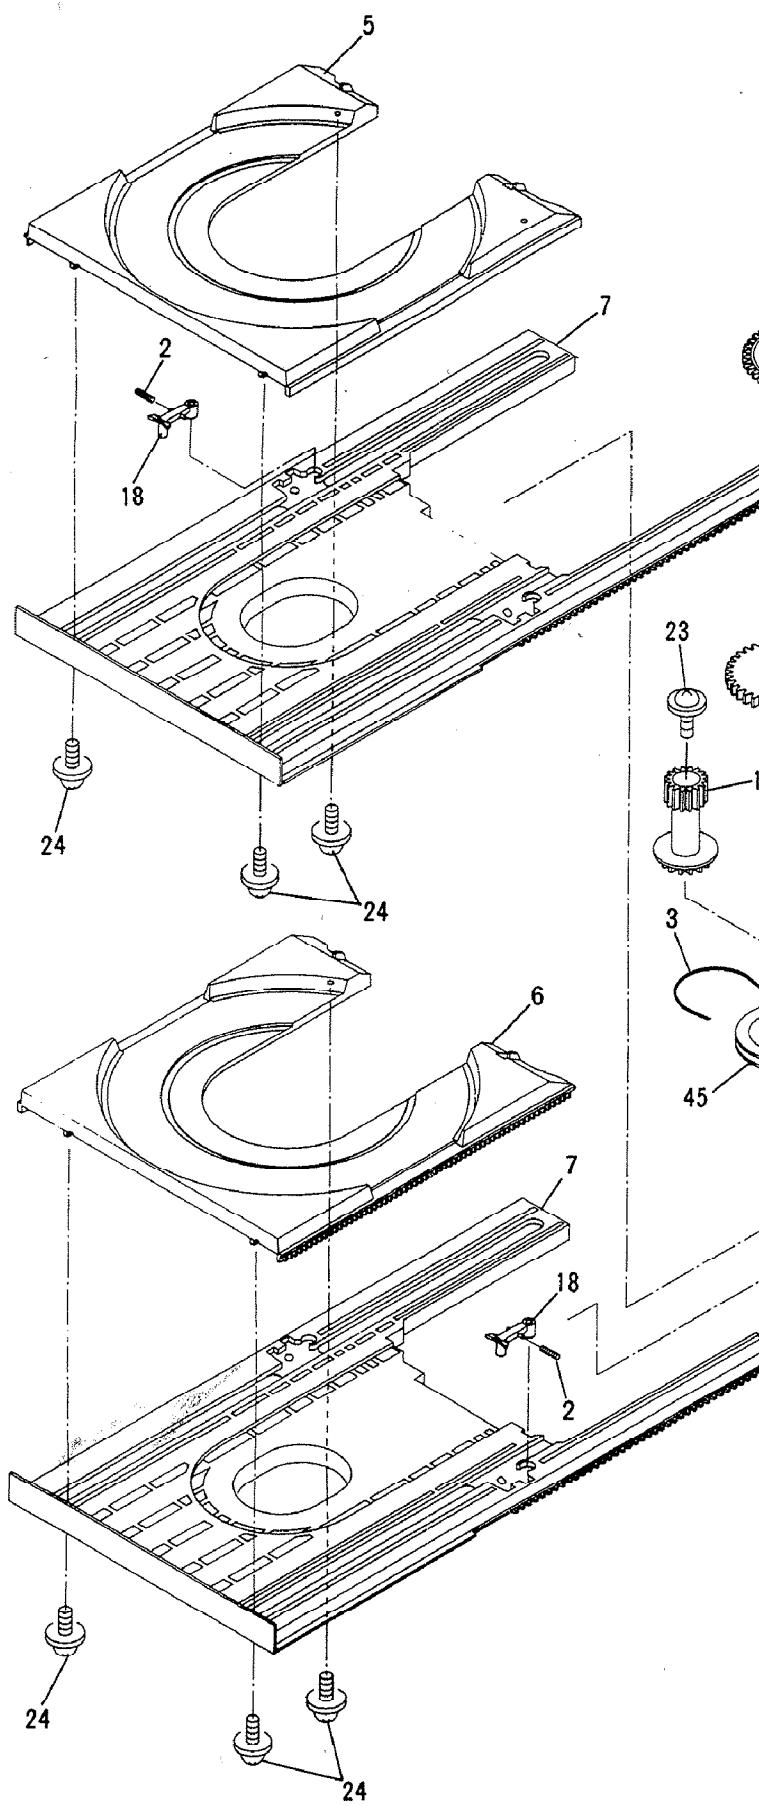


B

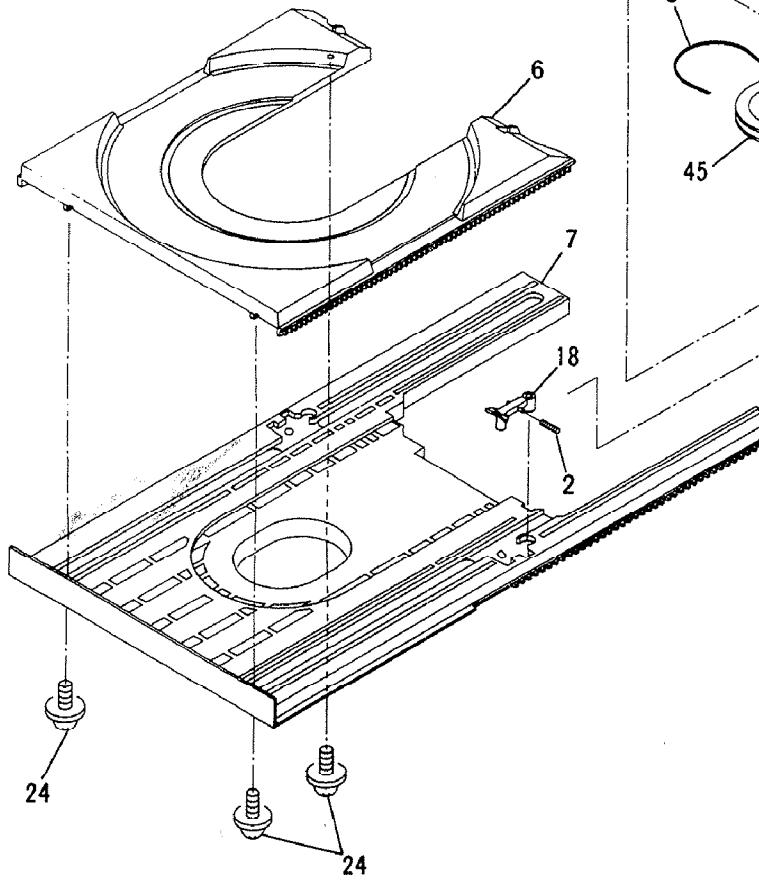


• Servo mechanism assembly T


A

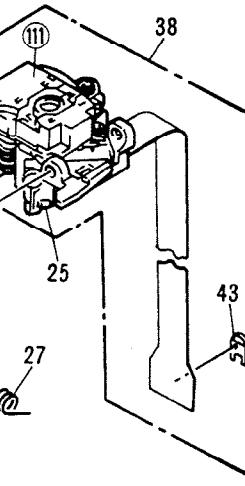

B

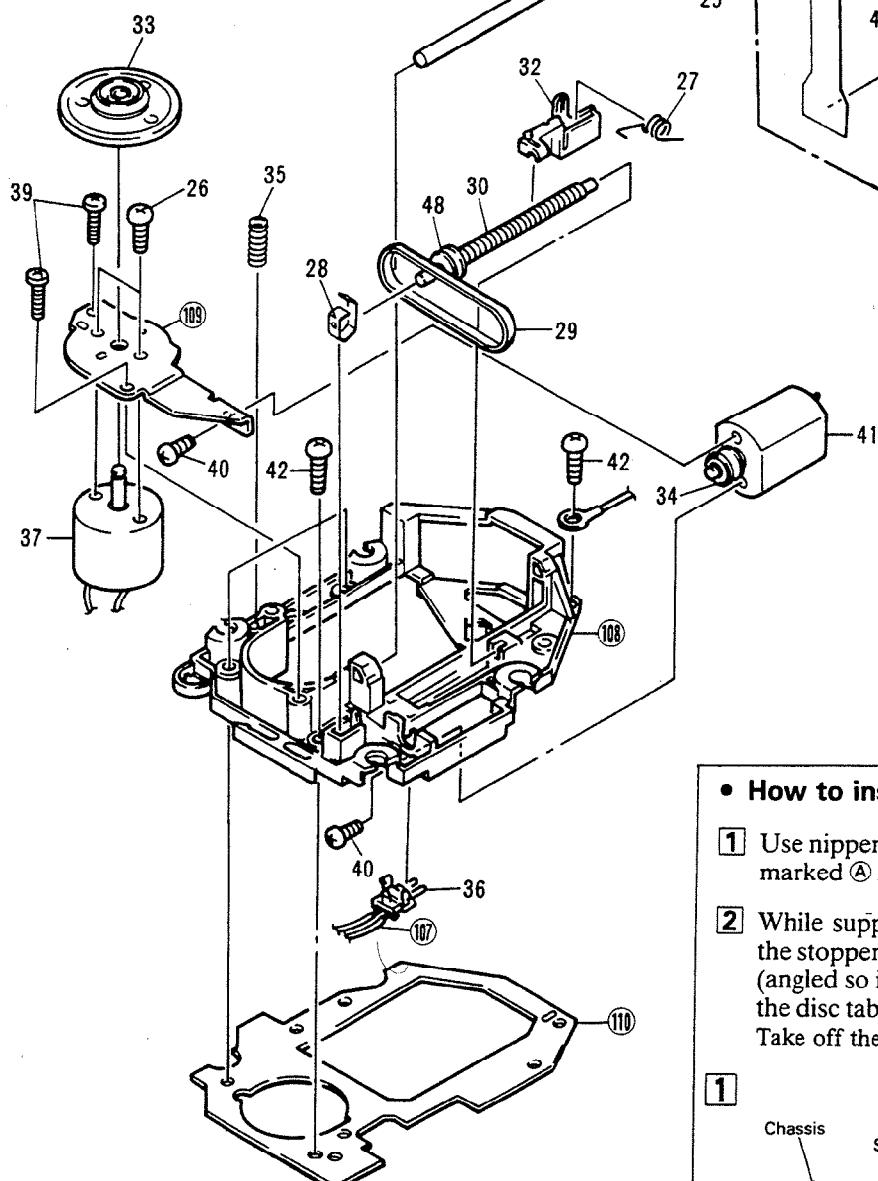

C

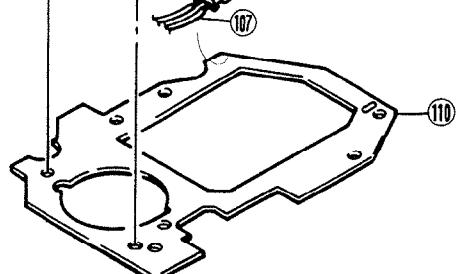

D

• How to install the disc table

- 1 Use nippers or other tool to cut the two sections marked Ⓐ in figure 1. Then remove the spacer.
- 2 While supporting the spindle motor shaft with the stopper, put spacer on top of the motor base (angled so it doesn't touch section Ⓑ), and stick the disc table on top (takes about 9kg pressure). Take off the spacer.

