


III . EXPLODED VIEW AND PART LIST

1. MAIN ASSEMBLY

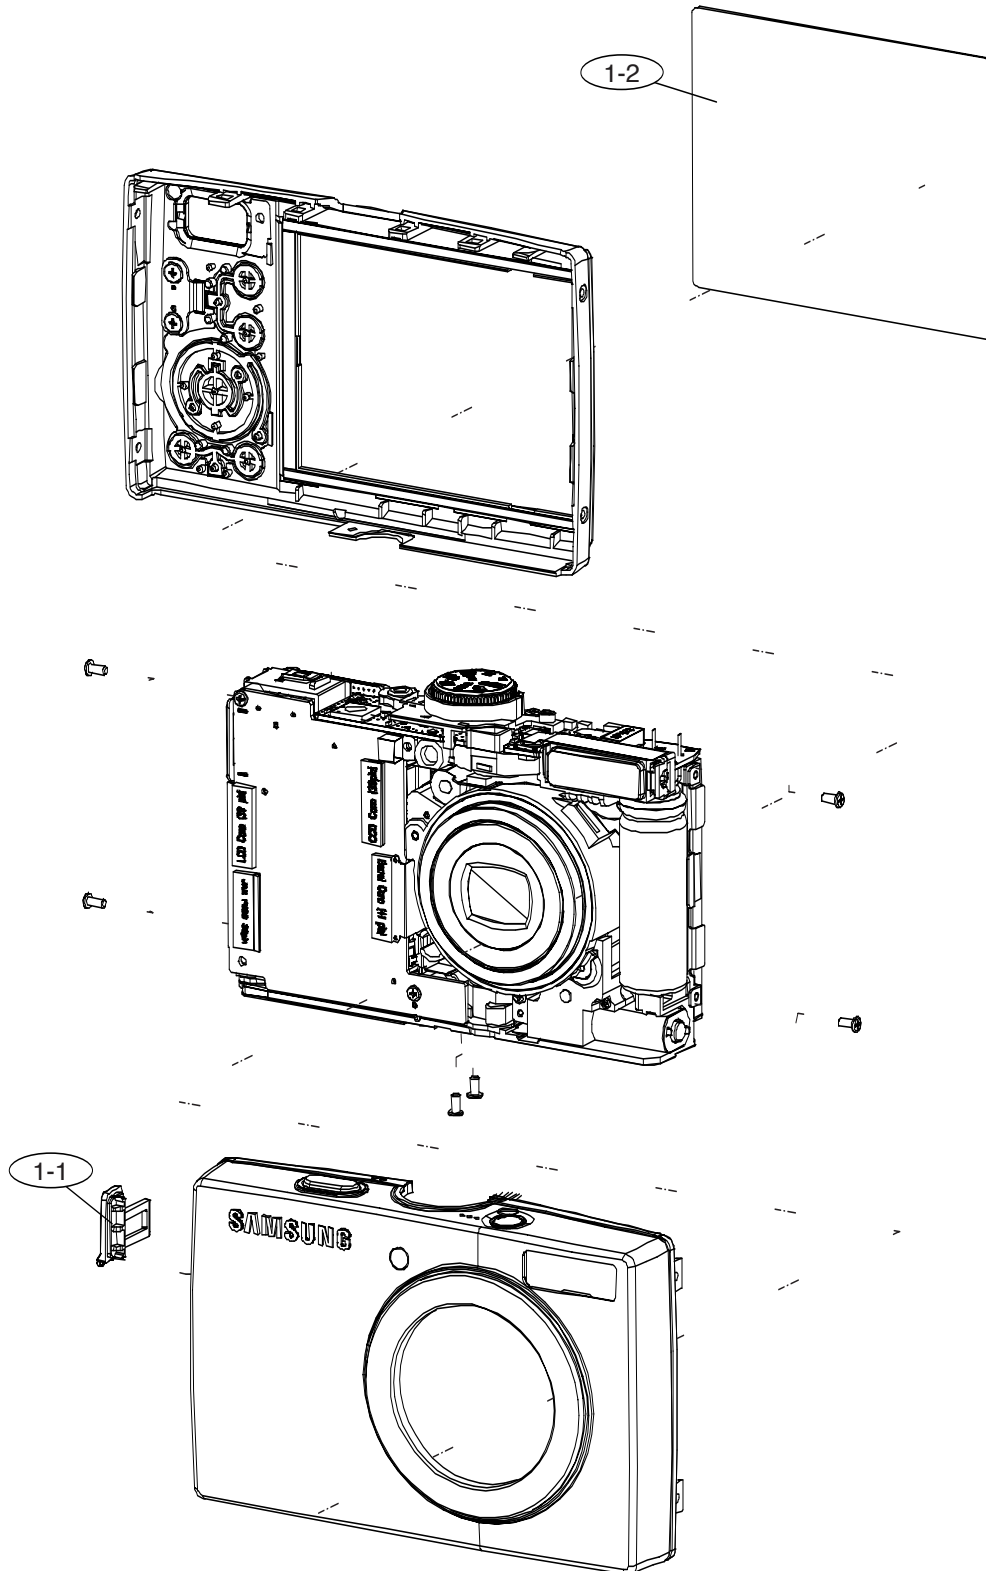


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
1-1	AD63-01828A	CONNECTOR_COVER_L100_L1_P800	1	O	SILVER
	AD63-02723A	CONNECTOR_COVER_L100_L1_P800	1	O	BLACK
	AD63-02724A	CONNECTOR_COVER_L100_L1_P800	1	O	RED
	AD63-02725A	CONNECTOR_COVER_L100_L1_P800	1	O	BLUE
	AD63-02856A	CONNECTOR_COVER_L100_L1_P800	1	O	PINK
	AD63-01866A	CONNECTOR_COVER_M100	1	O	SILVER
1-2	AD64-02084A	LCD_WINDOW_L100_L1_P800	1	O	
	AD64-02132A	LCD_WINDOW_M100	1	O	

III . EXPLODED VIEW AND PART LIST

2. BODY ASSEMBLY

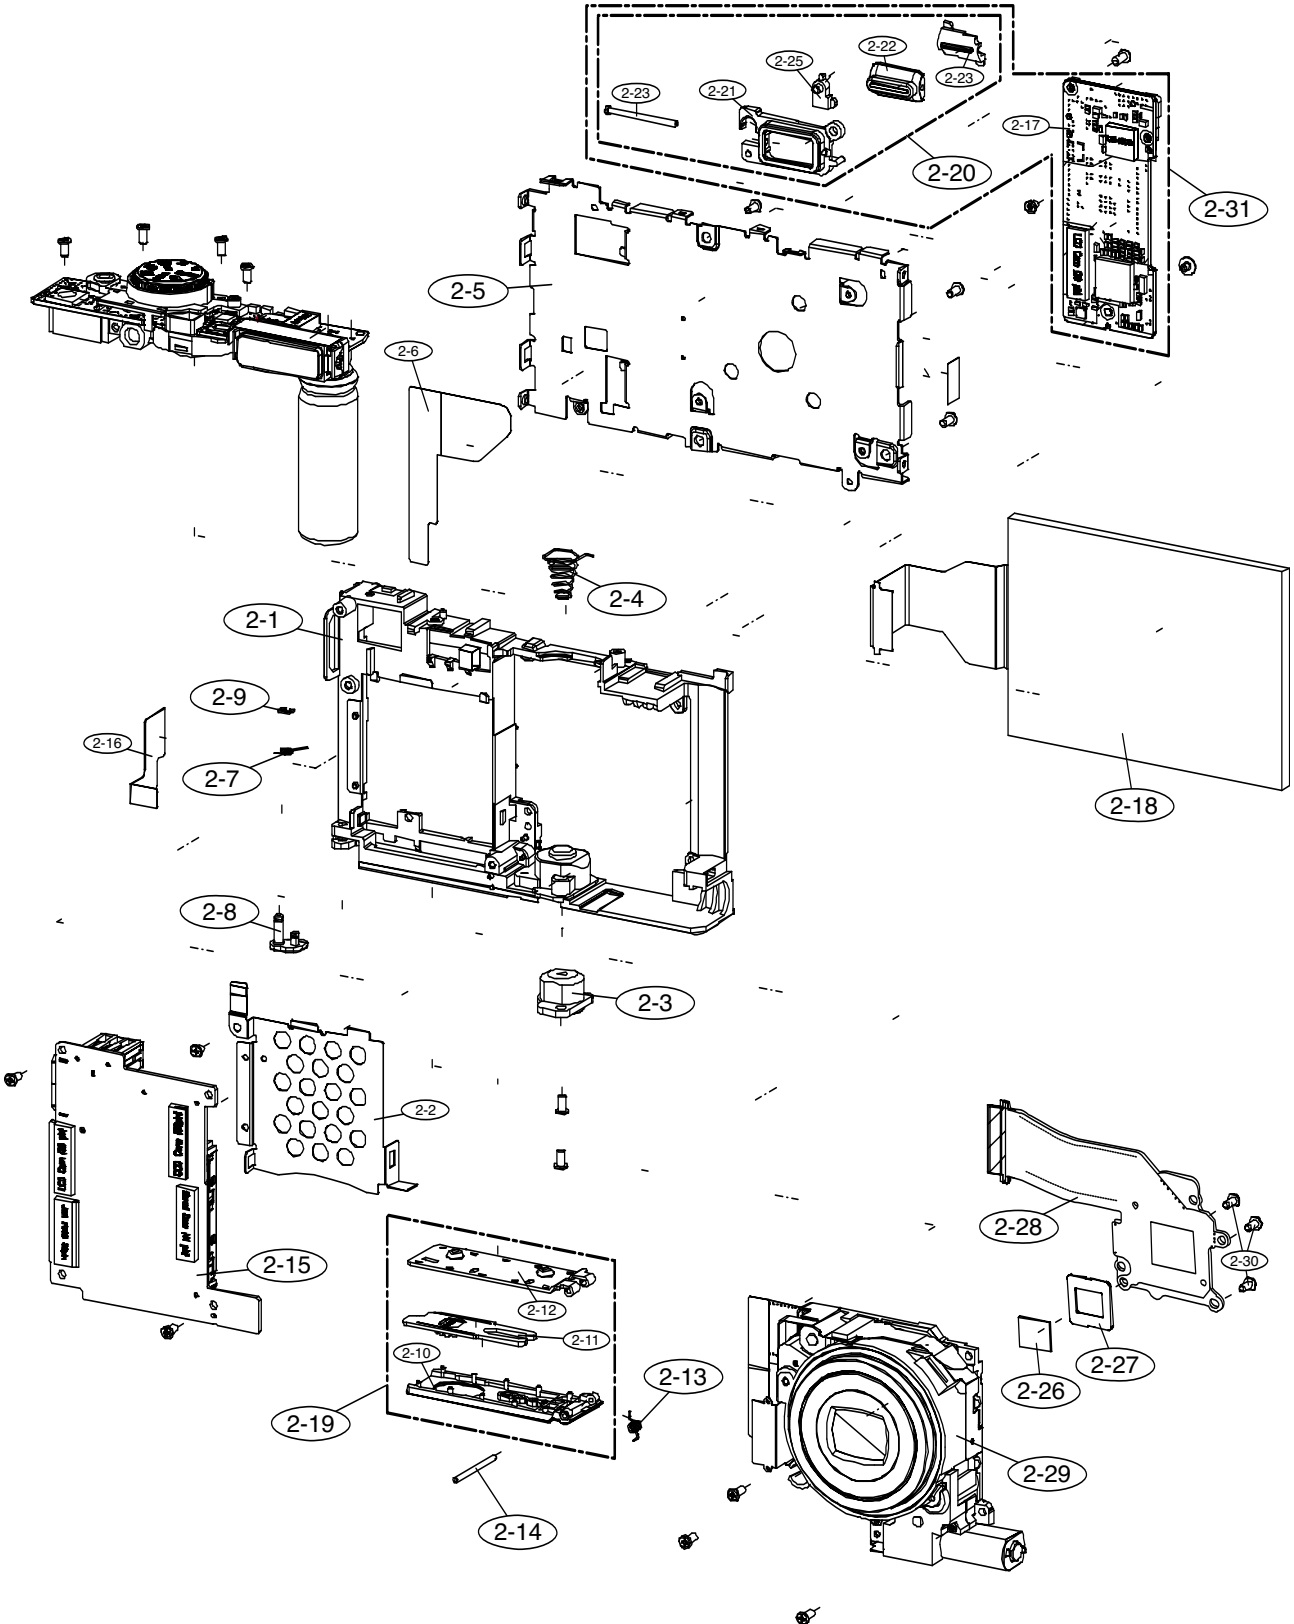

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
2-1	AD62-00073A	BATTERY_CHAMBER	1	O	
2-2	AD61-03203A	BATTERY_TOP_PLATE-L483	1	X	
2-3	AD61-03494A	TRIPOD_CONNECTOR	1	O	
2-4	6107-001459	BATTERY_PUSH_SPRING	1	O	
2-5	AD61-03202A	BATTERY_CHAMBER_PLATE	1	O	
2-6	AD63-02843A	EMI_SHEET_CCD	1	X	
2-7	6107-001474	BATTERY_LOCK_LEVER_SPRING	1	O	
2-8	AD66-00521A	BATTERY_LOCK_LEVER	1	O	
2-9	6044-001137	E RING(312)-H1	1	O	
2-10	AD63-01829A	BATTERY_COVER	1	X	SILVER
	AD63-02726A	BATTERY_COVER	1	X	BLACK
	AD63-02727A	BATTERY_COVER	1	X	RED
	AD63-02728A	BATTERY_COVER	1	X	BLUE
	AD63-02857A	BATTERY_COVER	1	X	PINK

III . EXPLODED VIEW AND PART LIST

► PARTS LIST


Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
2-11	AD63-01830A	BATTERY_COVER_LOCK	1	X	SILVER
	AD63-02729A	BATTERY_COVER_LOCK	1	X	BLACK
	AD63-02730A	BATTERY_COVER_LOCK	1	X	RED
	AD63-02731A	BATTERY_COVER_LOCK	1	X	BLUE
	AD63-02859A	BATTERY_COVER_LOCK	1	X	PINK
2-12	AD61-03328A	BATTERY_COVER_PLATE	1	X	
2-13	6107-001433	BATTERY_HINGE_SPRING	1	O	
2-14	AD61-03577A	BATTERY_COVER_HINGE	1	O	
2-15	AD92-00462A	MAIN_PCB_ASSY	1	O	
2-16	AD63-02845A	EMI_SHEET_SIDE	1	X	
2-17	AD92-00467A	KEY_PCB_SMD_ASSY	1	X	
2-18	AD07-00083A	LCD	1	O	
2-19	AD97-15440A	BATTERY_COVER_ASSY	1	O	SILVER
	AD97-15345A	BATTERY_COVER_ASSY	1	O	BLACK
	AD97-15346A	BATTERY_COVER_ASSY	1	O	RED
	AD97-15347A	BATTERY_COVER_ASSY	1	O	BLUE
	AD97-15348A	BATTERY_COVER_ASSY	1	O	PINK

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
2-20	AD97-15432A	ZOOM LEVER ASSY_L100_L1_P800	1	O	
	AD97-15746A	ZOOM LEVER ASSY_M100	1	O	
2-21	AD61-03508A	ZOOM_LEVER_HOLDER_L100_L1_P800	1	X	
	AD61-03522A	ZOOM_LEVER_HOLDER_M100	1	X	
2-22	AD64-02081A	ZOOM_LEVER_L100_L1_P800	1	X	
	AD64-02129A	ZOOM_LEVER_M100	1	X	
2-23	AD73-00266A	ZOOM_RUBBER_L100_L1_P800	1	X	
	AD73-00273A	ZOOM_RUBBER_M100	1	X	
2-24	AD61-03579A	ZOOM_LEVER_HINGE_L100_L1_P800	1	X	
	AD61-03589A	ZOOM_LEVER_HINGE_M100	1	X	
2-25	AD64-02074A	REAR_ACCESS_WINDOW	1	X	
2-26	AD63-01246A	IR CUT FILTER	1	O	
2-27	AD63-01922A	IR CUSHION	1	O	
2-28	AD92-00468A	CCD_FPCB ASSY	1	O	
2-29	AD97-13691A	BARREL ASSY	1	O	SILVER
	AD97-13692A	BARREL ASSY	1	O	BLACK
2-30	6031-001637	WASHER	3	O	
2-31	AD92-00466A	KEY_PCB_ASSY	1	O	

III . EXPLODED VIEW AND PART LIST

3. FRONT COVER ASSEMBLY (L100,L1,P800)

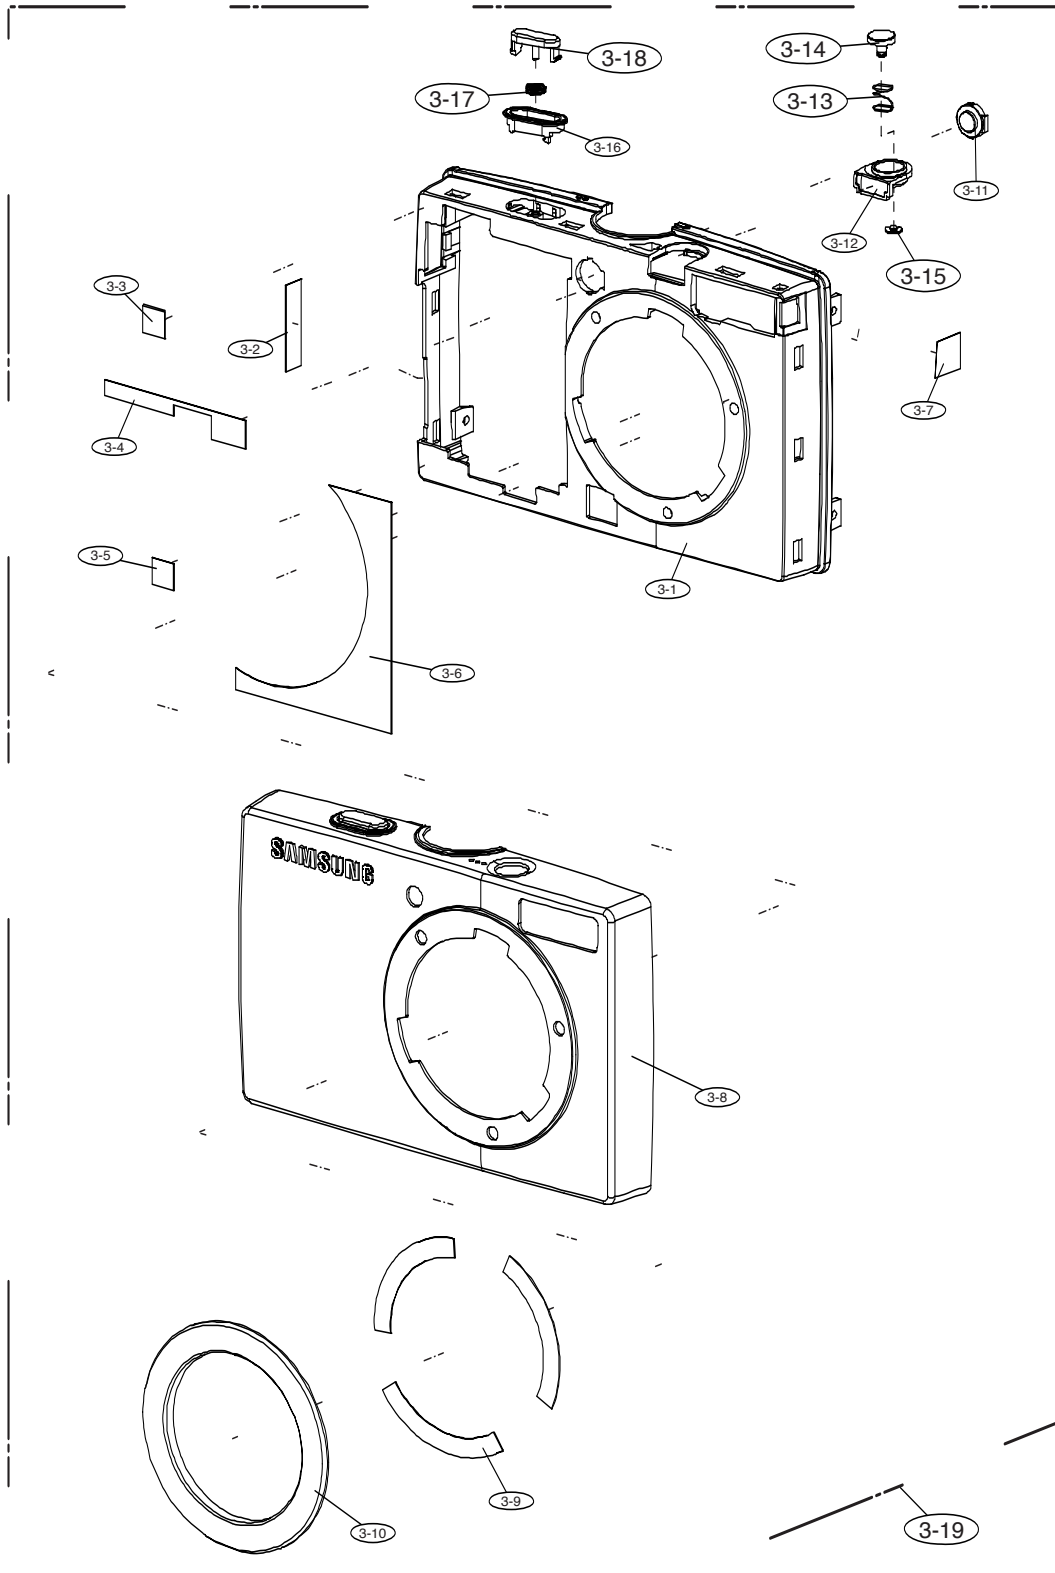

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
3-1	AD63-01825A	FRONT_INNER_COVER	1	X	
3-2	AD63-02469A	COVER_TAPE_2	1	X	
3-3	AD63-02792A	COVER_TAPE_6	1	X	
3-4	AD63-02472A	COVER_TAPE_5	1	X	
3-5	AD63-02792A	COVER_TAPE_6	1	X	
3-6	AD63-02471A	COVER_TAPE_4	1	X	
3-7	AD63-02495A	STROBE_TAPE	1	X	
3-8	AD63-01405A	FRONT_COVER_VLUU	1	X	SILVER
	AD63-02648A	FRONT_COVER_SAMSUNG	1	X	SILVER
	AD63-02649A	FRONT_COVER_藍調	1	X	SILVER
	AD63-02657A	FRONT_COVER_VLUU	1	X	BLACK
	AD63-02658A	FRONT_COVER_SAMSUNG	1	X	BLACK
	AD63-02659A	FRONT_COVER_藍調	1	X	BLACK
	AD63-02660A	FRONT_COVER_VLUU	1	X	RED
	AD63-02661A	FRONT_COVER_SAMSUNG	1	X	RED
	AD63-02662A	FRONT_COVER_藍調	1	X	RED
	AD63-02663A	FRONT_COVER_VLUU	1	X	BLUE
	AD63-02664A	FRONT_COVER_SAMSUNG	1	X	BLUE
	AD63-02665A	FRONT_COVER_藍調	1	X	BLUE
	AD63-02663A	FRONT_COVER_VLUU	1	X	PINK
	AD63-02664A	FRONT_COVER_SAMSUNG	1	X	PINK
AD63-02665A	FRONT_COVER_藍調	1	X	PINK	

III . EXPLODED VIEW AND PART LIST

► PARTS LIST


Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
3-9	AD63-02473A	FRONT_DECO_TAPE	3	X	
3-10	AD64-02170A	DECORATION_FRONT_RING	1	X	SILVER
	AD64-02243A	DECORATION_FRONT_RING	1	X	RED
3-11	AD64-02072A	AF_LED_WINDOW	1	X	
3-12	AD64-02075A	POWER_LED_WINDOW	1	X	
3-13	6107-001439	POWER BUTTON SPRING	1	O	
3-14	AD64-02083A	POWER_BUTTON	1	O	
3-15	6031-001628	RELEASE WASHER-QS4XN	1	O	
3-16	AD64-02080A	RELEASE_DECO	1	X	
3-17	AD81-07592A	RELEASE BUTTON SPRING	1	O	
3-18	AD64-02082A	RELEASE_BUTTON	1	O	

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
3-19	AD97-15433A	FRONT_COVER_ASSY_VLUU	1	O	SILVER
	AD97-15302A	FRONT_COVER_ASSY_SAMSUNG	1	O	SILVER
	AD97-15303A	FRONT_COVER_ASSY_藍調	1	O	SILVER
	AD97-15351A	FRONT_COVER_ASSY_VLUU	1	O	BLACK
	AD97-15352A	FRONT_COVER_ASSY_SAMSUNG	1	O	BLACK
	AD97-15353A	FRONT_COVER_ASSY_藍調	1	O	BLACK
	AD97-15354A	FRONT_COVER_ASSY_VLUU	1	O	RED
	AD97-15355A	FRONT_COVER_ASSY_SAMSUNG	1	O	RED
	AD97-15356A	FRONT_COVER_ASSY_藍調	1	O	RED
	AD97-15357A	FRONT_COVER_ASSY_VLUU	1	O	BLUE
	AD97-15358A	FRONT_COVER_ASSY_SAMSUNG	1	O	BLUE
	AD97-15359A	FRONT_COVER_ASSY_藍調	1	O	BLUE
	AD97-15360A	FRONT_COVER_ASSY_VLUU	1	O	PINK
	AD97-15361A	FRONT_COVER_ASSY_SAMSUNG	1	O	PINK
	AD97-15362A	FRONT_COVER_ASSY_藍調	1	O	PINK

III . EXPLODED VIEW AND PART LIST

3. FRONT COVER ASSEMBLY(M100)

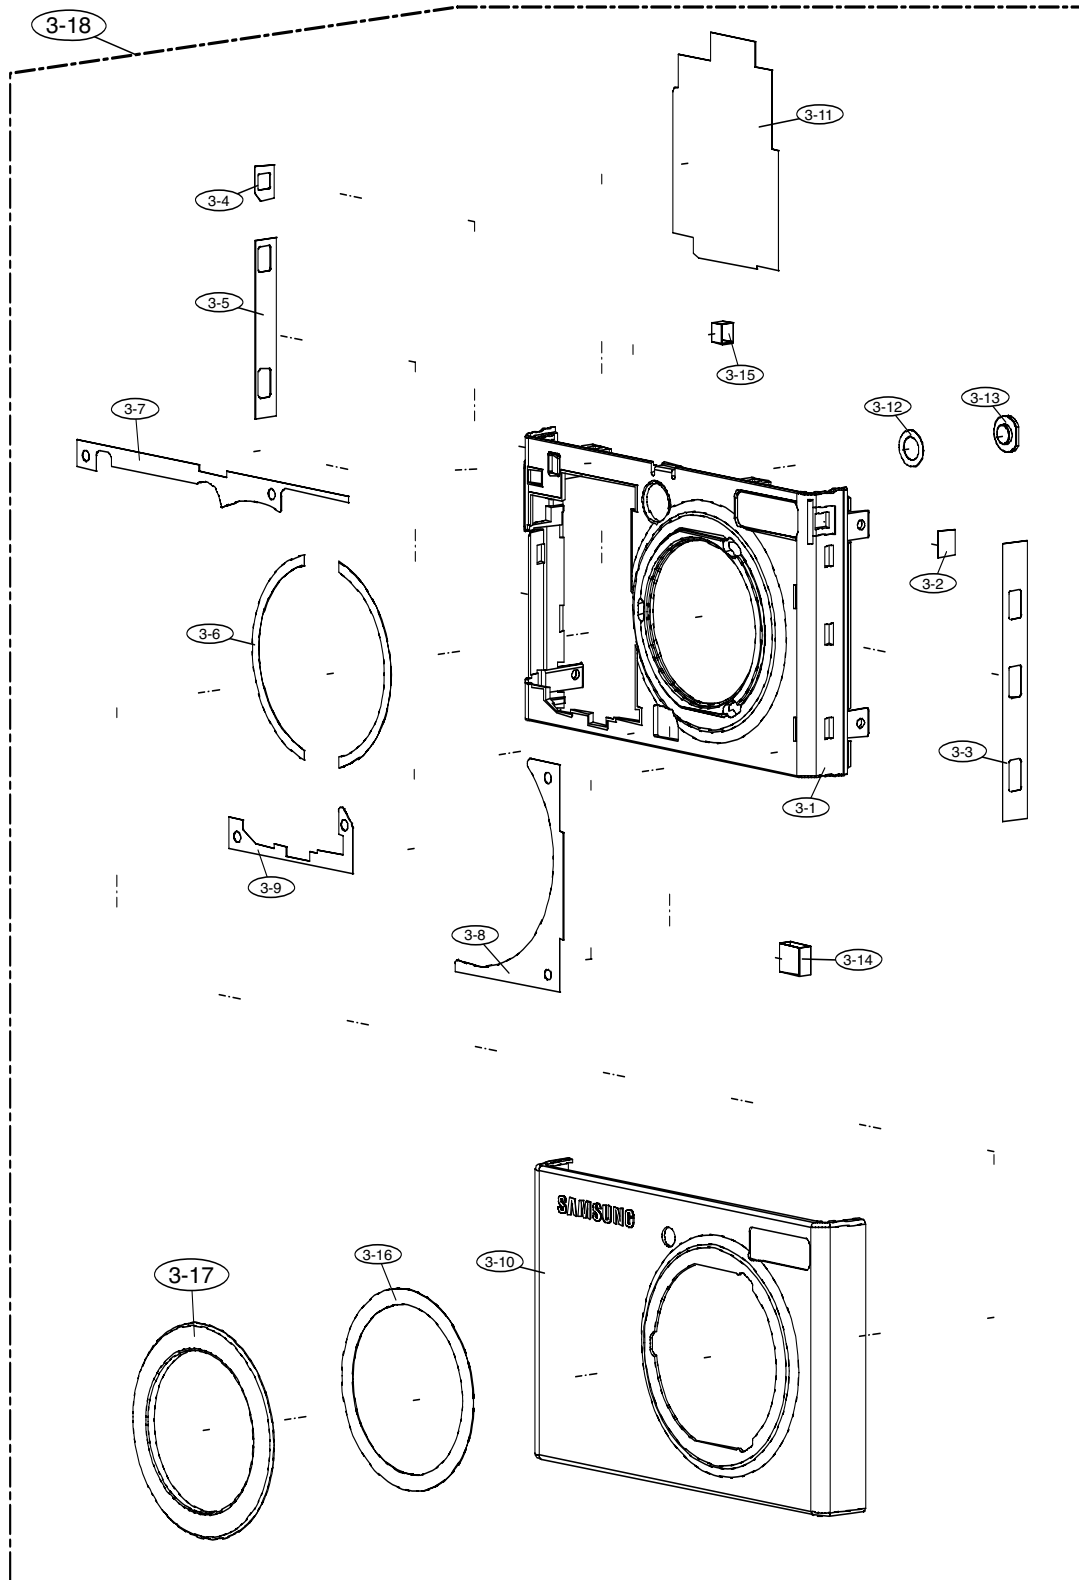


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
3-1	AD63-01864A	FRONT INNER COVER	1	X	
3-2	AD63-02800A	FRONT INNER INSUL TAPE	1	X	
3-3	AD63-02490A	COVER TAPE 5	1	X	
3-4	AD63-03085A	T/SHEET-COVER 7	1	X	
3-5	AD63-02935A	T/SHEET-COVER 6	1	X	
3-6	AD63-02488A	COVER TAPE 3	2	X	
3-7	AD63-02486A	COVER TAPE 1	1	X	
3-8	AD63-02487A	COVER TAPE 2	1	X	
3-9	AD63-02489A	COVER TAPE 4	1	X	
3-10	AD63-01413A	FRONT_COVER_VLUU_M100	1	X	SILVER
	AD63-03033A	FRONT_COVER_SAMSUNG_M100	1	X	SILVER
	AD63-03034	FRONT_COVER_藍調_M100	1	X	SILVER
3-11	AD63-02934A	T/SHEET-MAIN	1	X	
3-12	AD63-02795A	AF LED WINDOW TAPE	1	X	
3-13	AD64-02117A	AF LED WINDOW	1	X	
3-14	AD63-02641A	COVER SHIELD FOAM	1	X	
3-15	AD63-02640A	MAIN SHIELD FOAM	1	X	
3-16	AD63-02491A	FRONT DECO TAPE	1	X	
3-17	AD64-02168A	DECORATION FRONT RING	1	O	
3-18	AD97-15729A	FRONT_COVER_ASSY_VLUU_M100	1	O	SILVER
	AD97-15730A	FRONT_COVER_ASSY_SAMSUNG_M100	1	O	SILVER
	AD97-15731A	FRONT_COVER_ASSY_藍調_M100	1	O	SILVER

III . EXPLODED VIEW AND PART LIST

4. BACK COVER ASSEMBLY

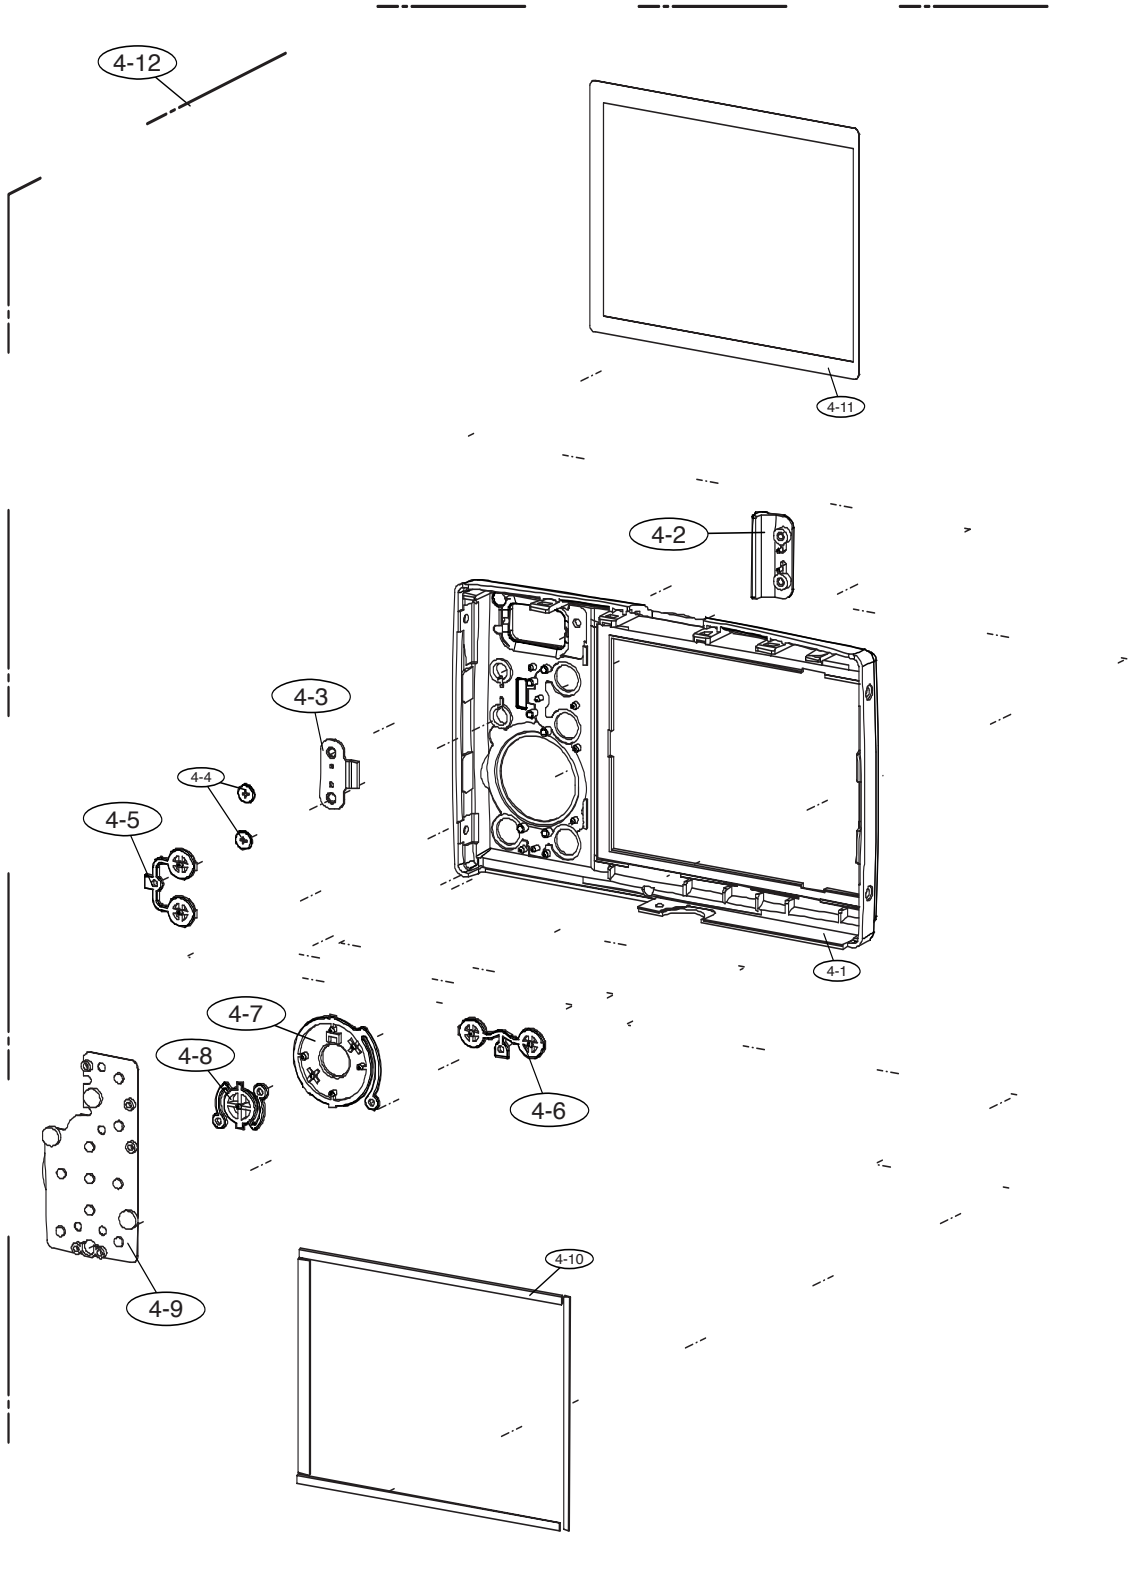


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
4-1	AD63-01827A	BACK_COVER_L100_L1_P800	1	X	SILVER
	AD63-02720A	BACK_COVER_L100_L1_P800	1	X	BLACK
	AD63-02721A	BACK_COVER_L100_L1_P800	1	X	RED
	AD63-02722A	BACK_COVER_L100_L1_P800	1	X	BLUE
	AD63-02855A	BACK_COVER_L100_L1_P800	1	X	PINK
	AD63-01865A	BACK_COVER_M100	1	X	SILVER
4-2	AD61-03510A	STRAP HOLDER	1	O	SILVER
	AD61-03641A	STRAP HOLDER	1	O	BLACK
	AD61-03642A	STRAP HOLDER	1	O	RED
	AD61-03643A	STRAP HOLDER	1	O	BLUE
	AD61-03656A	STRAP HOLDER	1	O	PINK
4-3	AD61-03200A	STRAP HOLDER_PLATE	1	O	
4-4	6001-002157	SC_1415_35M_NYLOK	2	X	
4-5	AD64-02077A	FUNCION_KEY_1	1	O	
4-6	AD64-02078A	FUNCION_KEY_2	1	O	
4-7	AD64-02079A	NAVI_BUTTON	1	O	
4-8	AD64-02073A	OK_BUTTON	1	O	
4-9	AD73-00267A	BUTTON_RUBBER	1	O	
4-10	AD63-02465A	LCD_CUSHION_1	2	X	
	AD63-02466A	LCD_CUSHION_2	1	X	
	AD63-02467A	LCD_CUSHION_3	1	X	
4-11	AD63-02464A	LCD_WINDOW_TAPE	1	X	
4-12	AD97-15436A	BACK_COVER_ASSY_L100_L1_P800	1	O	SILVER
	AD97-15341A	BACK_COVER_ASSY_L100_L1_P800	1	O	BLACK
	AD97-15342A	BACK_COVER_ASSY_L100_L1_P800	1	O	RED
	AD97-15343A	BACK_COVER_ASSY_L100_L1_P800	1	O	BLUE
	AD97-15344A	BACK_COVER_ASSY_L100_L1_P800	1	O	PINK
	AD97-15736A	BACK_COVER_ASSY_M100	1	O	SILVER

III . EXPLODED VIEW AND PART LIST

5. TOP COVER ASSEMBLY(L100,L1,P800)

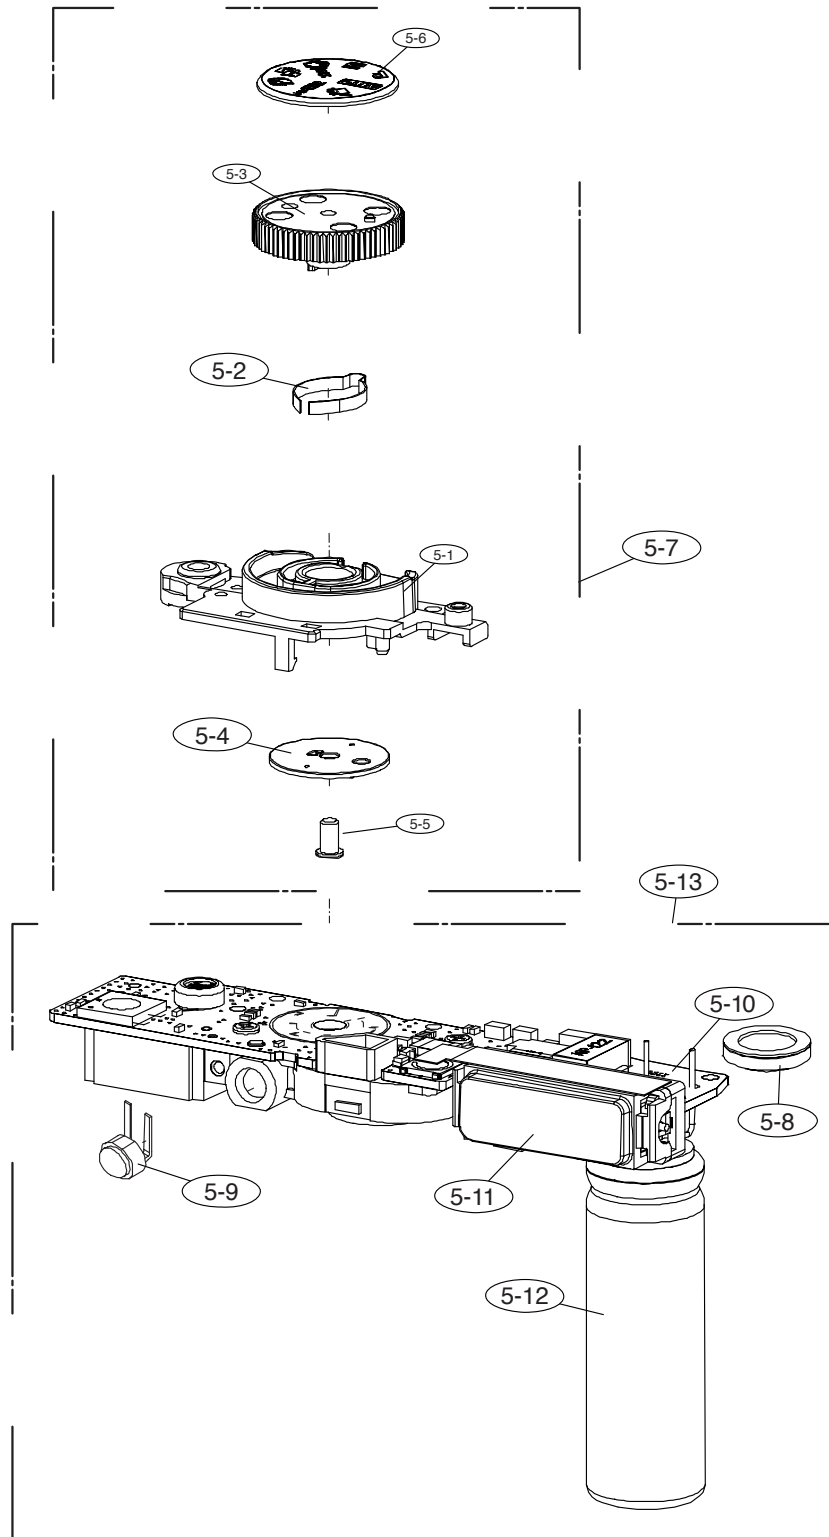


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
5-1	AD61-03509A	MODE_DIAL HOLDER	1	X	SILVER
5-2	AD61-03205A	MODE_CLICK_PLATE	1	O	
5-3	AD64-02076A	MODE_DIAL	1	X	SILVER
	AD64-02251A	MODE_DIAL	1	X	BLACK
	AD64-02252A	MODE_DIAL	1	X	RED
	AD64-02253A	MODE_DIAL	1	X	BLUE
	AD64-02260A	MODE_DIAL	1	X	PINK
5-4	AD97-14371A	MODE_CONTACT_ASSY	1	O	
5-5	6003-001687	SCREW	1	X	
5-6	AD63-02526A	MODE_DIAL_CAP-L483_A	1	X	
5-7	AD97-15430A	MODE_DIAL HOLDER_ASSY	1	O	SILVER
	AD97-15289A	MODE_DIAL HOLDER_ASSY	1	O	BLACK
	AD97-15290A	MODE_DIAL HOLDER_ASSY	1	O	RED
	AD97-15291A	MODE_DIAL HOLDER_ASSY	1	O	BLUE
	AD97-15292A	MODE_DIAL HOLDER_ASSY	1	O	PINK
5-8	3001-002339	SPEAKER	1	O	
5-9	0601-002515	AF_LED	1	O	
5-10	AD92-00465A	TOP_PCB_SMD_ASSY	1	O	
5-11	AD97-15431A	FLASH_MODULE_ASSY	1	O	
5-12	2401-004418	MAIN_CONDENSOR_100UF	1	O	
5-13	AD92-00464A	TOP_PCB_ASSY	1	O	

III . EXPLODED VIEW AND PART LIST

5. TOP COVER ASSEMBLY(M100)

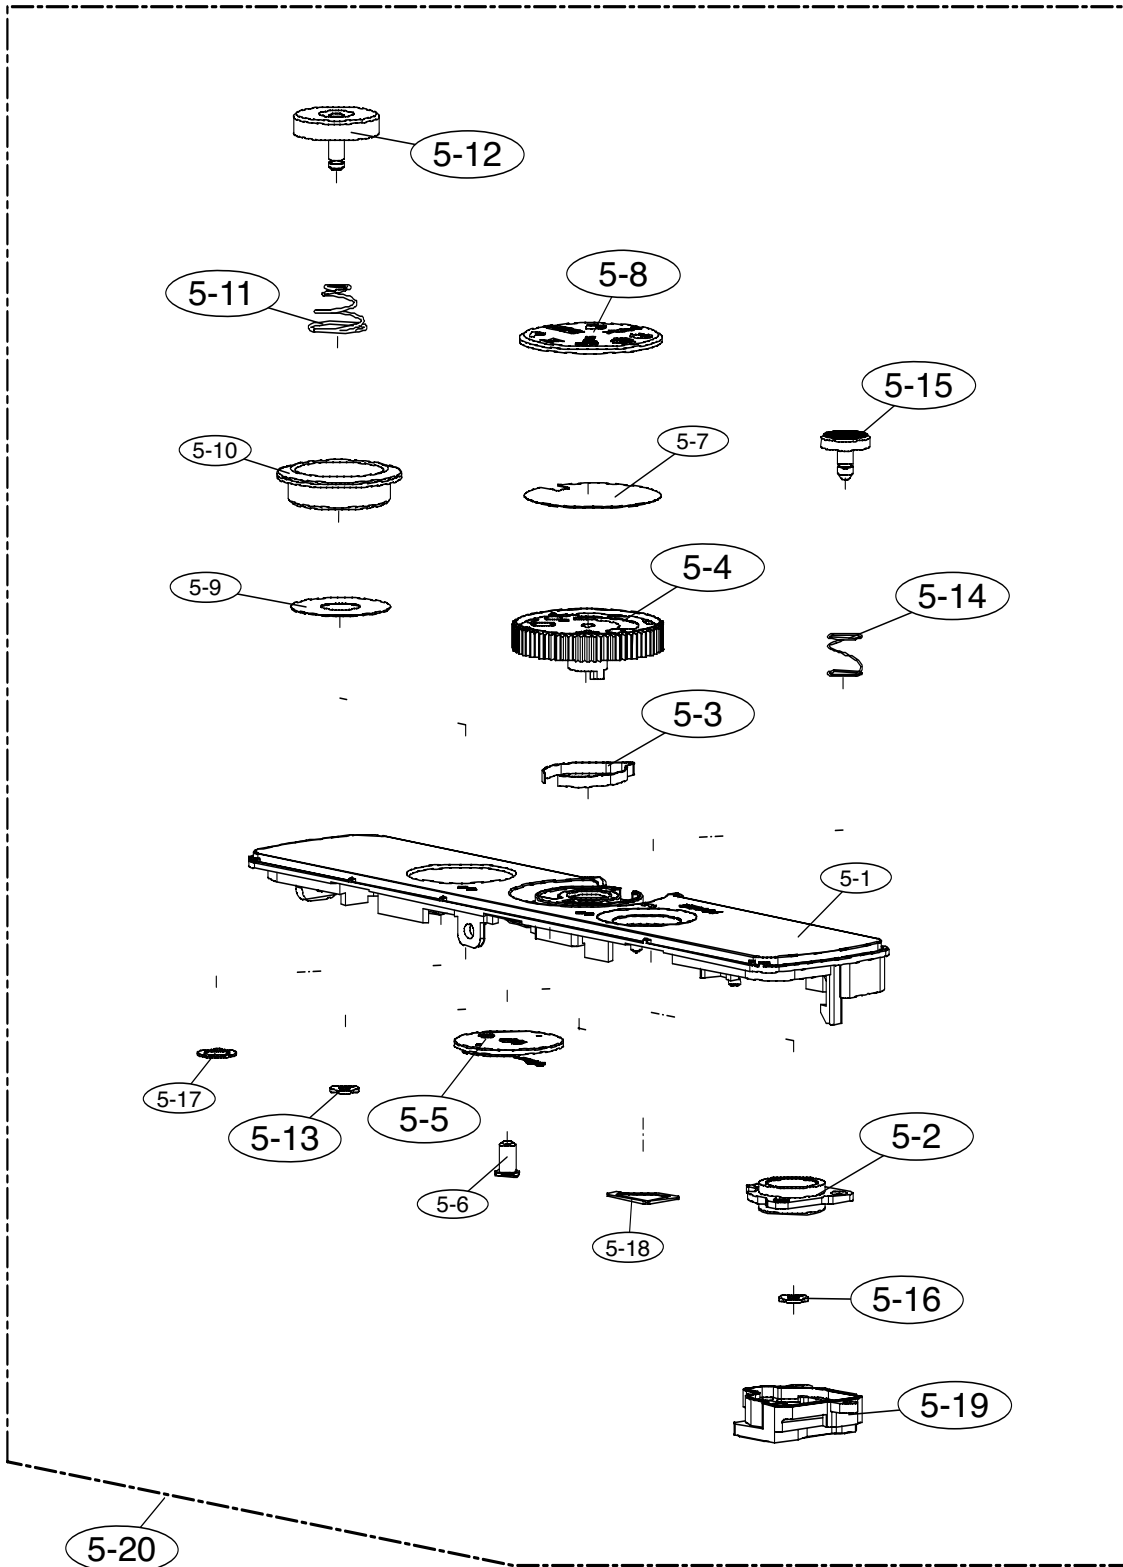


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
5-1	AD63-01867A	TOP COVER	1	X	
5-2	AD64-02126A	POWER LED WINDOW	1	O	
5-3	AD61-03307A	MODE CLICK PLATE	1	O	
5-4	AD64-02127A	MODE DIAL	1	O	
5-5	AD97-14371A	MODE CONTACT ASS'Y	1	O	
5-6	6003-001688	SCREW	1	X	
5-7	AD63-02799A	MODE DIAL CAP TAPE	1	X	
5-8	AD63-02525A	MODE DIAL CAP	1	O	
5-9	AD63-02798A	RELEASE DECO TAPE	1	X	
5-10	AD64-02168A	DECORATION FRONT RING	1	X	
5-11	AD81-07604A	RELEASE BUTTON SPRING	1	O	
5-12	AD64-02130A	RELEASE BUTTON	1	O	
5-13	6031-001628	RELEASE WASHER	1	O	
5-14	6107-001439	POWER BUTTON SPRING	1	O	
5-15	AD64-02131A	POWER BUTTON	1	O	
5-16	6031-001628	RELEASE WASHER	1	O	
5-17	AD63-02797A	MIC SCREEN	1	X	
5-18	AD63-02475A	SPEAKER SCREEN	1	X	
5-19	AD63-02770A	POWER LED CAP	1	O	
5-20	AD97-15714A	TOP COVER ASSY_M100	1	O	SILVER

III . EXPLODED VIEW AND PART LIST

6. BARREL ASSEMBLY

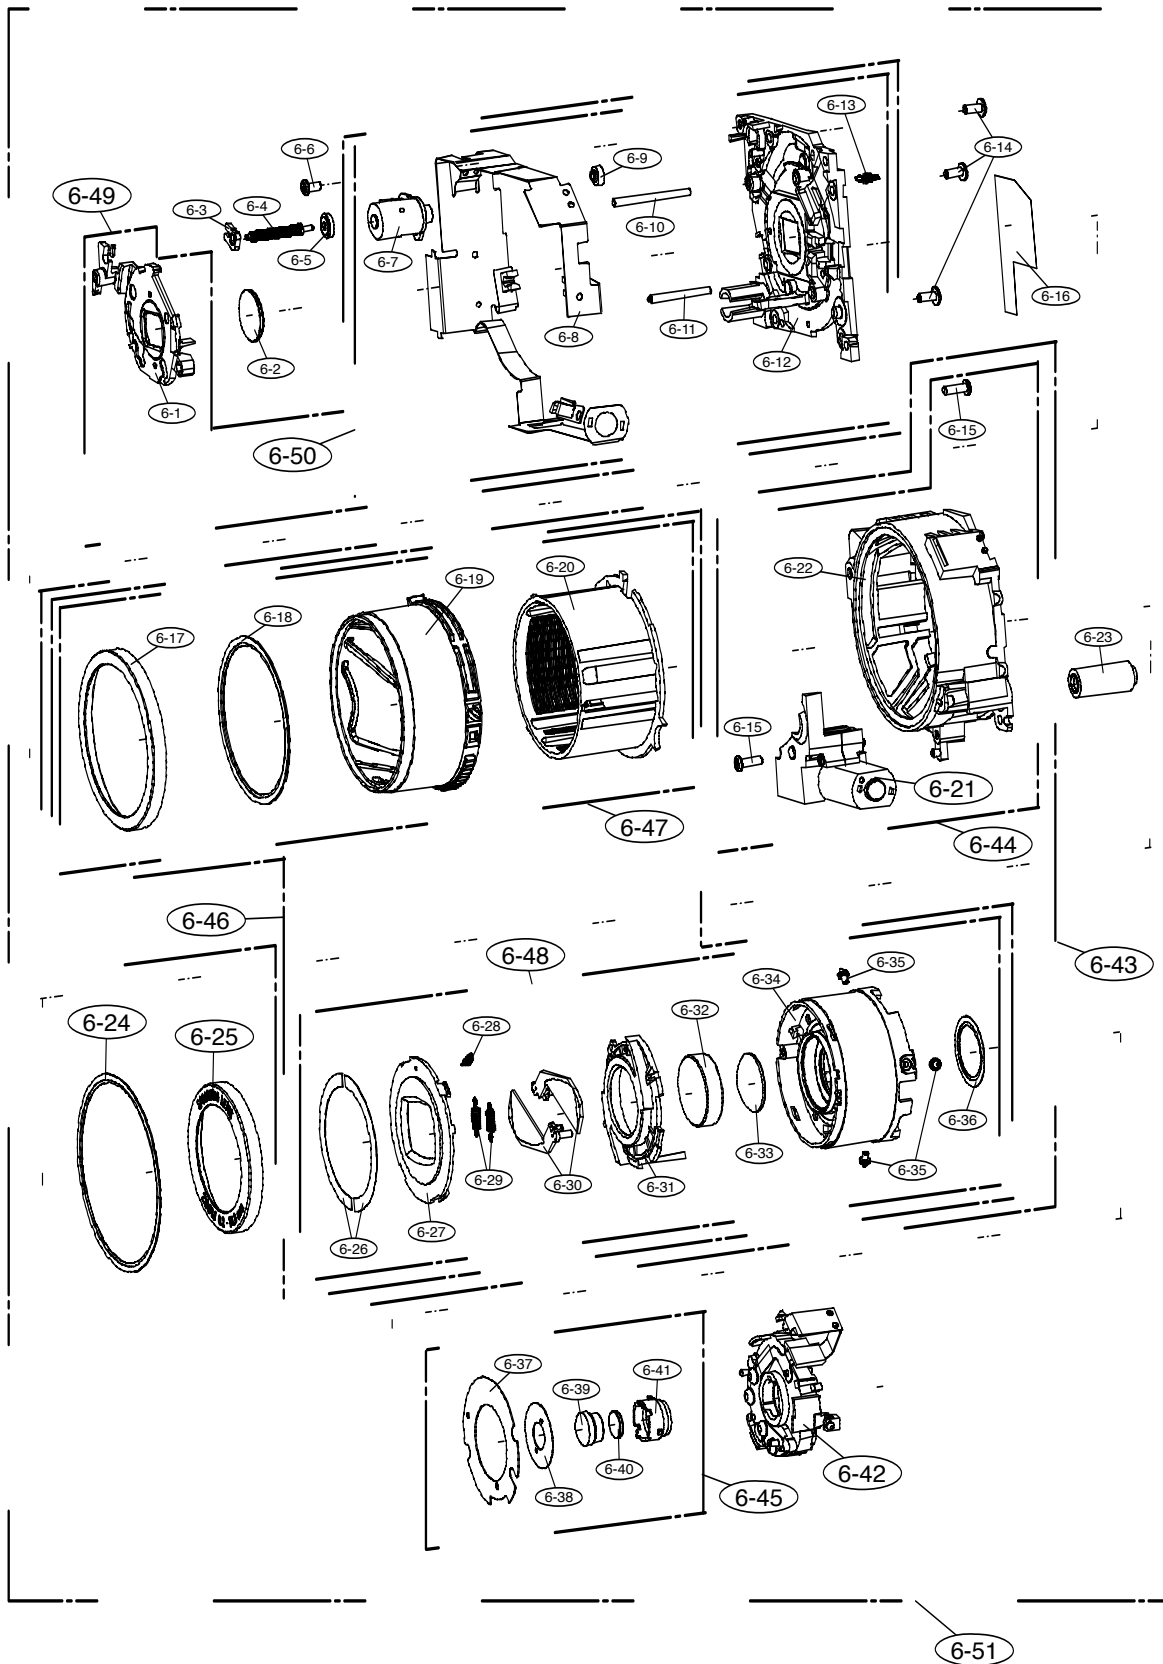

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
6-1	AD67-00743A	3RD LENS BARREL	1	X	
6-2	AD61-03445A	AF CLIP	1	X	
6-3	AD67-00770A	G6 LENS	1	X	
6-4	6003-001682	AF LEAD SCREW	1	X	
6-5	AD66-00517A	AF GEAR B	1	X	
6-6	6003-001629	SCREW(1.4*2.5)	1	X	
6-7	3101-001449	AF MOTOR ASSY	1	X	
6-8	AD97-15157A	MAIN FPCB SMD ASSY	1	X	
6-9	AD66-00516A	AF GEAR A	1	X	
6-10	AD66-00570A	AF GUIDE BAR A	1	X	
6-11	AD66-00571A	AF GUIDE BAR B	1	X	
6-12	AD61-03447A	LENS BASE	1	X	
6-13	6107-001477	AF SPRING	1	X	
6-14	6003-001630	SCREW(1.4*3.5)	3	X	
6-15	6003-001717	SCREW1445	2	X	
6-16	AD81-08512A	FPCB TAPE A	1	X	
6-17	AD64-01786A	CAM DECORING	1	X	SILVER
	AD64-01788A	CAM DECORING	1	X	BLACK

III . EXPLODED VIEW AND PART LIST

► PARTS LIST


Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
6-18	AD63-02418A	CAM SHIELD	1	X	
6-19	AD67-00739A	CAM BARREL	1	X	SILVER
	AD67-00745A	CAM BARREL	1	X	BLACK
6-20	AD67-00740A	GUIDE PLATE	1	X	
6-21	AD31-00069A	ZOOM MODULE ASSY	1	O	
6-22	AD67-00738A	OUTER GUIDE BARREL	1	X	
6-23	AD66-00518A	IDLE GEAR	1	X	
6-24	AD63-02419A	OGB SHIELD	1	O	
6-25	AD64-01785A	FRONT DECORING	1	O	SILVER
	AD64-01787A	FRONT DECORING	1	O	BLACK
6-26	AD63-02446A	FRONT DECORING TAPE	2	X	
6-27	AD64-01843A	FRONT PANNEL	1	X	
6-28	6107-001484	BARRIER OPEN SPRING	1	X	
6-29	6107-001476	BARRIE SPRING	2	X	
6-30	AD63-01529A	BARRIER A	2	X	
6-31	AD66-00515A	BARRIER LEVER	1	X	
6-32	AD67-00602A	G1 LENS	1	X	
6-33	AD67-00741A	G2 LENS	1	X	
6-34	AD67-00741A	ZOOM RING	1	X	SILVER
	AD67-00744A	ZOOM RING	1	X	BLACK

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
6-35	AD66-00569A	MOVE PIN	3	X	
6-36	AD63-01299A	G2 SHEET	1	X	
6-37	AD61-03267A	SHUTTER COVER PLATE	1	X	
6-38	AD63-01300A	G3 SHEET	1	X	
6-39	AD97-13648A	G3/G4 LENS ASS'Y	1	X	
6-40	AD67-00524A	G4 LENS	1	X	
6-41	AD67-00742A	2ND LENS BARREL	1	X	
6-42	AD97-13365A	SHUTTER ASSY	1	O	
6-43	AD97-15119A	SUB_BARREL_ASSY	1	O	SILVER
	AD97-15122A	SUB_BARREL_ASSY	1	O	BLACK
6-44	AD97-13681A	OUT_GUIDE_BARREL_ASSY	1	O	
6-45	AD97-13699A	2ND_BARREL_TOTAL_ASSY	1	O	
6-46	AD97-13699A	CAM_BARREL_TOTAL_ASSY	1	O	SILVER
	AD97-15125A	CAM_BARREL_TOTAL_ASSY	1	O	BLACK
6-47	AD97-13683A	CAM_BARREL_ASSY	1	O	SILVER
	AD97-13684A	CAM_BARREL_ASSY	1	O	BLACK
6-48	AD97-13687A	ZOOM_RING_ASSY	1	O	
6-49	AD97-13680A	LENS_BASE_ASSY	1	O	
6-50	AD97-15144A	SUB_LENS_BASE_ASSY	1	O	
6-51	AD97-13691A	BARREL ASSY	1	O	SILVER
	AD97-13692A	BARREL ASSY	1	O	BLACK

III . EXPLODED VIEW AND PART LIST

7. PACKING ITEM

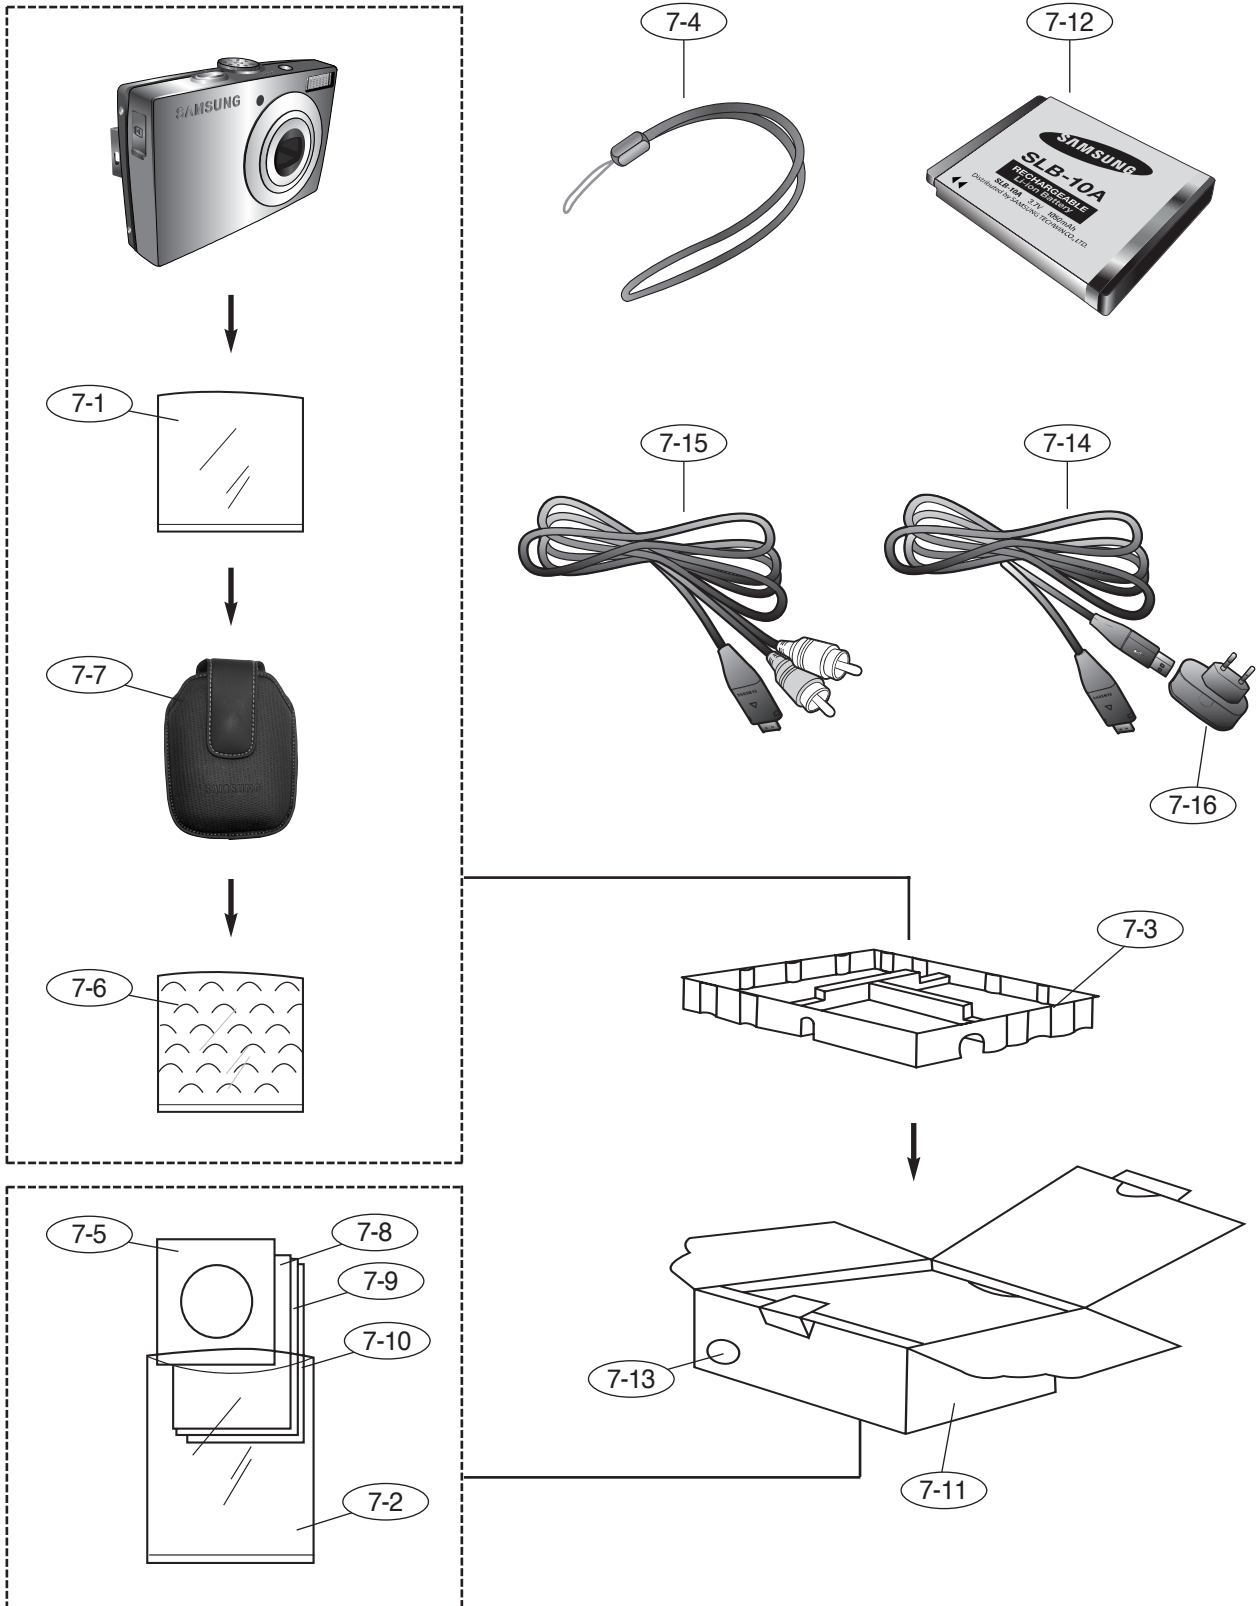

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
7-1	6902-000924	PE BAG (FOR CAMERA)	1	O	
7-2	6902-000921	PE BAG (FOR ACCESSORY)	1	O	
7-3	AD69-01300A	Pulp_mold_NV8	1	O	
7-4	AD63-02602A	STRAP_VLUU_L730_Silver	1	O	
	AD63-02603A	STRAP_VLUU_L730_Black	1	O	
7-5	AD46-00162A	DRIVER_MASTER_VLUU_L100	1	O	
	AD46-00177A	DRIVER_MASTER_VLUU_L1	1	O	
	AD46-00180A	DRIVER_MASTER_Samsung_P800	1	O	
	AD46-00173A	DRIVER_MASTER_VLUU_M100	1	O	
7-6	6902-000939	AIR BAG_L730_830(FOR BODY)	1	O	
7-7	AD69-01466A	POUCH_L100_SILVER	1	O	
	AD69-01467A	POUCH_L100_BLACK	1	O	
7-8	AD68-01931A	U_MANUAL_L100_CHI_S	1	O	
7-9	AD68-01930A	QS_MANUAL_VLUU_L100			
	AD68-01932A	QS_L100_E_G_F_SP_I_DU_P	1	O	
	AD68-01933A	QS_L100_E_G_FI_SW_DA_RU	1	O	
	AD68-01934A	QS_L100_EN_TU_CH_IN_AR_TH	1	O	
	AD68-01935A	QS_L100_ENG_SPA_FRA_3	1	O	
	AD68-01936A	QS_L100_E_G_P_CZ_S_H_R_B	1	O	
	AD68-02868A	QS_MANUAL_VLUU_L1	1	O	
	AD68-02886A	QS_P800_ENG	1	O	
	AD68-02832A	QS_MANUAL_VLUU_M100	1	O	
	AD68-02833A	U_M_M100_CHI_S	1	O	
	AD68-02834A	QS_M100_E_G_F_SP_I_DU_P	1	O	
	AD68-02835A	QS_M100_E_G_FI_SW_DA_RU	1	O	
	AD68-02836A	QS_M100_EN_TU_CH_IN_AR_TH	1	O	
	AD68-02837A	QS_M100_ENG_SPA_FRA_3	1	O	
	AD68-02838A	QS_M100_E_G_P_CZ_S_H_R_B	1	O	

III . EXPLODED VIEW AND PART LIST

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
7-10	6801-001642	WARRANTY CARD_KOREA	1	O	
	6801-001646	WARRANTY CARD_EXP	1	O	
	6801-001658	WARRANTY CARD_2 YERARS	1	O	
	6801-001650	WARRANTY CARD_RUS(3 YEARS)	1	O	
	6801-001644	WARRANTY CARD_TSOE(CHINA)	1	O	
	6801-001647	CARD_PRODUCT(Mexico)	1	O	
	6801-001656	WARRANTY CARD_IRAN	1	O	
	6801-001659	WARRANTY CARD_TURKEY	1	O	
	6801-001660	SERVICE_CENTER_TURKEY	1	O	
	6801-001662	WARRANTY_CARD_Argentina	1	O	
	6801-001664	LOCAL_WARRANTY_CARD_INDIA	1	O	
	6801-001665	LOCAL_WARRANTY_CARD_ITALIA	1	O	
7-11	AD69-01420A	GT_BOX_VLUU_L100_SILVER	1	O	
	AD69-01435A	GT_BOX_L100_CHI_S_SILVER	1	O	
	AD69-01421A	GT_BOX_L100_EXP_AUS_Silver	1	O	
	AD69-01422A	GT_BOX_L100_USA_Silver	1	O	
	AD69-01423A	GT_BOX_L100_CAN_Silver	1	O	
	AD69-01671A	GT_BOX_VLUU_L1_SILVER	1	O	
	AD69-01679A	GT_BOX_P800_EXP_AUS	1	O	
	AD69-01620A	GT_BOX_VLUU_M100_SILVER	1	O	
	AD69-01622A	GT_BOX_M100_EXP_AUS_Silver	1	O	
	AD69-01621A	GT_BOX_M100_CHI_S_SILVER	1	O	
	AD69-01623A	GT_BOX_M100_USA_SILVER	1	O	
	AD69-01624A	GT_BOX_M100_CAN_SILVER	1	O	

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
7-12	4302-001221	LITHIUM-ION_SLB-10A	1	O	
7-13	AD81-01565A	GT_COLOR_STICKER_L70_Silver	1	O	
	AD81-01535A	COLOR STICKER_Digimax S500_BLACK	1	O	
	AD81-01566A	COLOR STICKER_Digimax S600/S730_RED	1	O	
	AD68-01624A	COLOR STICKER_L100_BLUE	1	O	
	AD81-01572A	COLOR STICKER_Digimax S730_PINK	1	O	
7-14	AD39-00147A	20PIN_USB_Cable_SUC-C3	1	O	
7-15	AD39-00146A	20PIN_AV_CABLE_SCC-AV20	1	O	
7-16	AD44-00133A	AC_ADAPTOR_4.2V (SAC-47)_EXP	1	O	
	AD44-00131A	AC_ADAPTOR_4.2V (SAC-47)_USA	1	O	
	AD44-00130A	AC_ADAPTOR_4.2V (SAC-47)_UK	1	O	
	AD44-00135A	AC_ADAPTOR_4.2V (SAC-47)_AUS	1	O	
	AD44-00134A	AC_ADAPTOR_4.2V (SAC-47)_CHI_TSOE	1	O	
	AD44-00132A	AC_ADAPTOR_4.2V (SAC-47)_ARG	1	O	