


8. EXPLODED VIEW AND PARTS LIST CAVITY PARTS

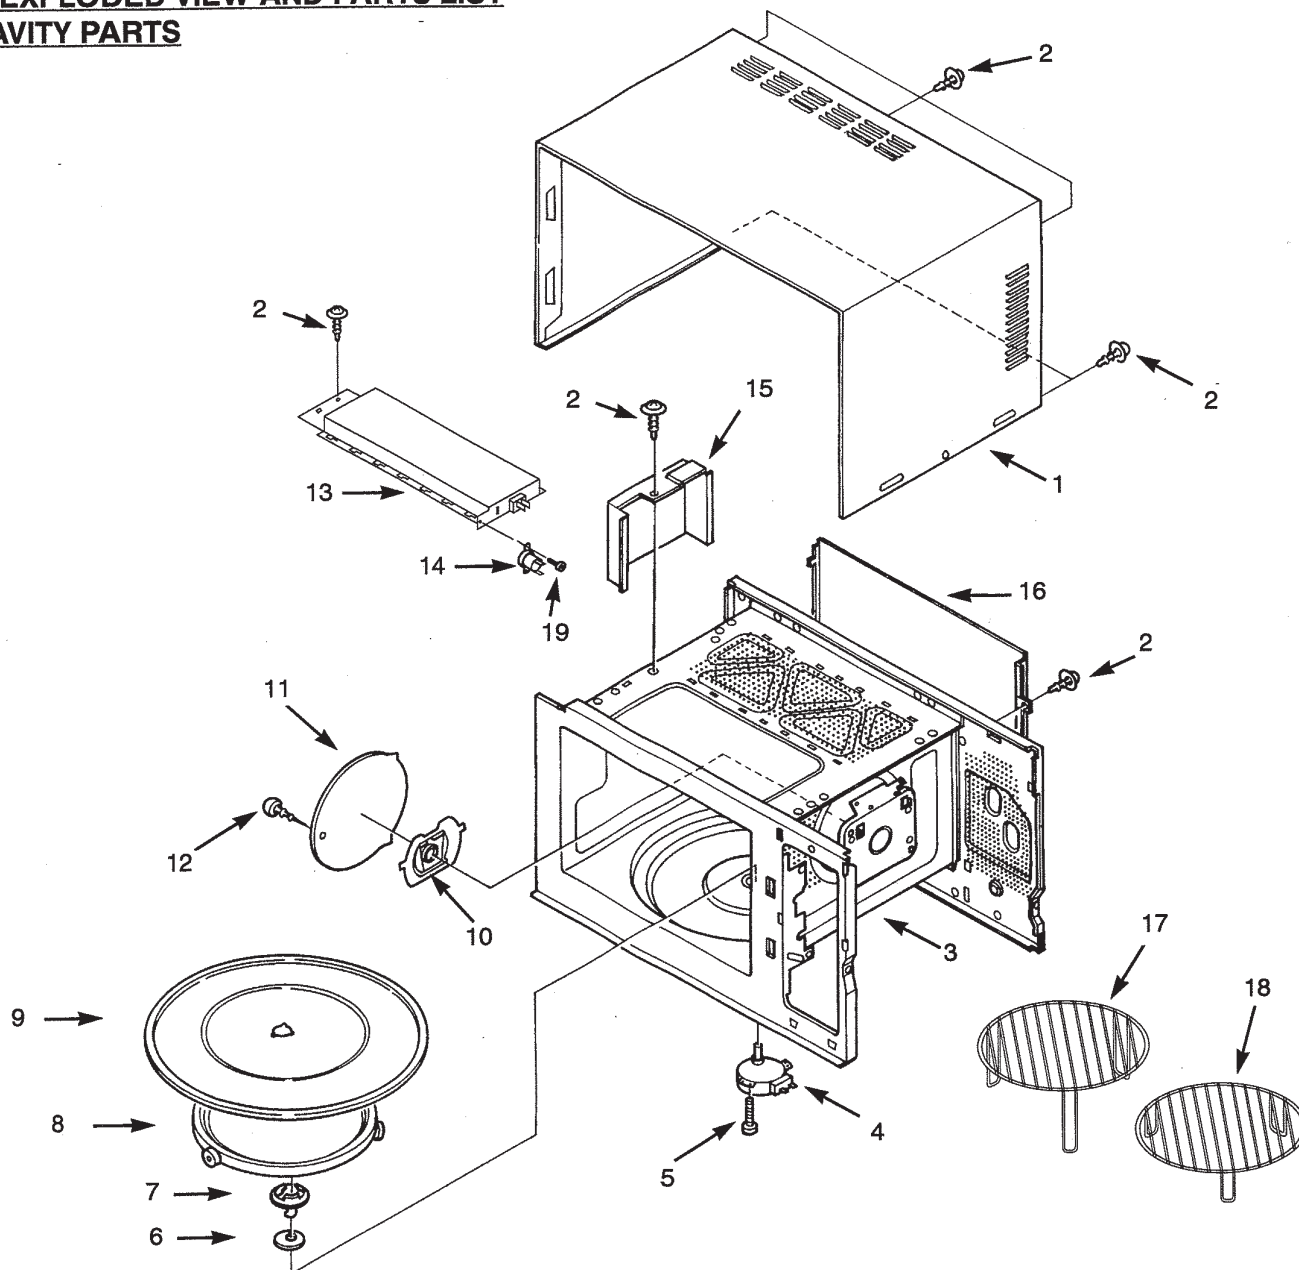


EM-SL20

Key No.	Part No.	Description	Q'ty
1	617 220 4376	Cabinet	1
2	411 156 5601	SCR TPG PAN+F+S 4x10	7
3	617 221 2814	Cavity	1
4	617 123 9928	Gear Motor	1
5	411 001 6005	SCR S-TPG PAN 4x8	2
6	617 080 5315	Special Washer	1
7	617 144 4476	Turntable Shaft	1
8	617 155 2386	Roller	1
9	617 167 1421	Glass Tray	1
10	617 177 3156	Antenna Complete	1
11	617 169 8930	Cavity Cover	1
12	412 037 5901	SCR TPG TRS 4x6K	1

Key No.	Part No.	Description	Q'ty
13	617 221 0025	Heater Complete	1
14	617 202 4554	Thermostat, 150°C	1
15	617 167 0431	Duct	1
16	617 169 6875	Frame Rear Plate	1
17	617 166 2153	Cook Net	1
18	617 170 5058	Cook Net	1
19	411 010 5600	SCR EVR PAN 3x6	1

SWITCHES AND MICROWAVE PARTS

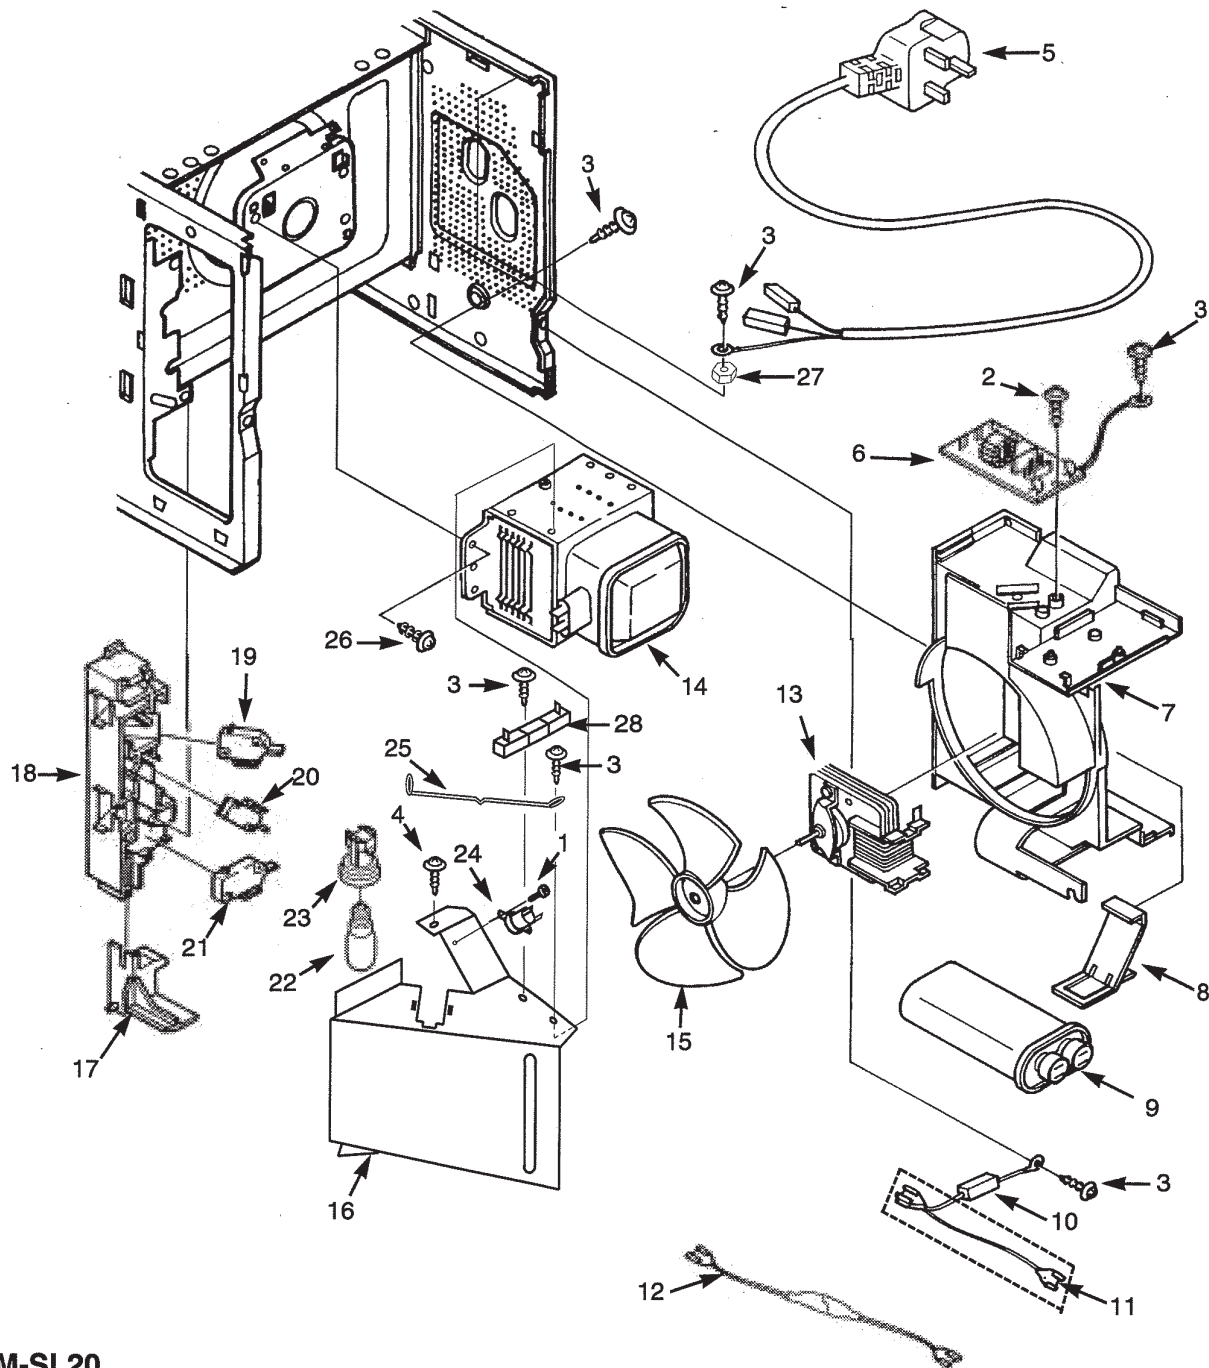


EM-SL20

Key No.	Part No.	Description	Q'ty
1	411 010 5600	SCR EVR PAN 3x6	1
2	411 156 5601	SCR TPG PAN+F+S 4x10	1
3	411 156 5502	SCR S-TPG PAN+F+S 4x10	6
4	411 171 9004	SCR TPG TRS+FLG 3x8	1
5	617 213 2990	Power Supply Cord	1
6	617 179 0746	Terminal Cct Board	1
7	617 167 0417	Space Partition	1
8	617 162 2041	Capacitor Band	1
9	617 213 1849	Capacitor 1.14uF	1
10	617 177 3156	Diode Ass'y	1
11	617 167 0561	Lead Wire Ass'y	1
12	617 213 4819	HV Fuse	1
13	617 167 0592	Blower Motor	1
14	415 002 5005	Magnetron	1
15	617 112 1025	Fan	1
16	617 220 1764	Duct	1
17	617 124 1181	Latch Lever	1

Key No.	Part No.	Description	Q'ty
18	617 167 5627	Lever Stopper	1
19	617 220 4529	Door Sensing Switch	1
20	617 220 4536	Interlock Monitor Switch	1
21	617 220 4529	Primary Interlock Switch	1
22	617 149 3009	Lamp 250V 25W	1
23	617 119 3480	Lamp Socket	1
24	617 202 4561	Thermostat V122°C	1
25	617 220 1757	Stay Plate	1
26	617 218 9673	Special Screw	4
27	411 004 5609	NUT HEX M4	1
28	402 071 0703	Ceramic Resistor	1


MICROWAVE PARTS

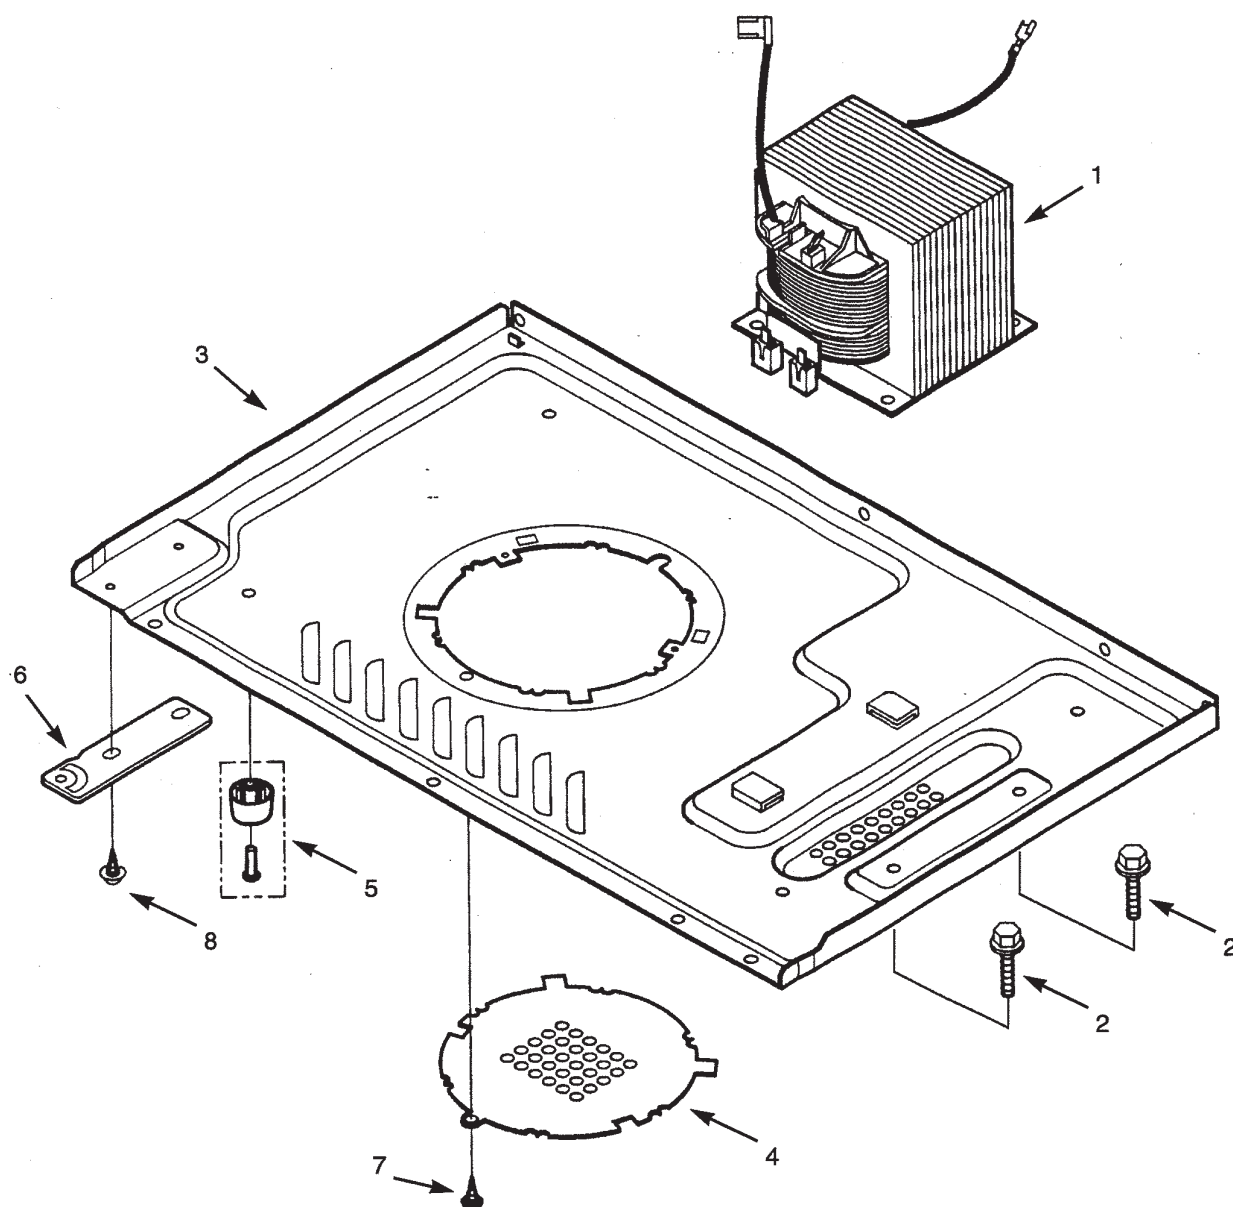

EM-SL20

Key No.	Part No.	Description	Q'ty
1	617 209 4557	Transformer	1
2	617 102 7495	Special Screw	2
3	617 225 6153	Bottom Plate Assembly	1
4	-----	Gear Motor Cover	1
5	617 144 5435	Foot Cushion Assembly	4
6	617 166 7493	Bottom Hinge	1
7	411 156 5602	SCR S-TPG PAN+F+S 4x10	1
8	617 102 7495	Special Screw	2

DOOR PARTS

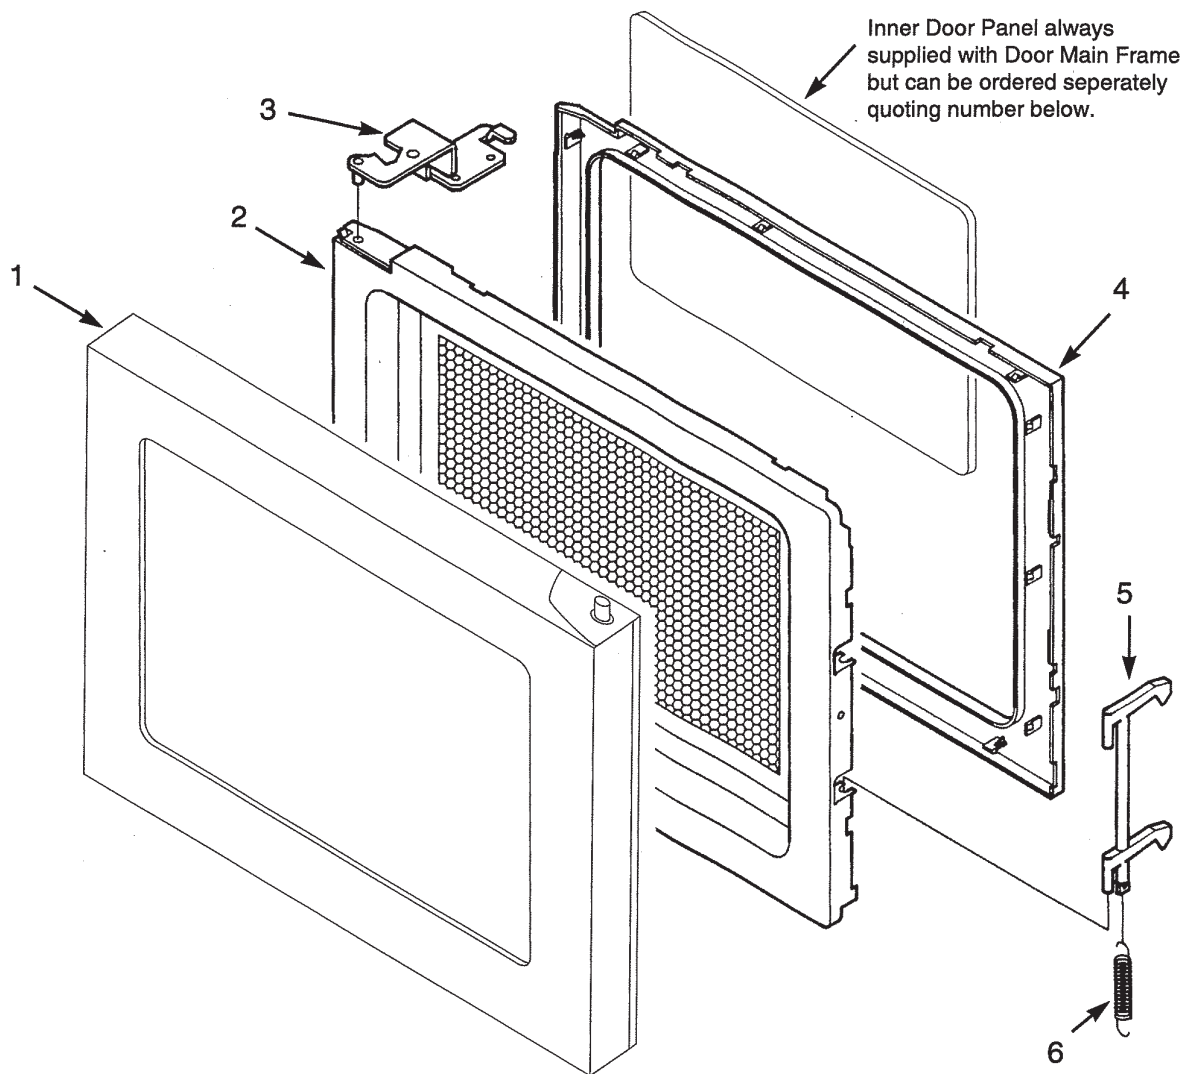


EM-SL20

Key No.	Part No.	Description	Q'ty
1	617 226 4677	Door Cover Assembly	1
2	617 169 6790	Door Main Frame(Supplied with inner Door Panel)	1
*	617 144 2472	Glass Inner Door Panel	1
3	617 167 0189	Hinge	1
4	617 167 1292	Choke Dielectric	1
5	617 101 1487	Door Latch	1
6	617 101 1494	Spring	1
*	617 224 0831	Door Assembly	1

NB. Please refer to the detailed instructions for door setting on page 14 of the service manual before changing, adjusting or repairing these parts.

CONTROL PANEL PARTS

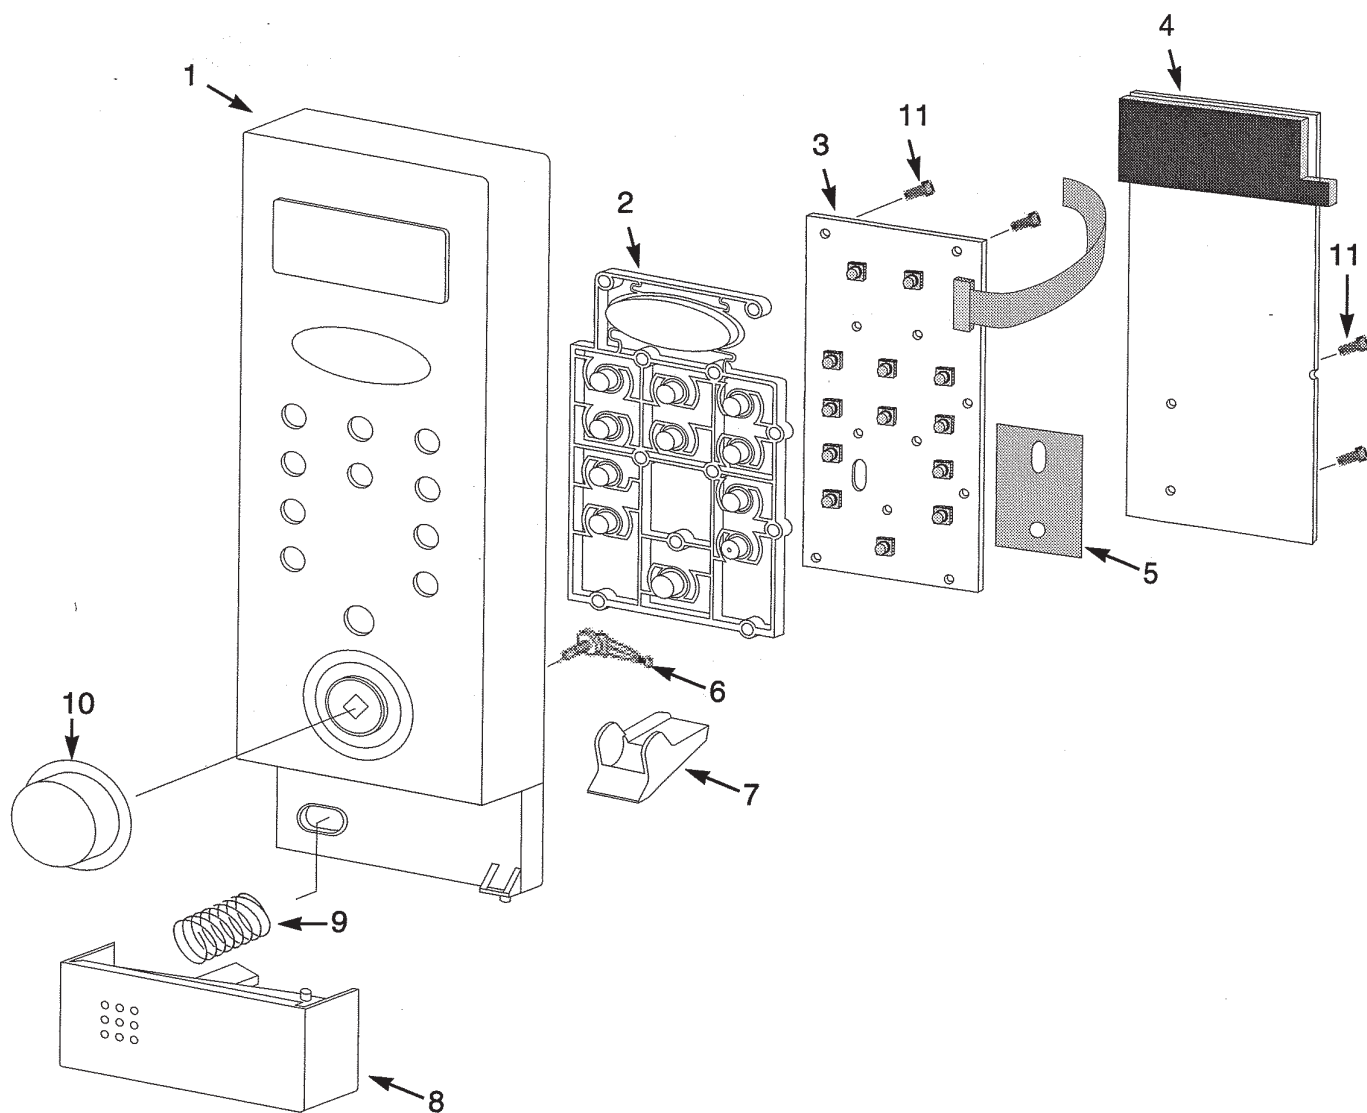

EM-SL20

Key No.	Part No.	Description	Qty
1	617 226 4615	Control Base Assembly	1
2	617 222 2448	Knob Body	1
3	617 219 5520	PCB Complete	1
4	617 224 0275	PCB Complete	1
5	617 208 4602	Insulation Sheet	1
6	617 226 1034	PCB Complete	1
7	617 181 7980	Latch Lever	1
8	617 226 4691	Handle Assembly	1
9	617 188 3329	Spring	1
10	617 224 1067	Knob Assembly	1
11	411 064 6608	SCR TPG BIN 3x8	11
*	617 224 1029	Operating Instructions	1
*	617 221 7420	Carton Box	1

* These items not illustrated