

Note: When changing mechanism parts, apply the specified grease to the areas marked "xx" shown in the drawing.

