



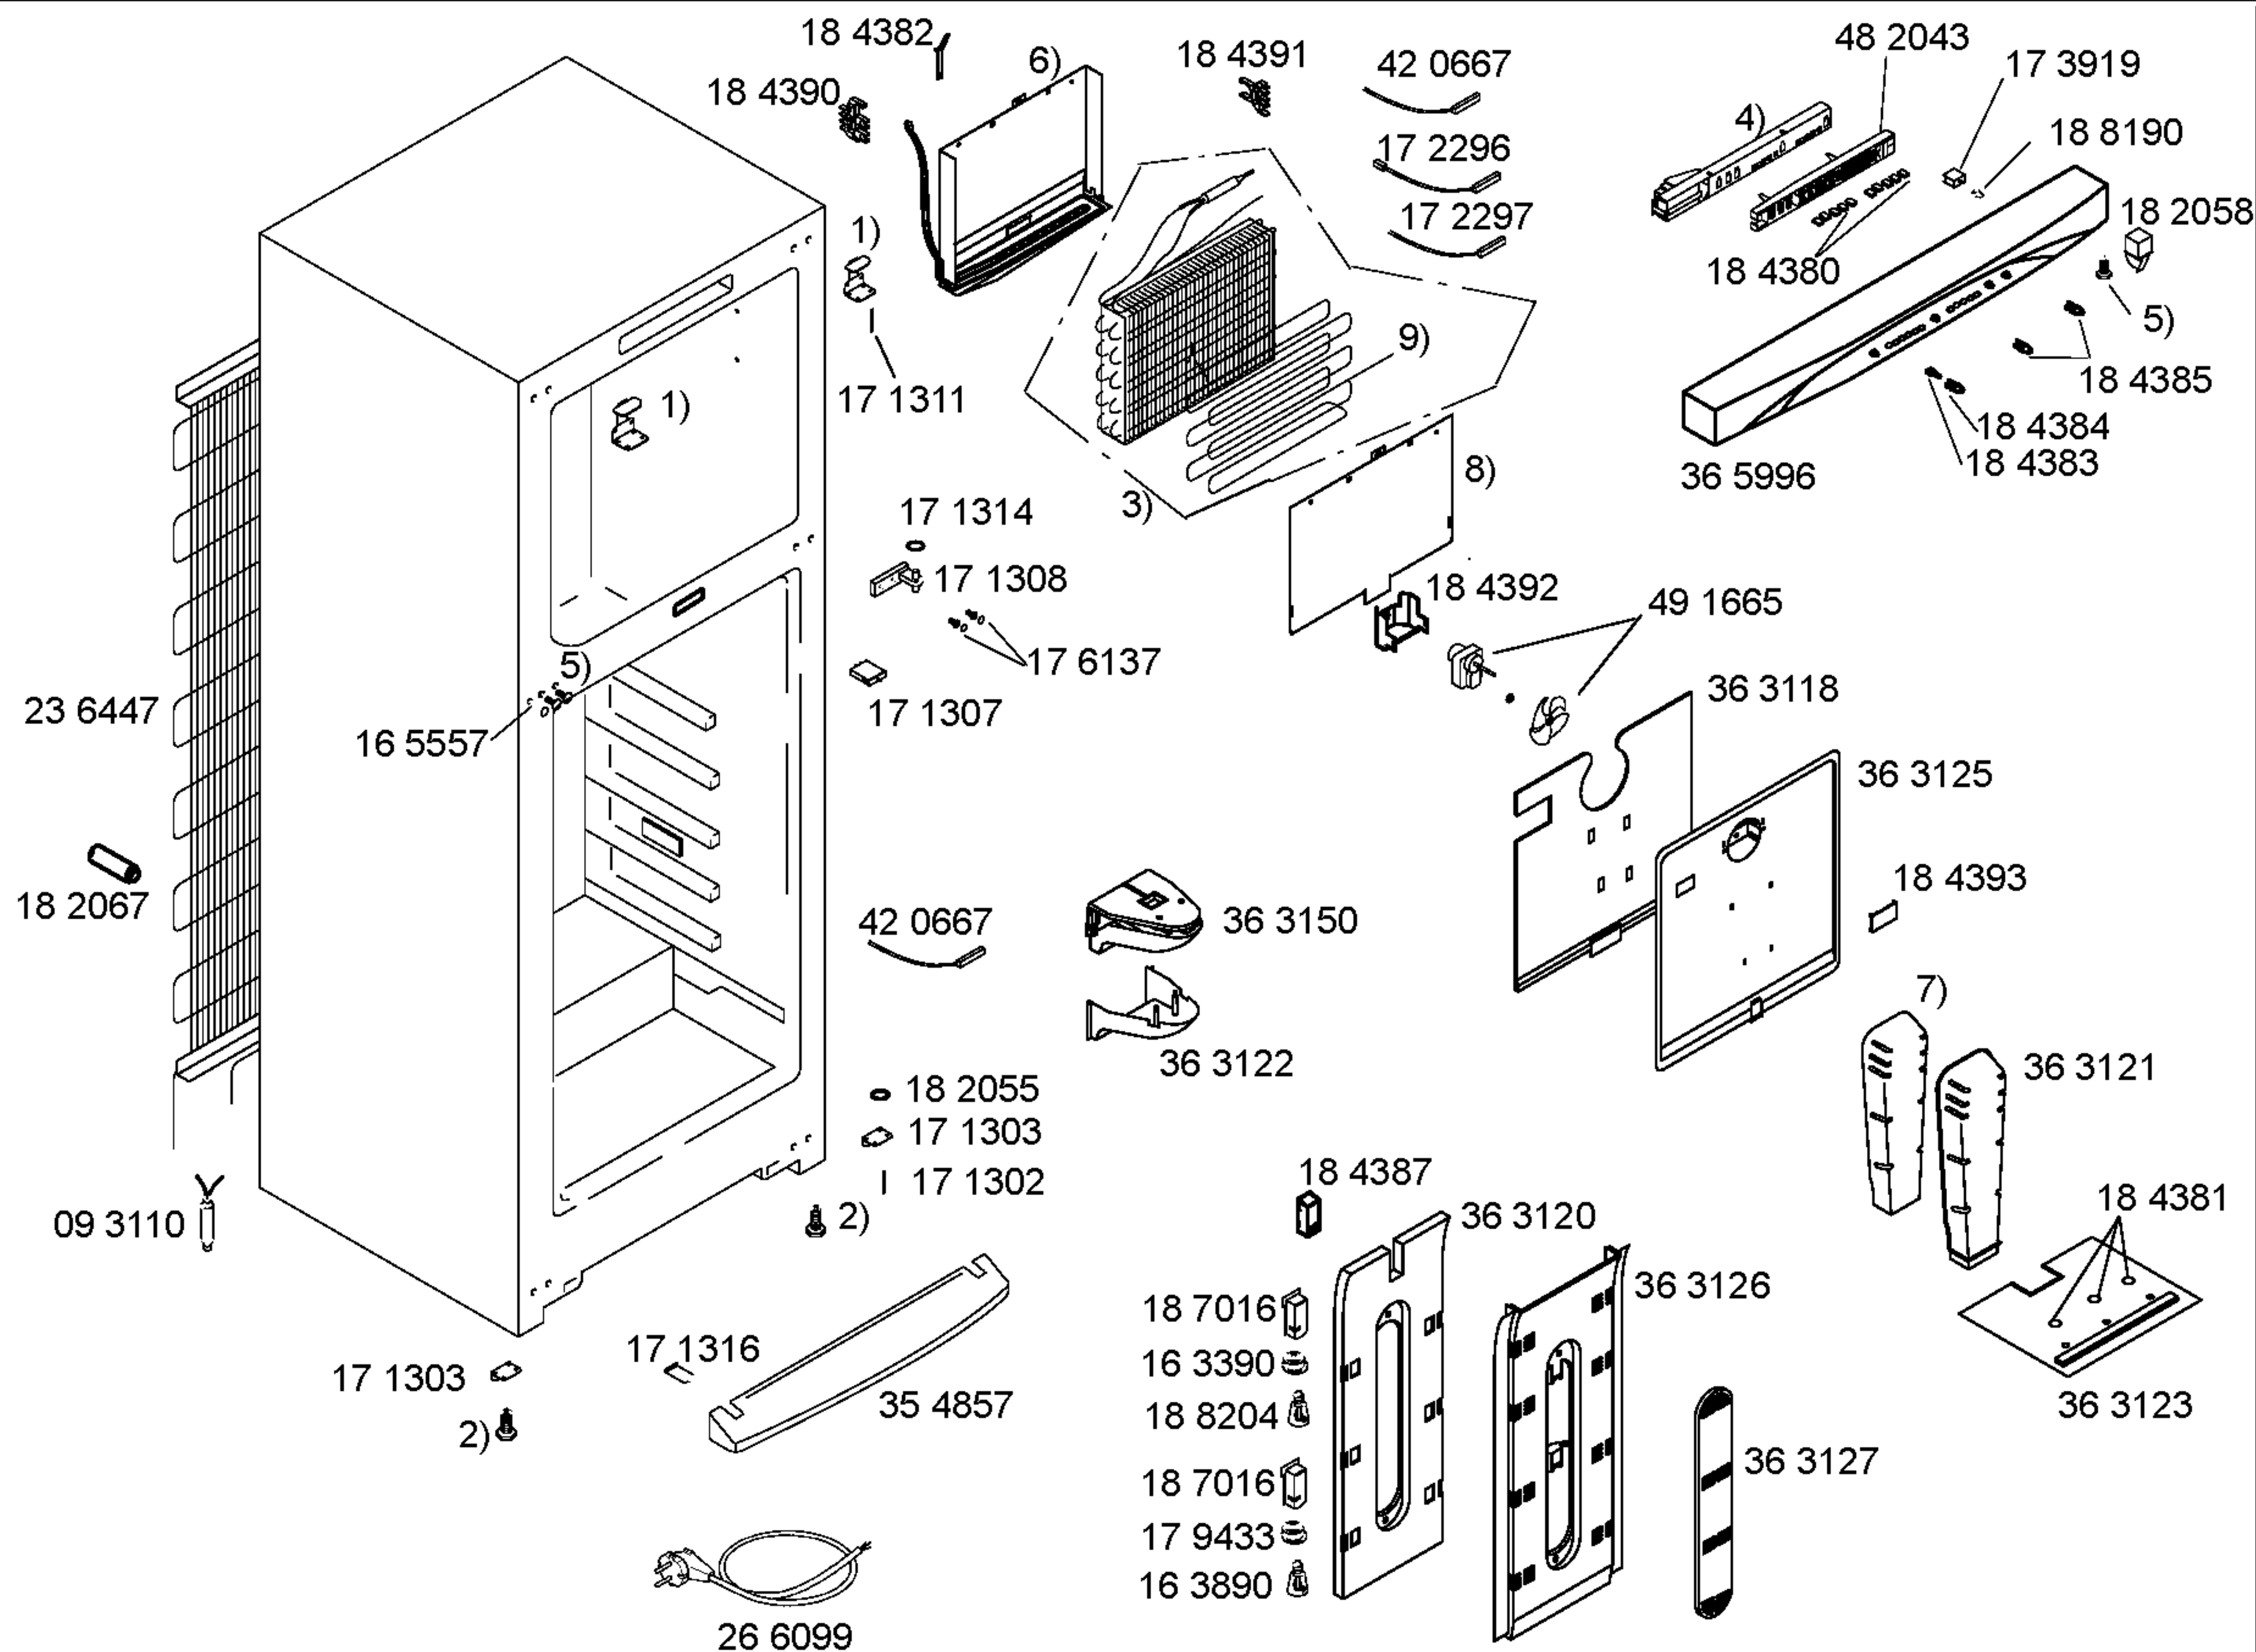


Gebrauchsanweisung
58 0502

- 1) 17 1312
- 2) 17 1304
- 3) 36 3131
V01,V02,V03,V04
36 9817
V05,V06
- 4) 48 2032
V01,V02,V03
48 4350
V04,V05,V06
- 5) 16 5552
- 6) 36 3132
V01,V02,V03,V04
36 9906
V05,V06
- 7) 36 3117
V01
36 6310
V02,V03,V04,V05
V06
- 8) 36 3151
V01,V02
36 6905
V03,V04,V05,V06
- 9) 36 3130
V01,V02,V03,V04
36 9820
V05,V06

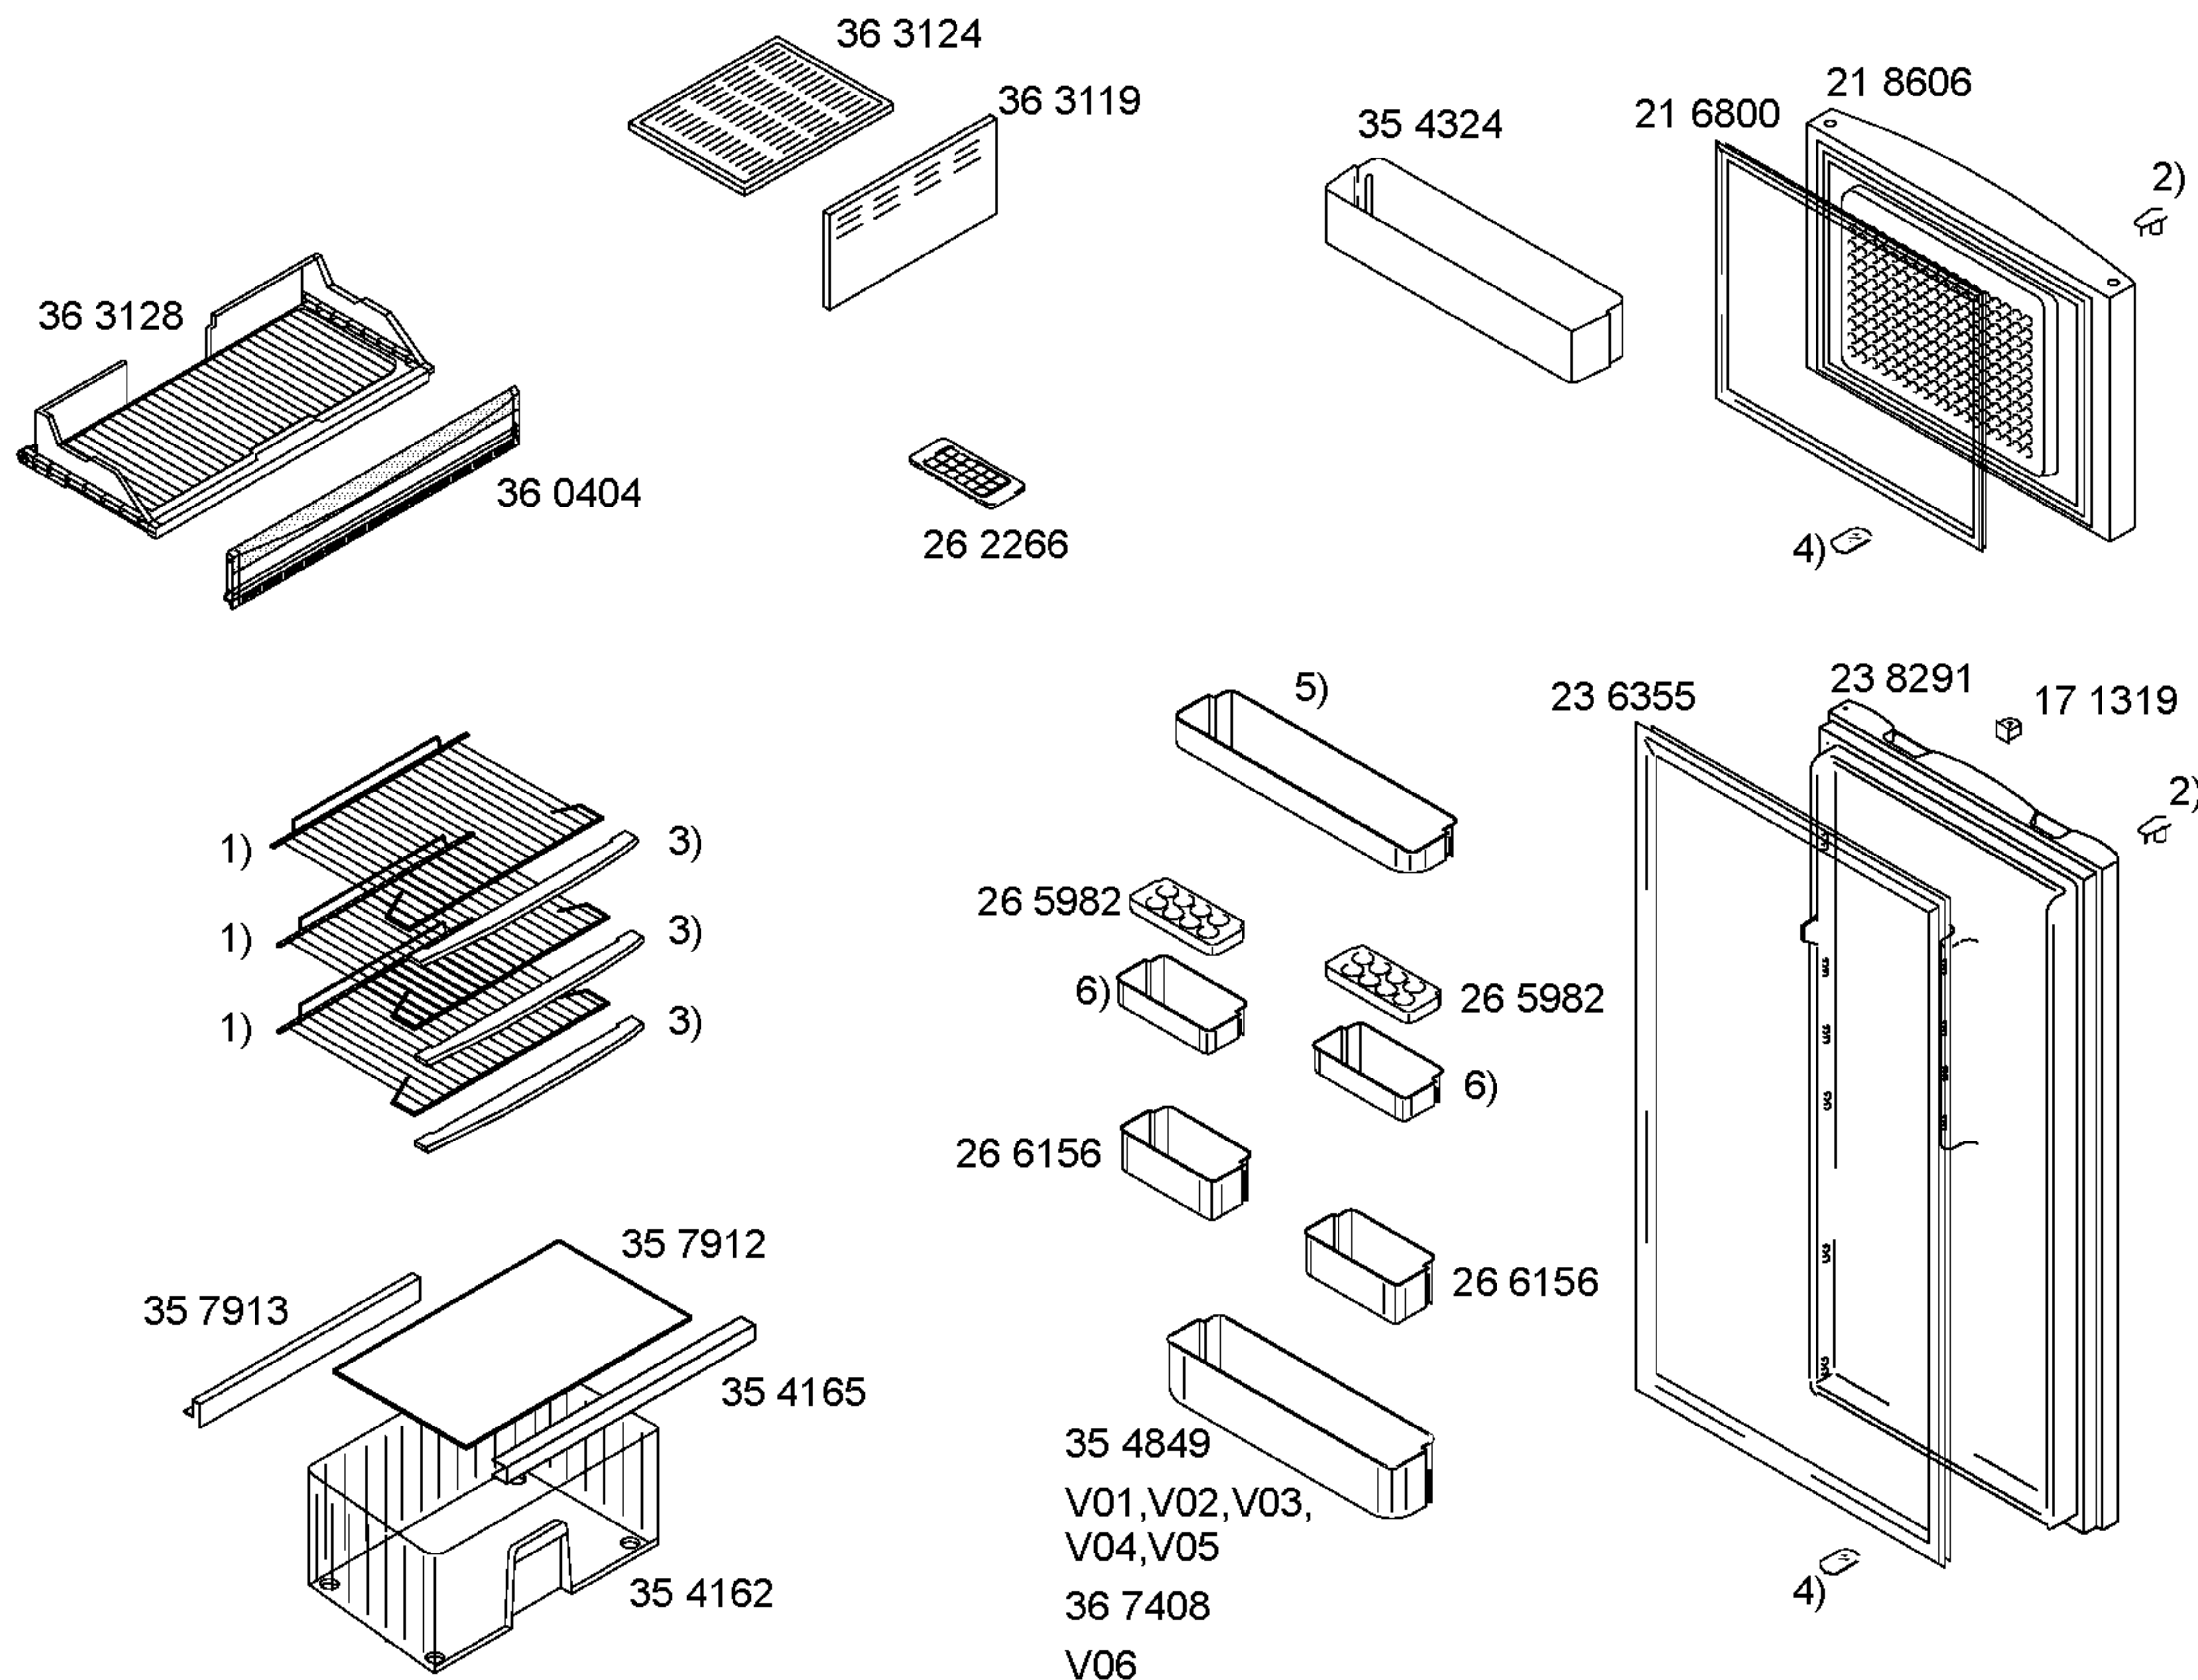

- 1) 35 4314
 - 2) 17 1321
 - 3) 35 4164
 - 4) 17 1506
- V01,V02,V03,V04
- V05
- 41 6553
- V06
- 5) 35 4323
- V01,V02,V03,V04
- V05
- 36 0005
- V06
- 6) 26 6089
- V01,V02,V03,V04
- V05
- 26 8509
- V06

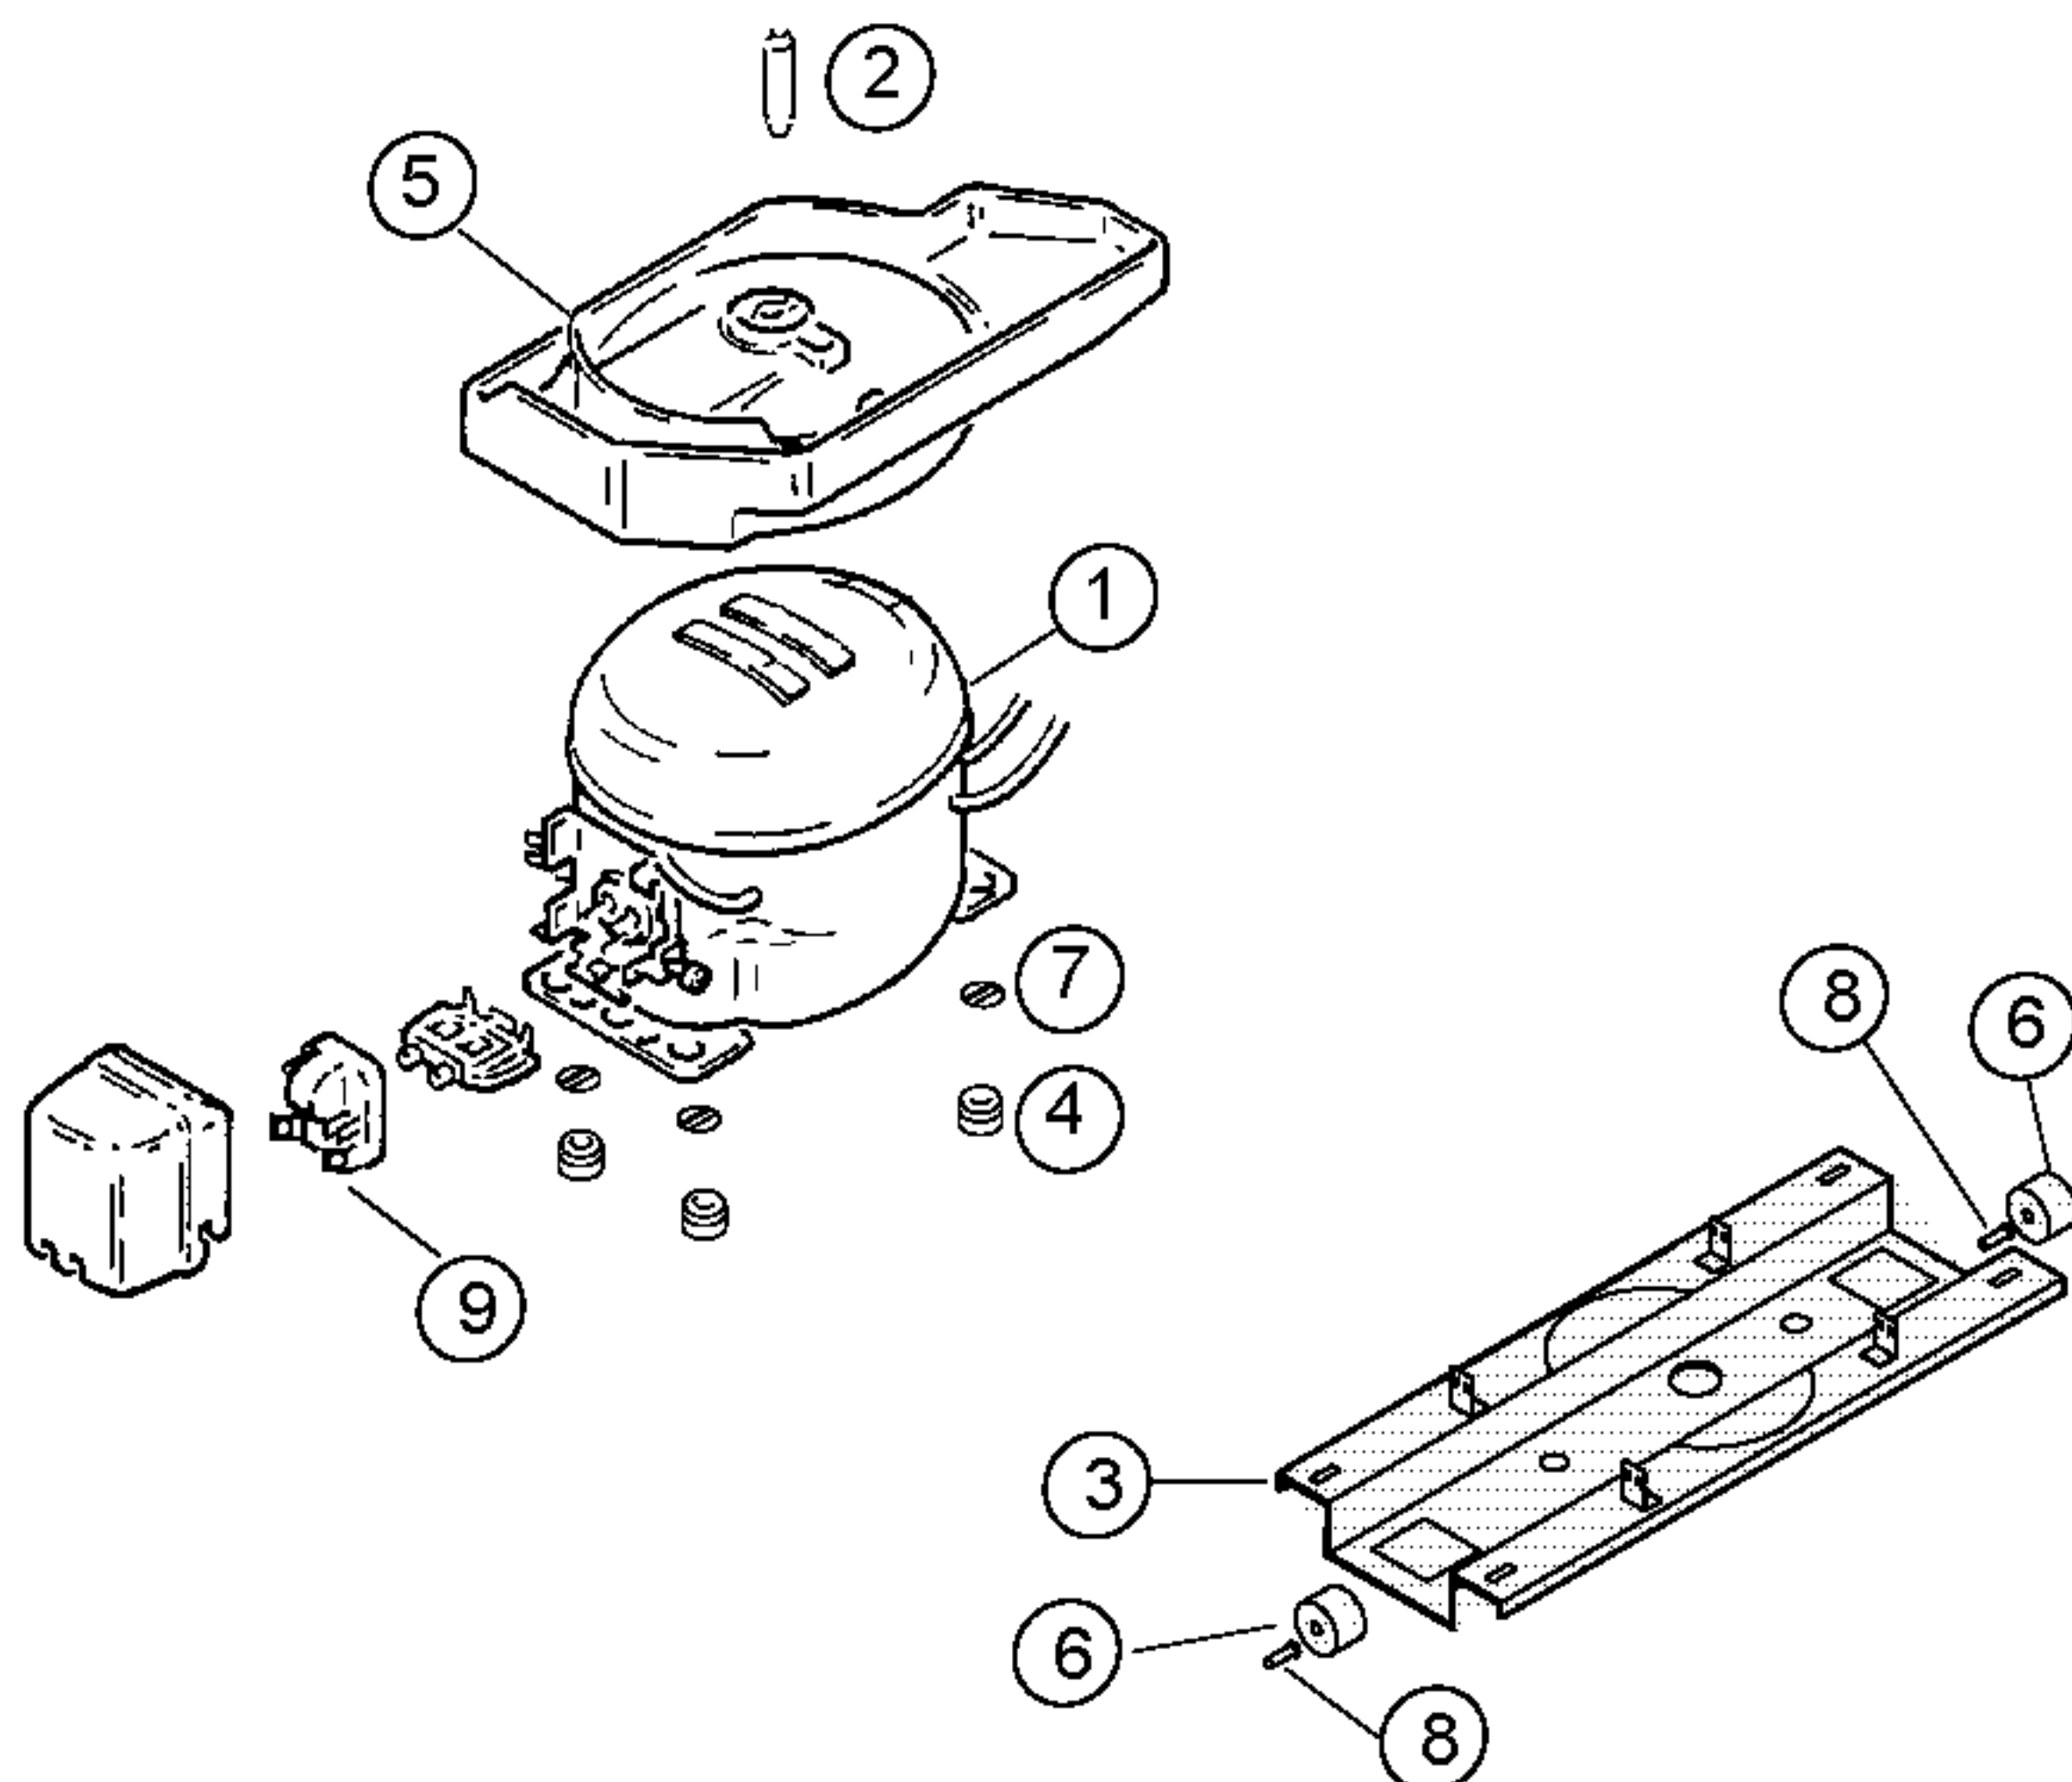

Pos.	Aspera		
	NBT 1116Y		
1	14 2193		
2	18 4389		
3	35 4158		
4	16 3427		
5	36 3166		
6	17 1318		
7	17 1519		
8	18 1014		
9	43 8467		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER				
Verdichter/Compressor/Kompresör		Aspera		
Typ/Type/Tip		NBT1116Y		
Förderleistung/Delivery/Verim/h				
Anlaufstrom/Starting current/Giris akimi	A	7		
Widerstand/Resistance/Rezistans Ha/	Ω	13.2		
Hi/aux.		17.6		
Temp.Reyler/Thermostat/Termostat		Elektronisch		
Typ/Type/Tip				
Reglerstellung/Position/Termostat pozisyonu				
Schaltwerte/Acma kapama degerleri	..ein/acma °C			
Valeurs de commutation/Termostat degeri	..aus"/kapama			
(..abtaven' od)	..alarm'			
Füllmenge/Fill quantity/ Dolum miktarı		R600a	g	45
Anschlusswert/Comm. load/Giris gucu		W	150	
Heizung/Heater/Rezistans		Verdampfer	Ablaufrinne	Klappe
Widerstand/Resistance/Direnc	Ω			4
Leistung/Power/Guc	W	147	64	
Ventilador/Blower/Vantilatör		Verdampfer		
Widerstand/Resistance/Rezistans		Ω		
Magnetventil/Magnetic valve/Manyetik valf				
Widerstand/Resistance/Rezistans	Ω			
Spannung/Voltage/Gerilim	V			
Temp.Reyler/Thermostat/Termostat				

* Siehe Typenschild/Mamul etiketine bakiniz