A | B | C

4-2.

Exploded parts diagram

E 3
3-701-441-21 Ⓐ
Washer, plastic 4 mm dia.
Cam Ass'y, size selector
TA, 8 3 x 15
4-847-523-11 Ⓑ
Size Lever
1-552-103-00 Ⓒ
Microswitch; motor (S3)
4-847-513-00 Ⓐ
Spring
7-671-156-01
Steel Ball
E 3
4-847-090-00 Ⓑ
Brake Lever 2
4-847-018-00 Ⓐ
Spring
Selector Link
PTPWH 3 x 8
PS 3 x 6
4-852-804-00 Ⓐ
Cam, adjustment
Bracket, selector
4-847-562-00 Ⓐ
Spring
Lead-in Lever Ass'y
Guide Plate
Brake Lever 1
3-486-138-00 Ⓐ
Slide Pin
E 5
PTP 3 x 8
3-701-441-21 Ⓐ
Washer, plastic 4 mm dia.
E 4
PS 3 x 6
PS 3 x 6
4-852-841-00 Ⓐ
Tube, silencer
PS 3 x 6
PS 3 x 6
4-852-846-00 Ⓐ
Spring
4-844-041-00 Ⓐ
Washer N
Clamp, lead
Sub-lever, reset
4-852-805-00 Ⓐ
Shaft, adjustment
4-847-024-00 Ⓐ
Return Cam
● 1
Holder, main lever
Selector Lever Ass'y, including
part marked ■ 1
*2
4-847-017-00 Ⓐ
Spring
4-847-544-00 Ⓐ
Spring, reset sub-lever
TA, P 3 x 25
3-701-443-21 Ⓐ
Washer, plastic 5 mm dia.
PTPWH 2.6 x 10
* 1
4-847-035-00 Ⓐ
Tube, cushion
Sub-frame Ass'y, including
part marked ■ 1
W 3 mm dia.
1-552-268-00 Ⓑ
Switch, micro;
START/STOP (S2)
4-852-844-00 Ⓑ
Spring, toggle
4-847-520-00 Ⓐ
Spring, reject
Main Lever Ass'y, including
parts marked * 1, 2
8-835-001-XX Ⓚ
Motor, DNF-1001A
X-4853-709-0 Ⓑ
Motor Pulley Ass'y
SC 2.6 x 3
Start Lever
3-701-437-11 Ⓐ
Washer, plastic 2 mm dia.
4-852-843-00 Ⓐ
Tube, cushion
Clutch Lever (B) Ass'y
4-827-489-00 Ⓗ
Belt
E 2.3
Spindle, start lever
Boss
4-853-705-00 Ⓑ
Roller
Shaft, clutch lever
4-849-501-0 Ⓐ
Slide Screw
E 2.3
3-642-425-00 Ⓑ
Spring
PTPWH 3 x 6
4-850-119-00 Ⓑ
Floating Rubber, motor
Bracket, start lever
Bracket
PWH 2.6 x 3
Connector Pin with Lock
PTP 3 x 6
Complete Circuit Board, servo amp
Frame Ass'y
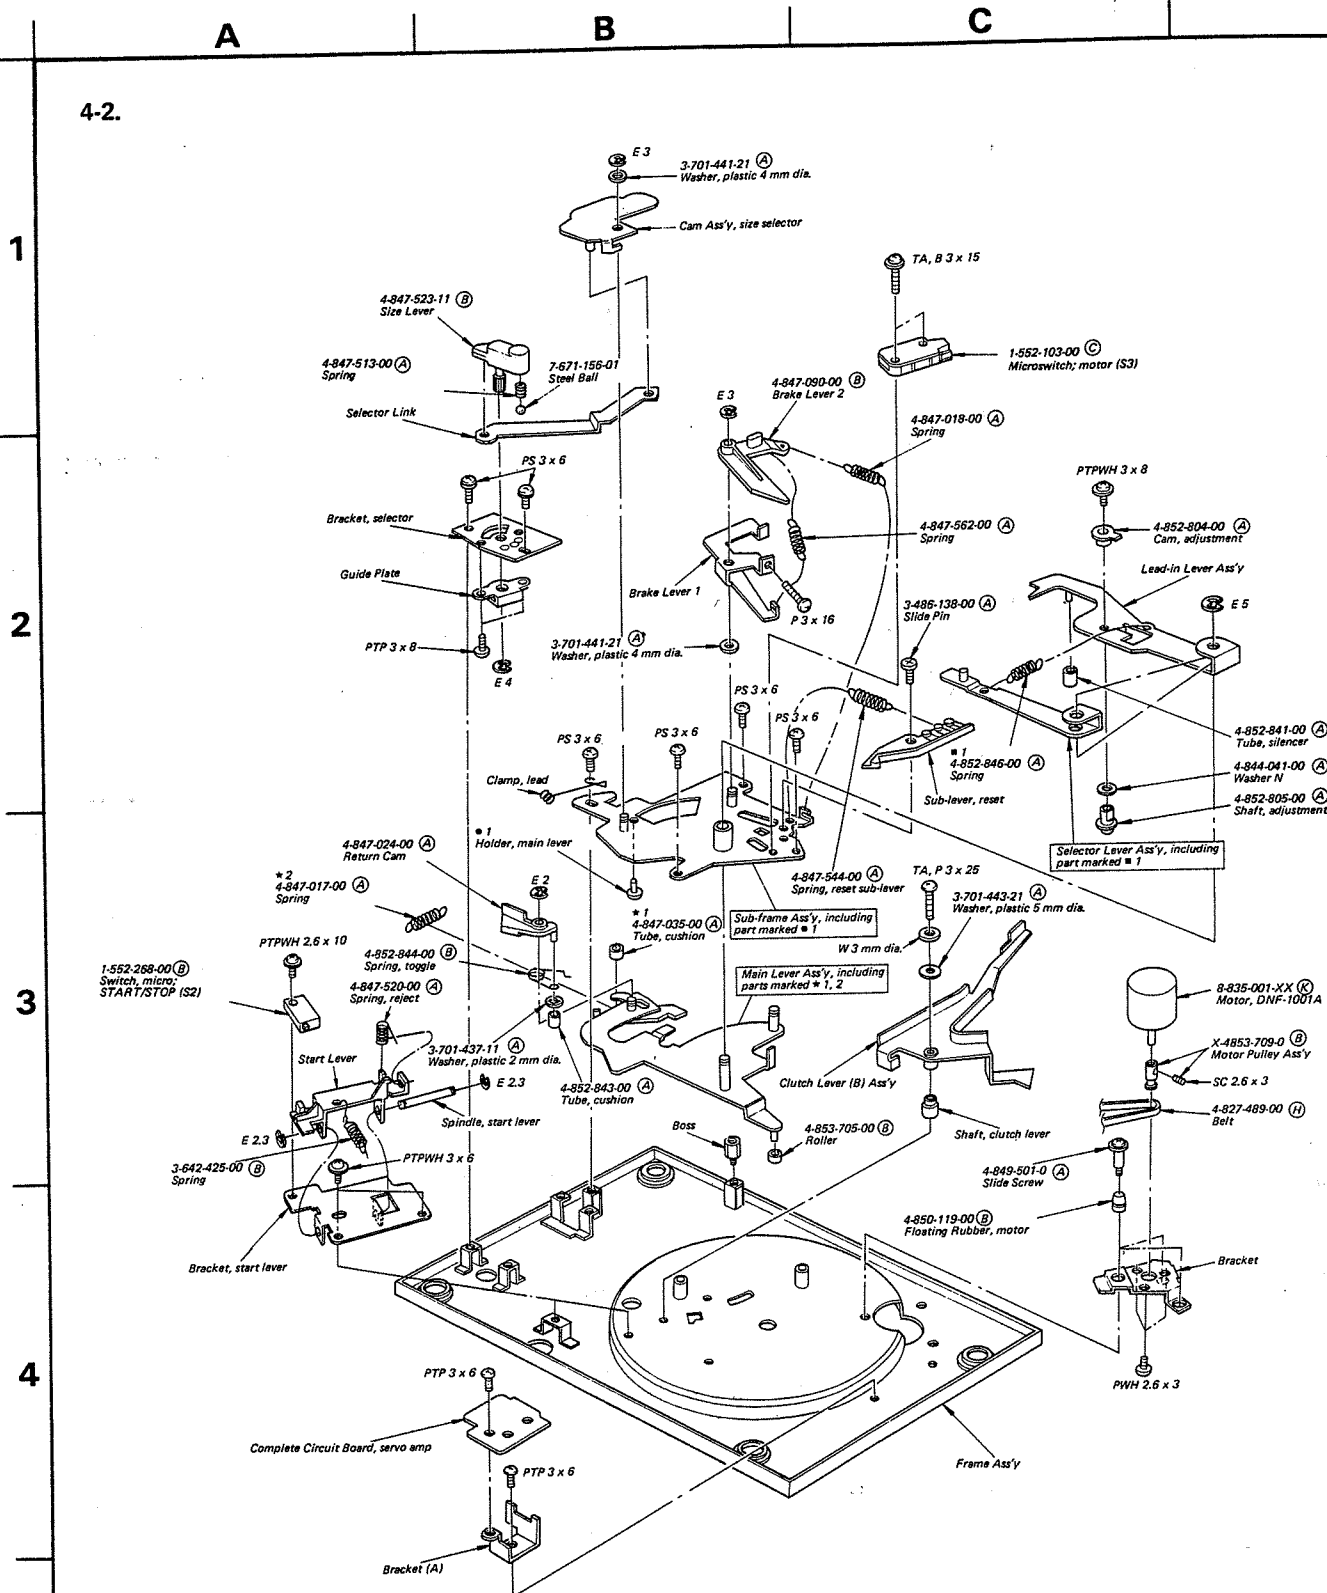Printed Circuit
Board, relay
2.6 x 6
PTP 3 x 6
Bracket (A)

Note:
- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
- All screws are Phillips (cross recess) type unless otherwise noted.
  (—) = slotted head
- Circled letters (Ⓐ to Ⓩ) are applicable to European models only.