



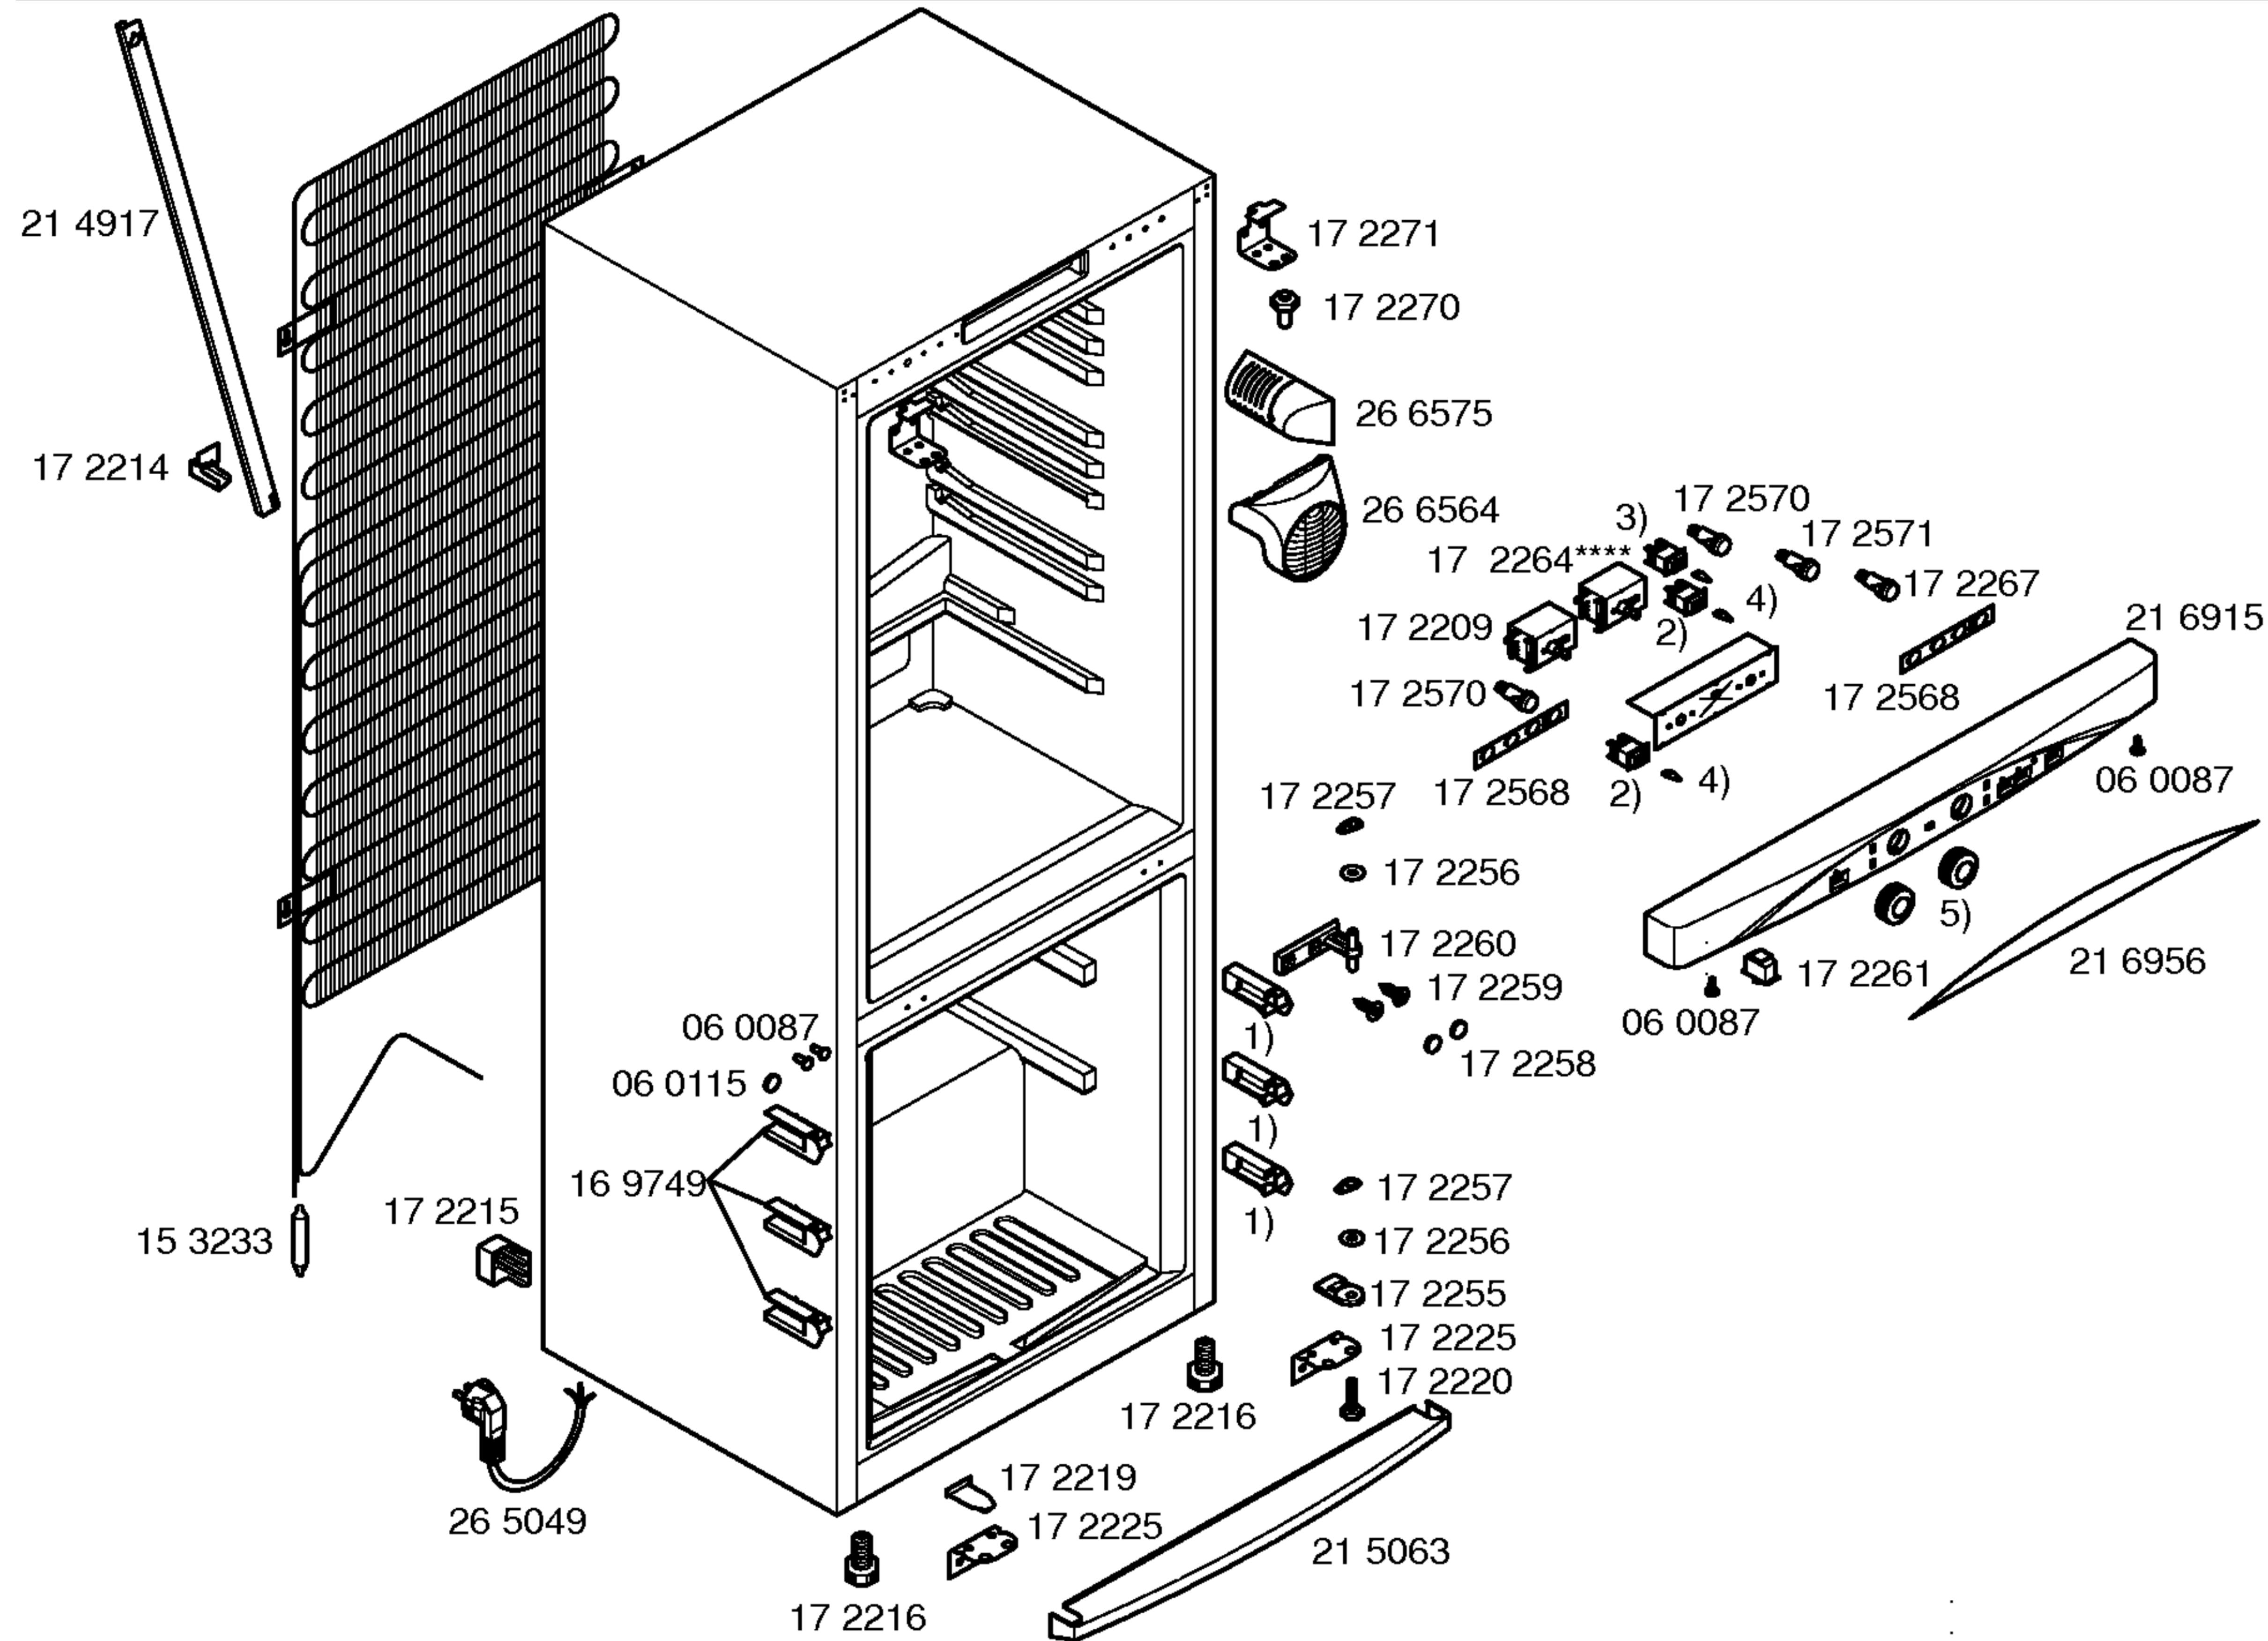



Gebrauchsanweisung
52 3608
(DE,GB,FR,PT,ES)

- 1) 16 9753
- 2) 17 2566
- 3) 17 2569
- 4) 17 2567
- 5) 18 2138

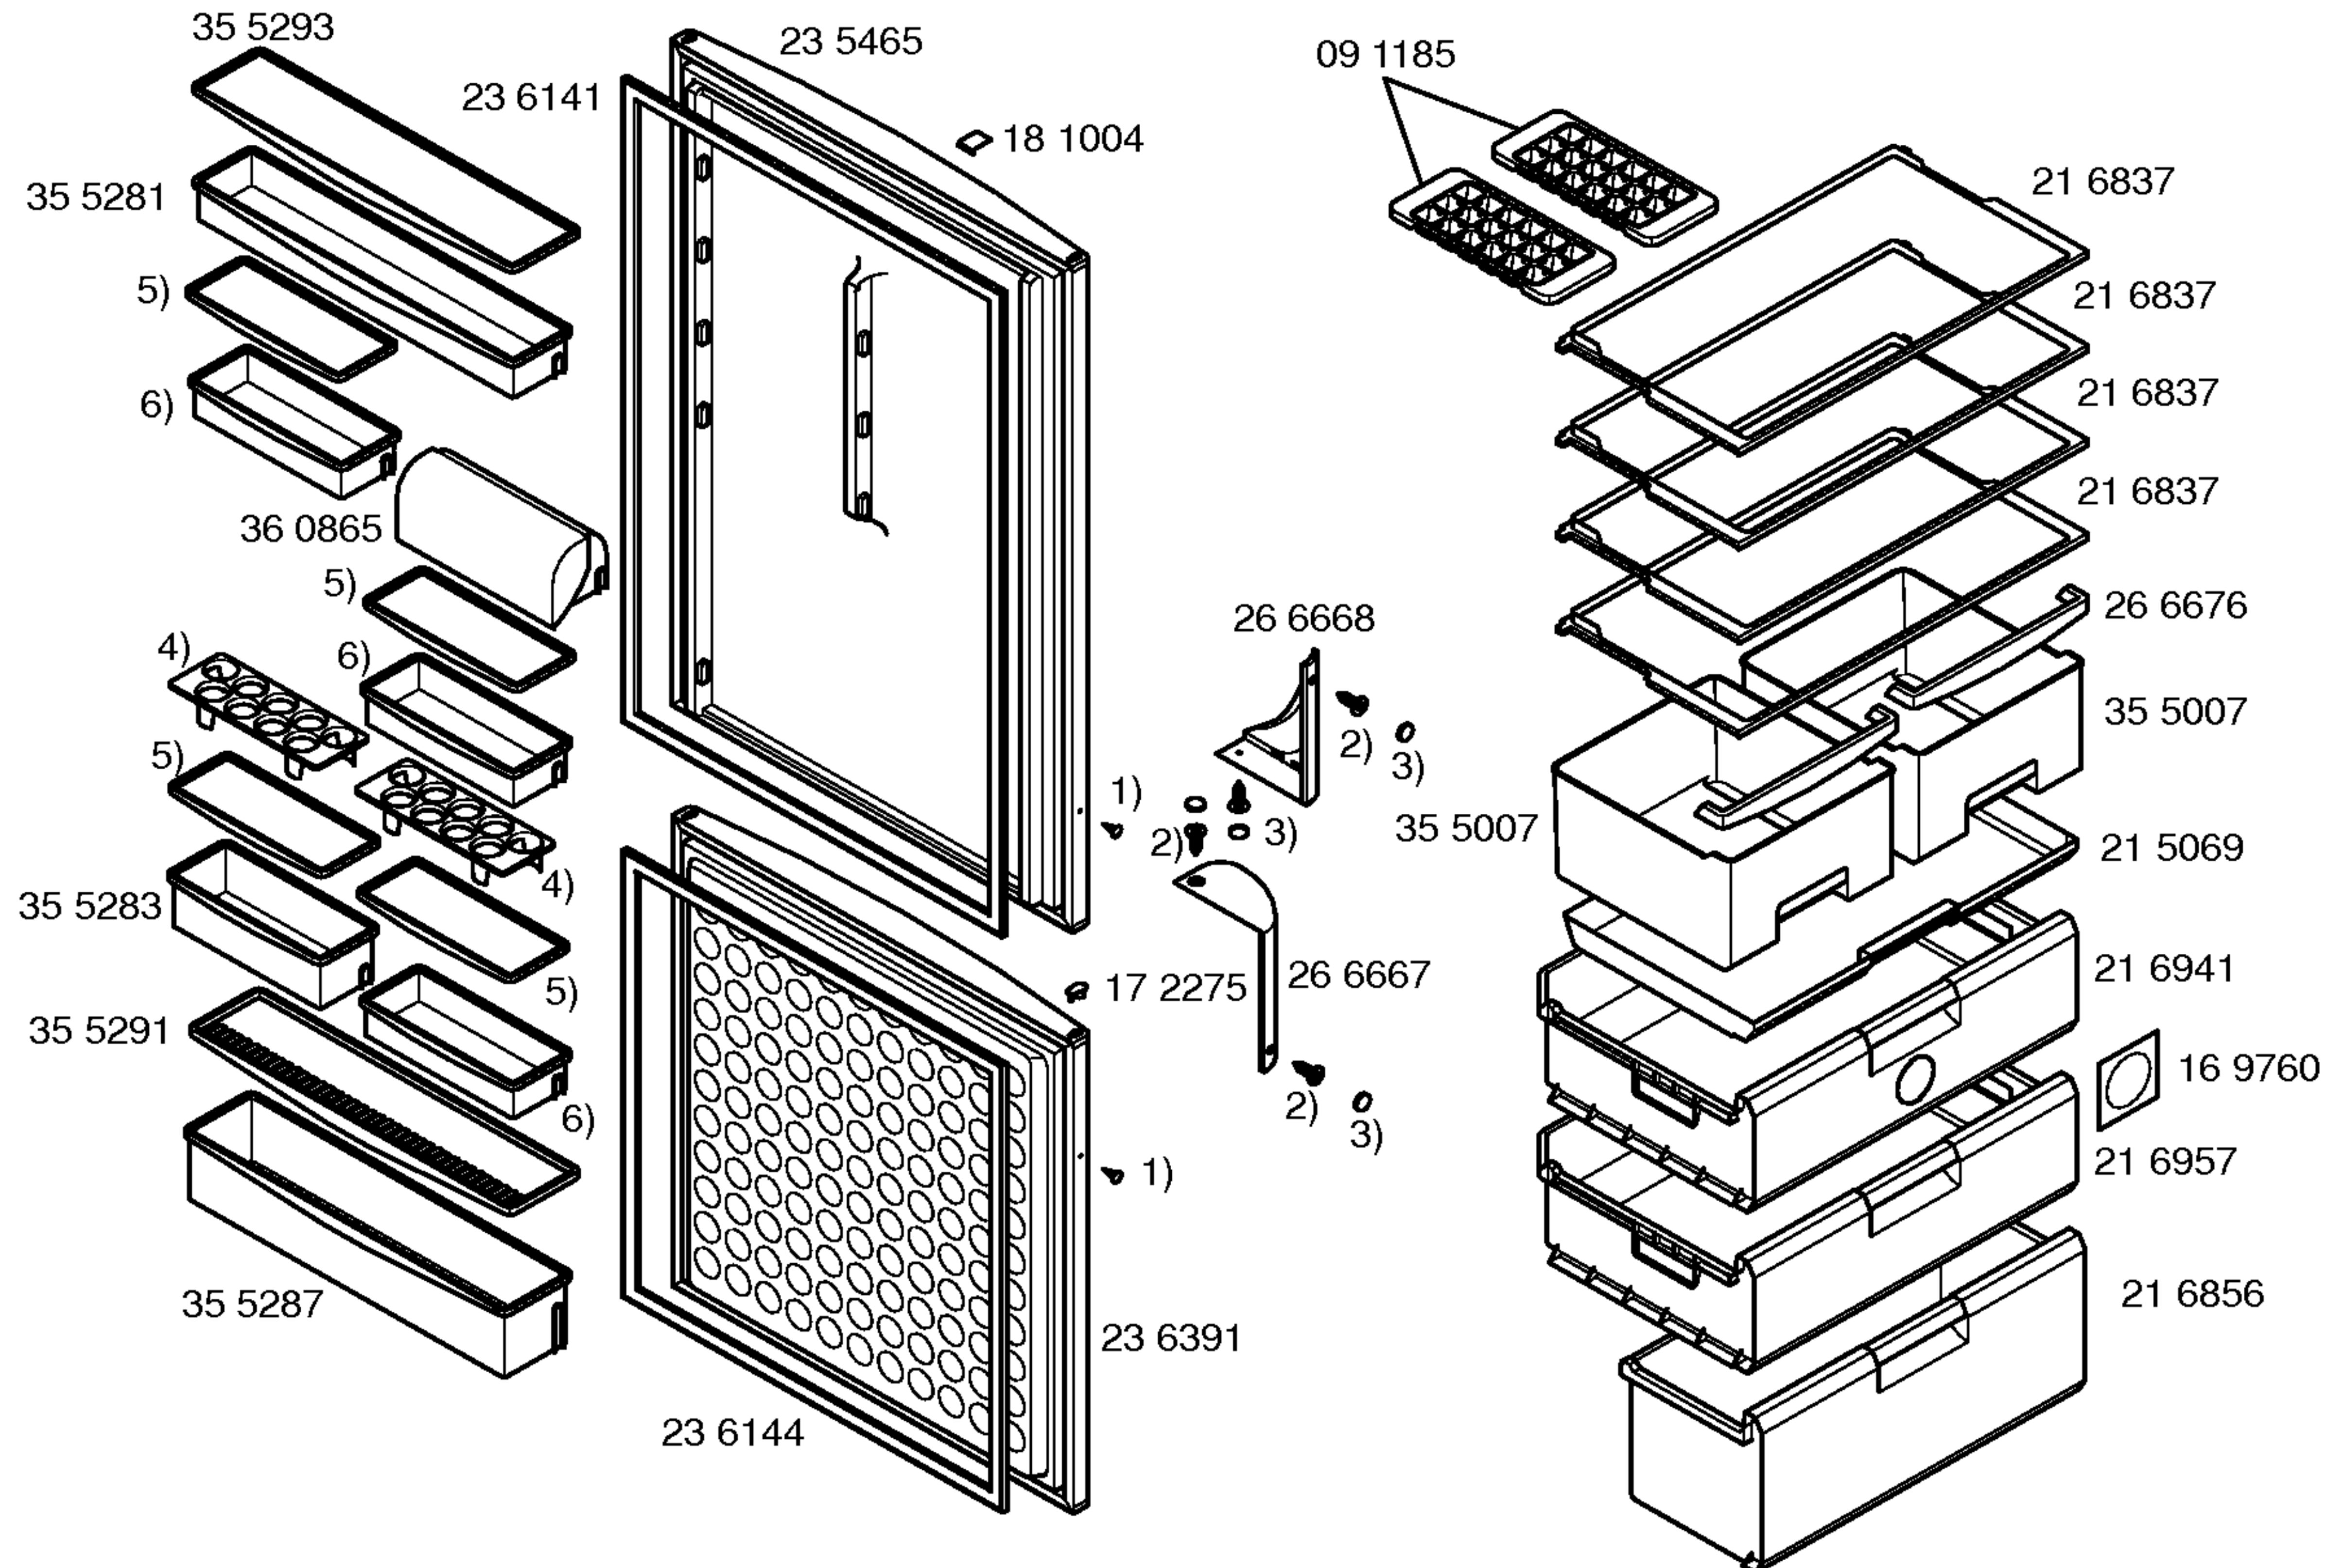

- 1) 06 0083
- 2) 17 2274
- 3) 06 0115
- 4) 35 5282
- 5) 35 5292
- 6) 35 5284

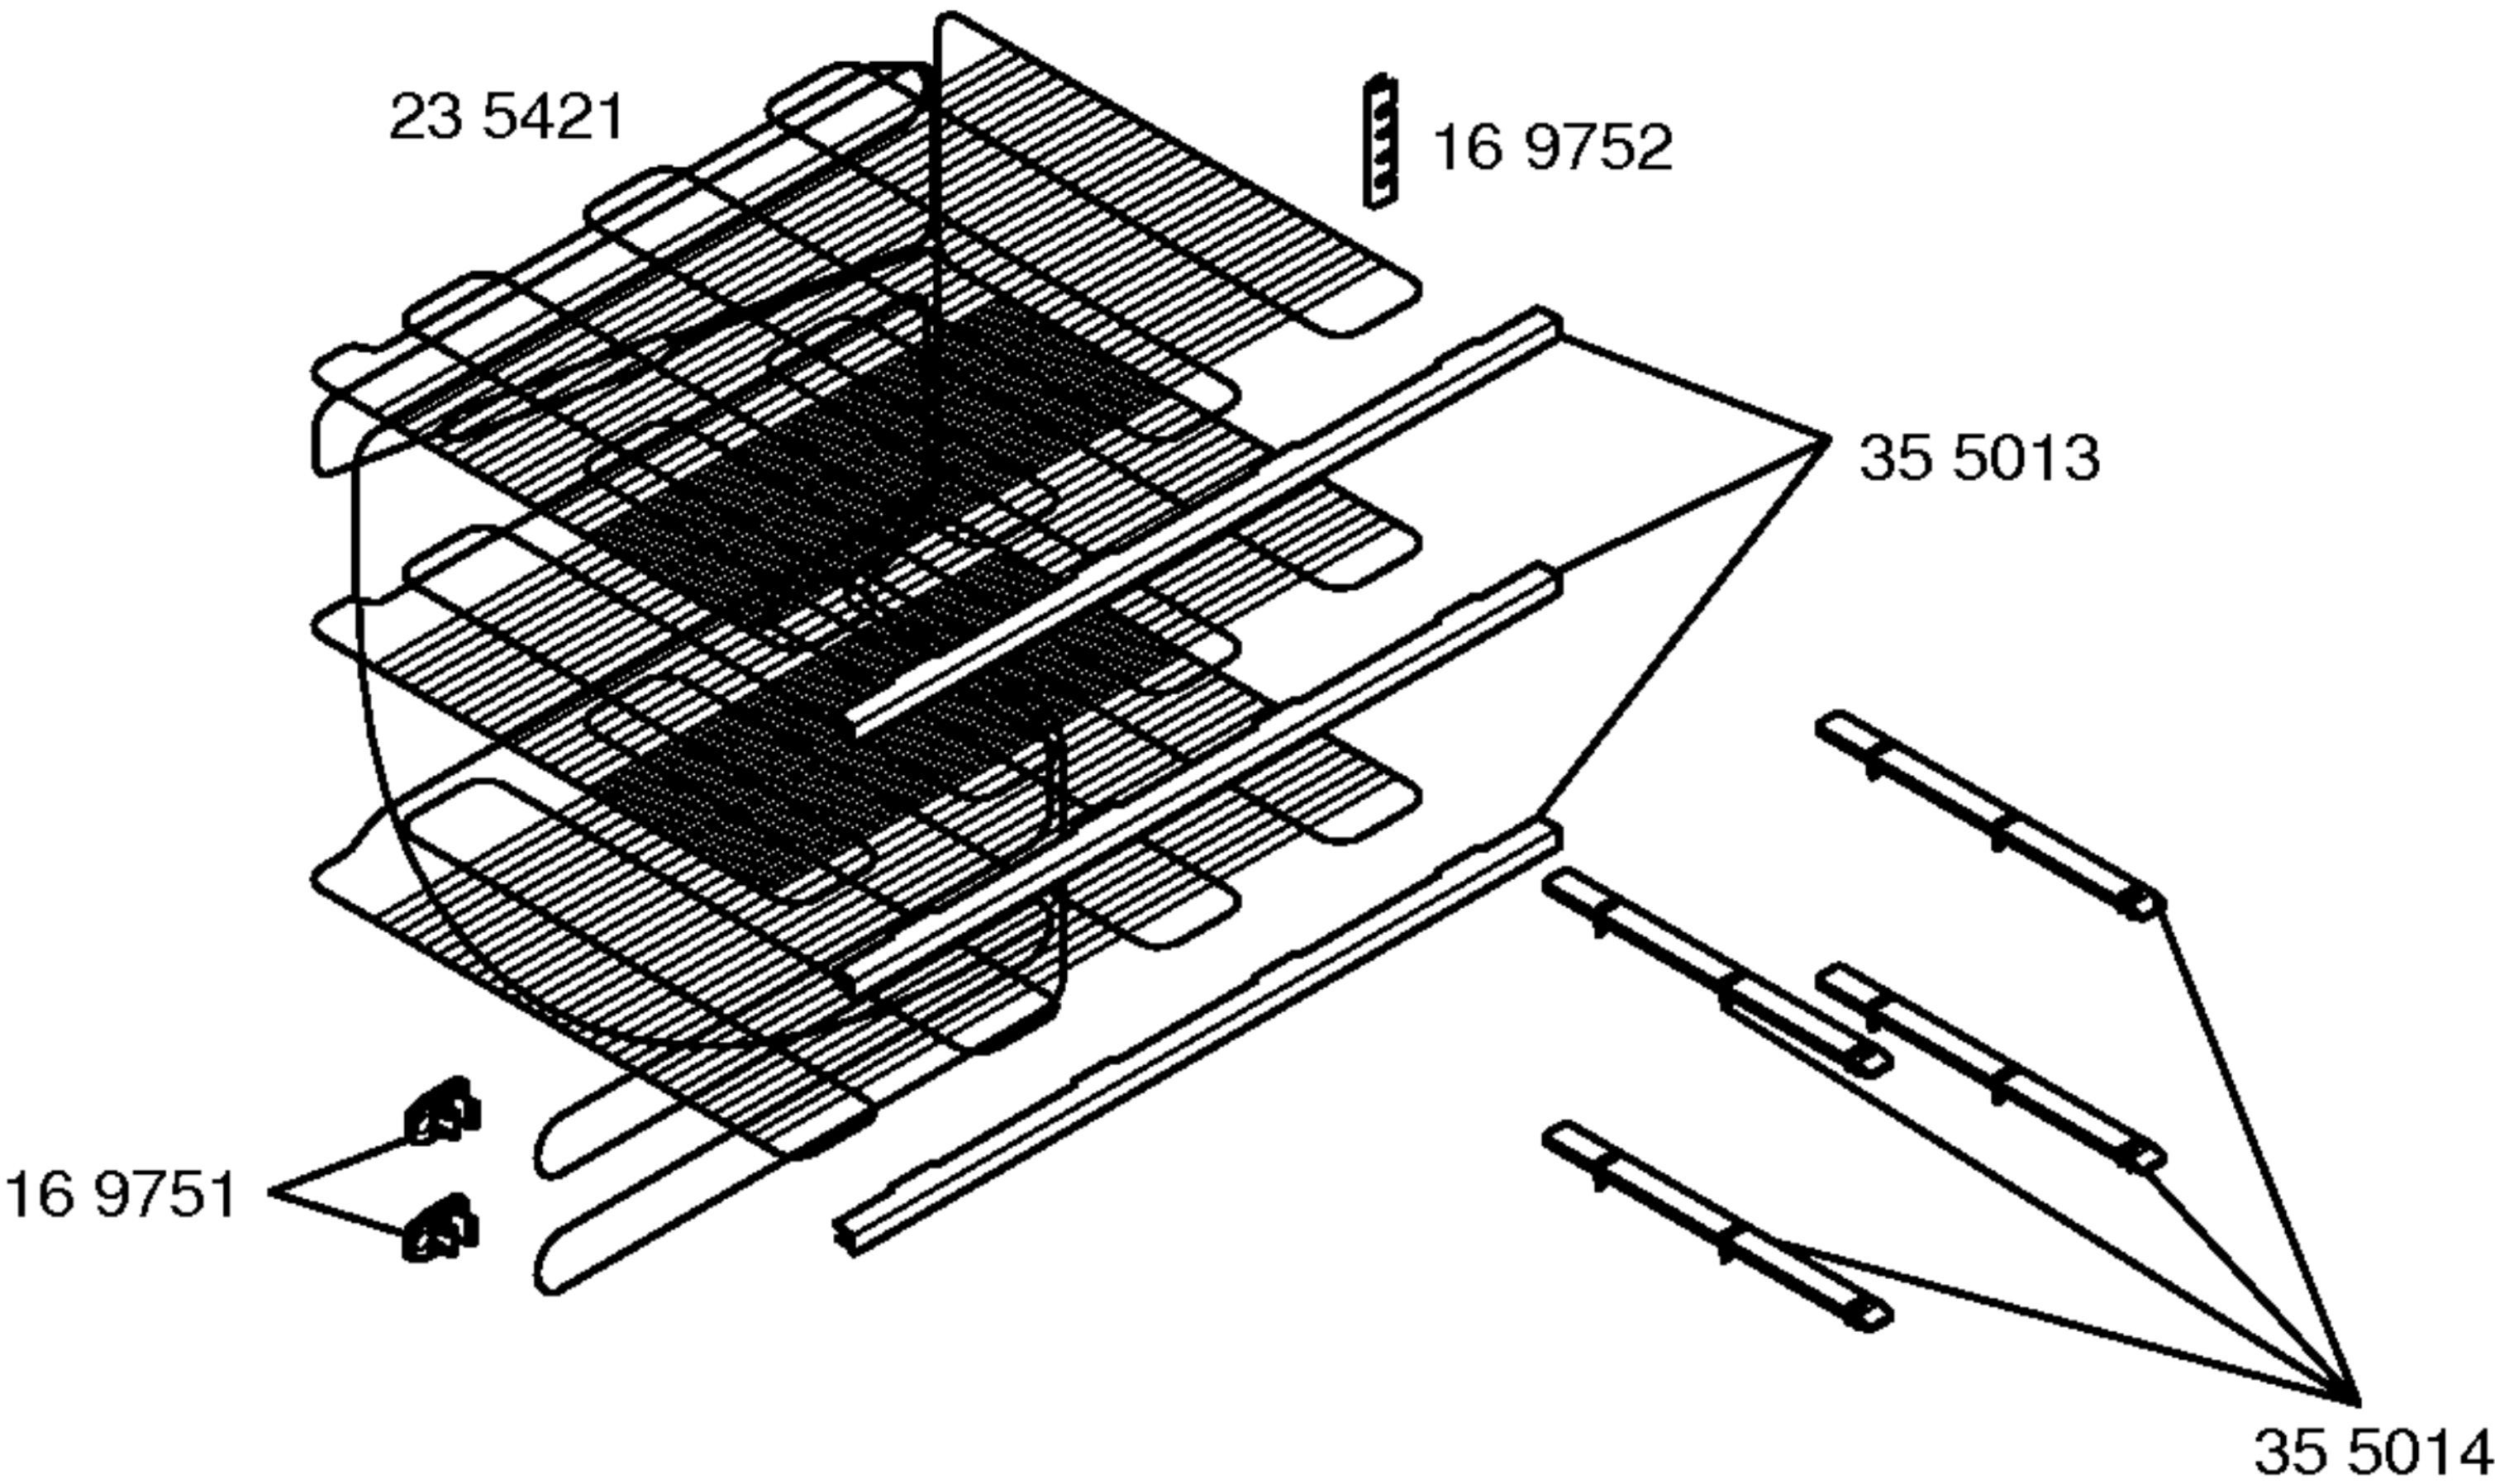

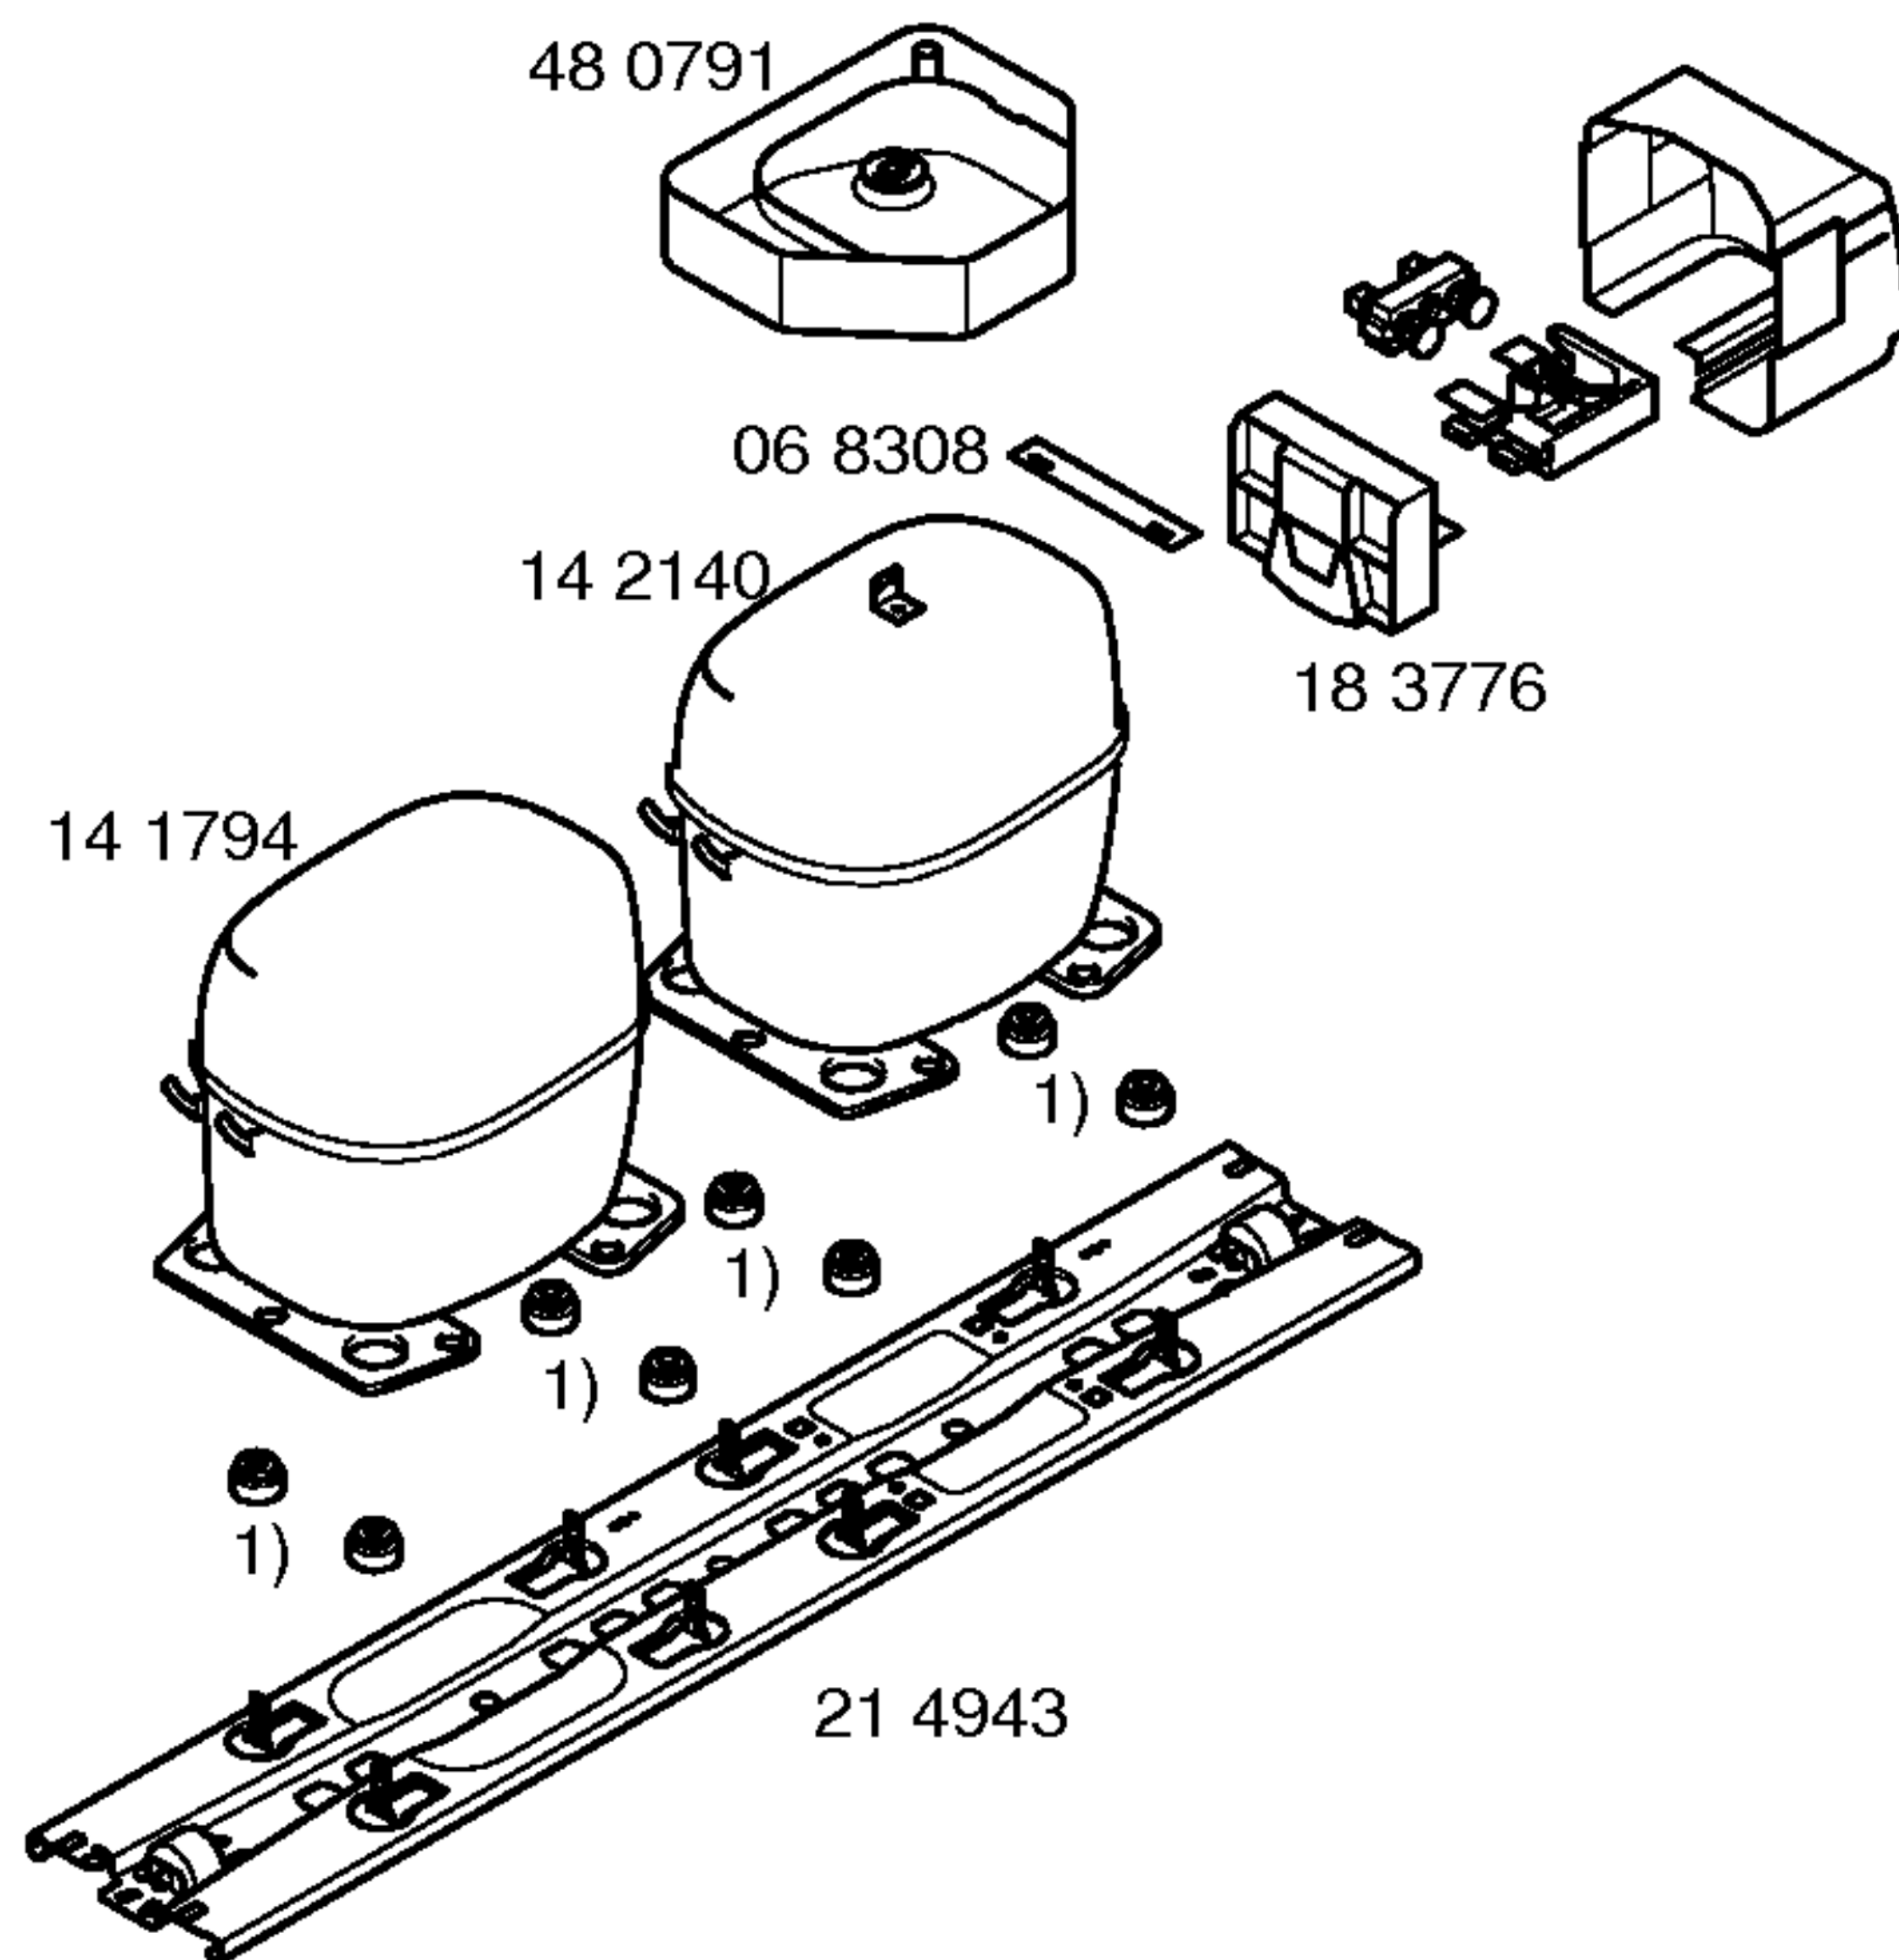

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

	KF	GF
Verdichter/Compressor/Compresseur/Compresor	Goldstar	Danfoss
Typ/Type/Tipo	NR 69NAEM	TLES9K
Förderleistung/Delivery/Debit/Aspiración l/h	1240	1584
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A		4,5
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	20,4 +/-5%	16,5
Hi/aux.	29,6 +/-10%	16,9

Temp.Reyler/Thermostat/Termostato	Danfoss	Danfoss
Typ/Type/Tipo	077B6167	077B2272L
Reglerstellung/Position/Conexión	-24 +/-1,5	MIN MAX
Schaltwerte/Switching values/	-8 +/-2,0	- -
Valeurs de commutation/Desconex.	..ein/conex.°C	..aus"/descon.
(..abtaven' od)	..alarm'	-20° -28°
		-15°

Füllmenge/Fill. quantily/Charge/Carga R600a	g	30	50
---	---	----	----

Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	160
--	---	-----

Ventilator/Blower/Ventilateur		
Widerstand/Resistance	Ohm	

1) 06 0182

