






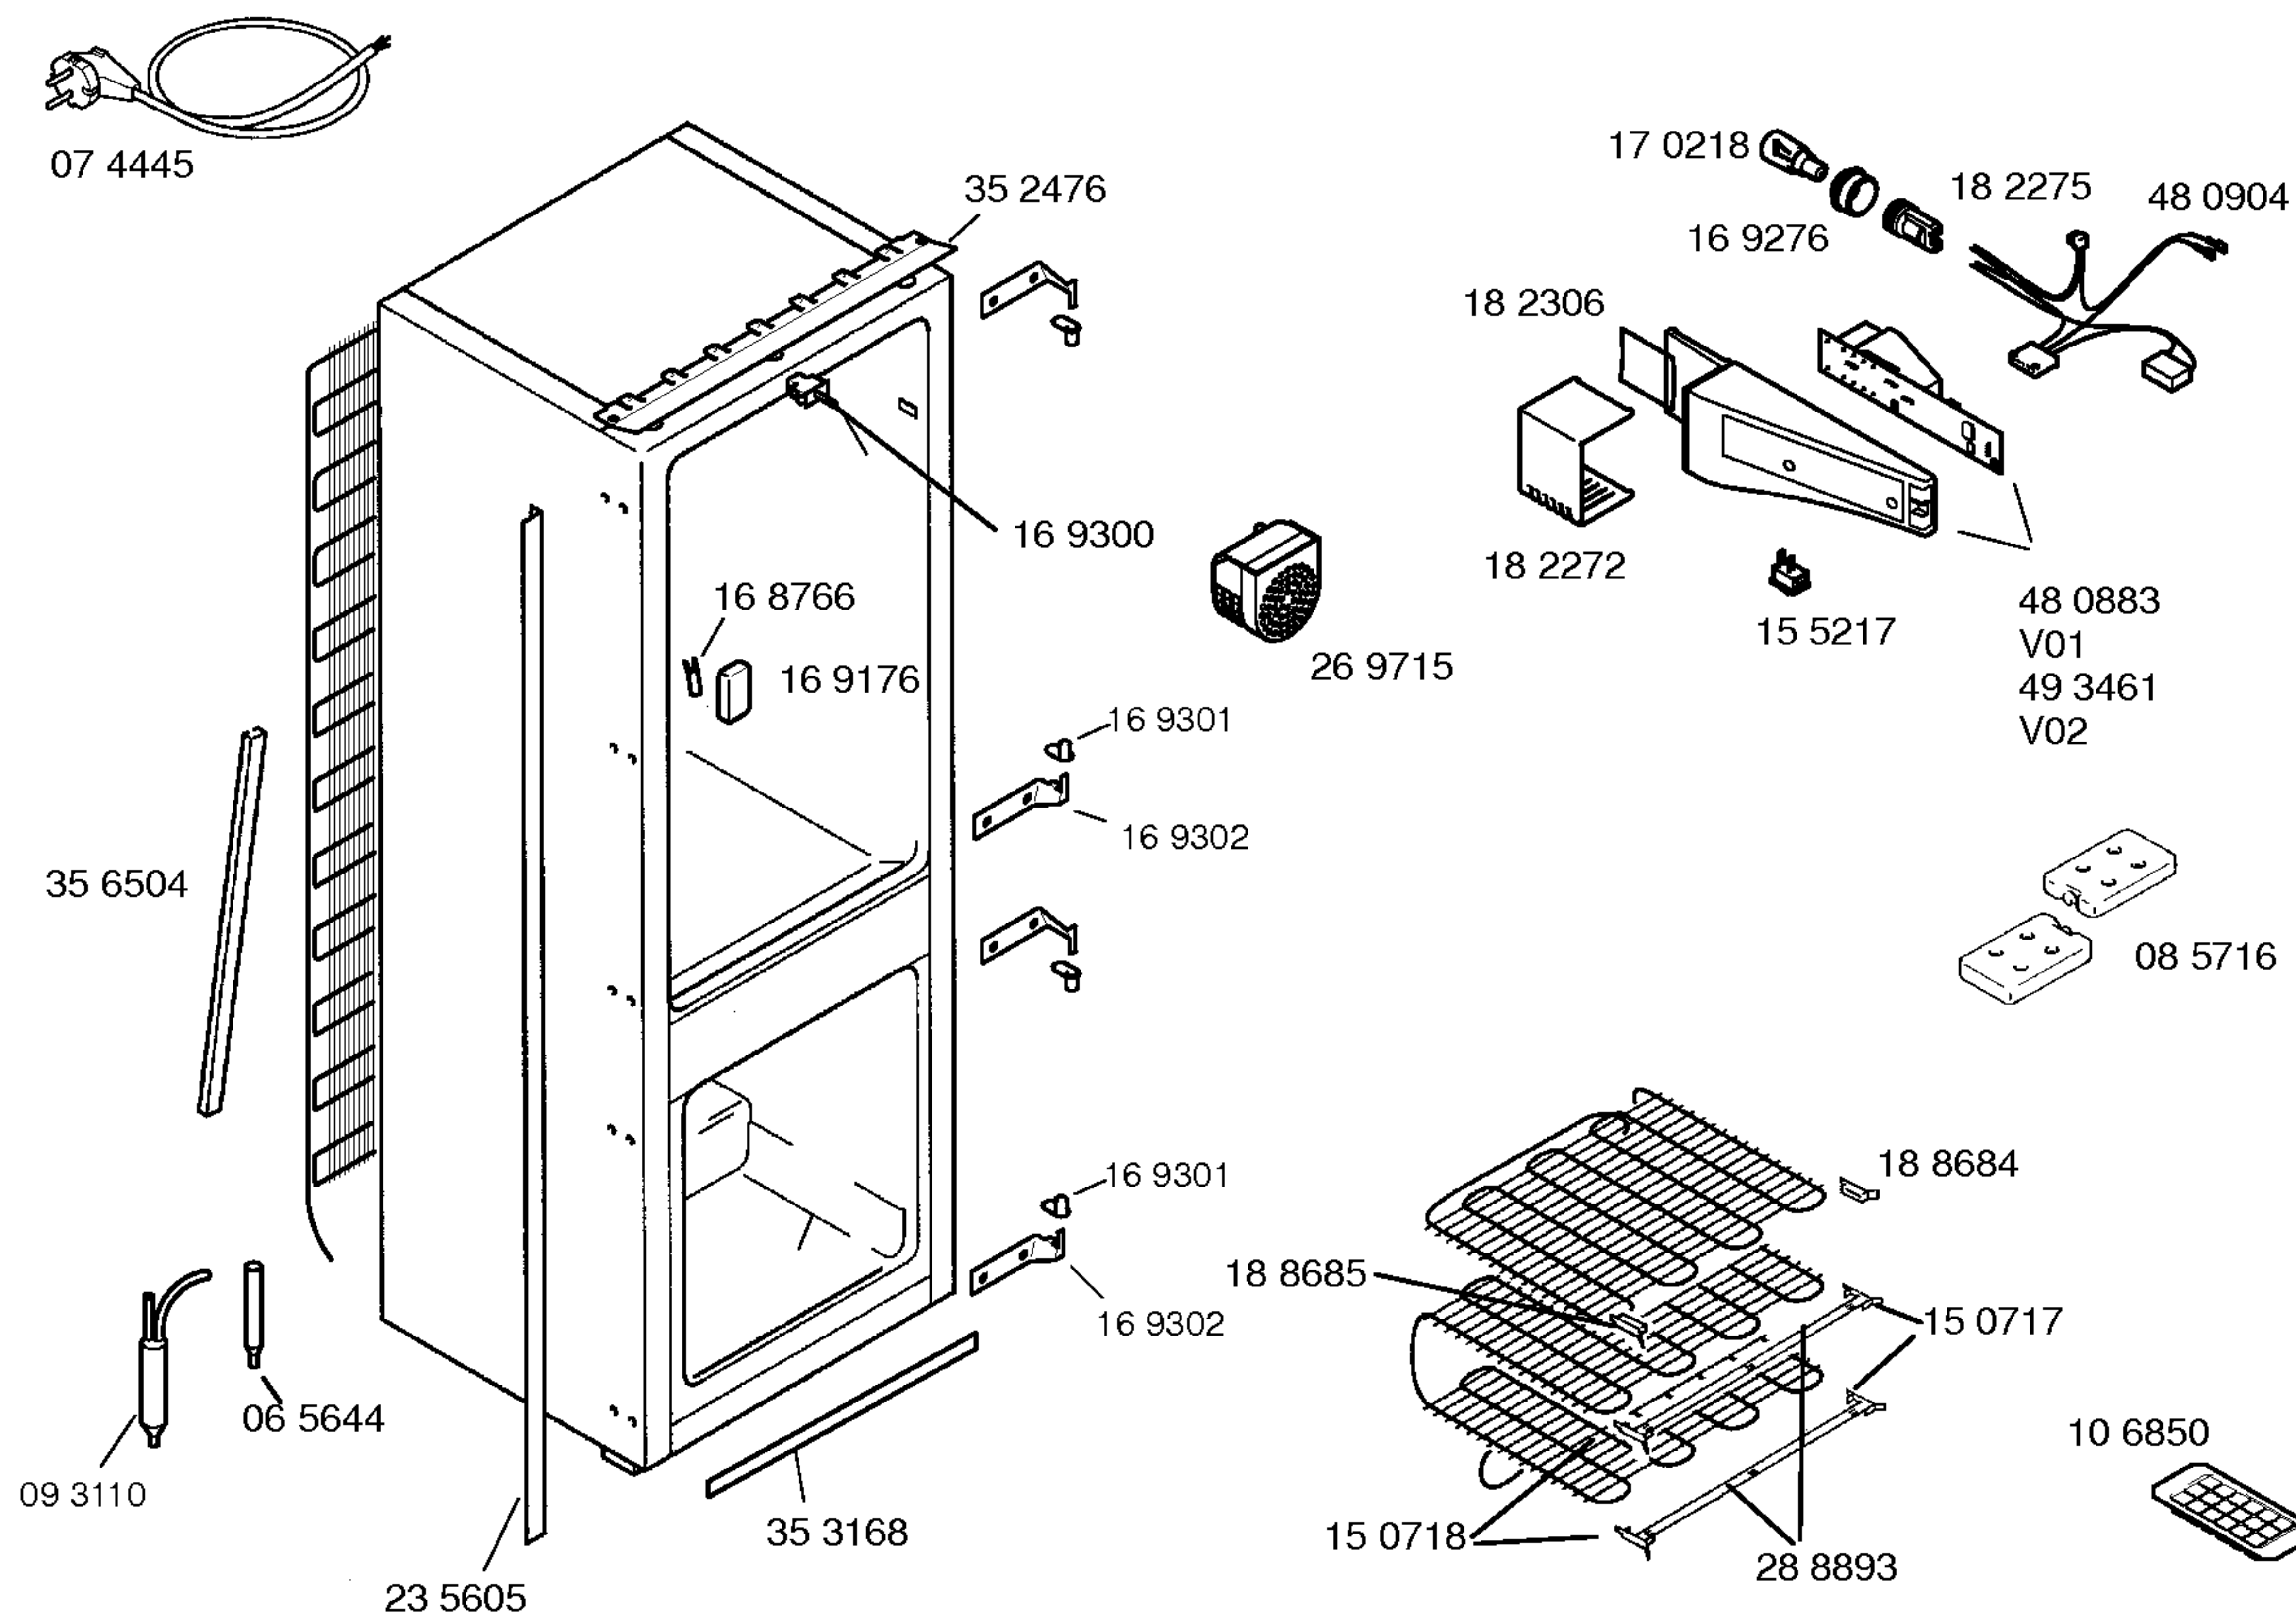



Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 8722
(DE,EN,ES,PT)

Montageanleitung
52 1893
(DE,EN,FR,IT,NL,SE,ES,
PT,DA,NO,FI,GR,TR)

Befestigungssatz
26 7361

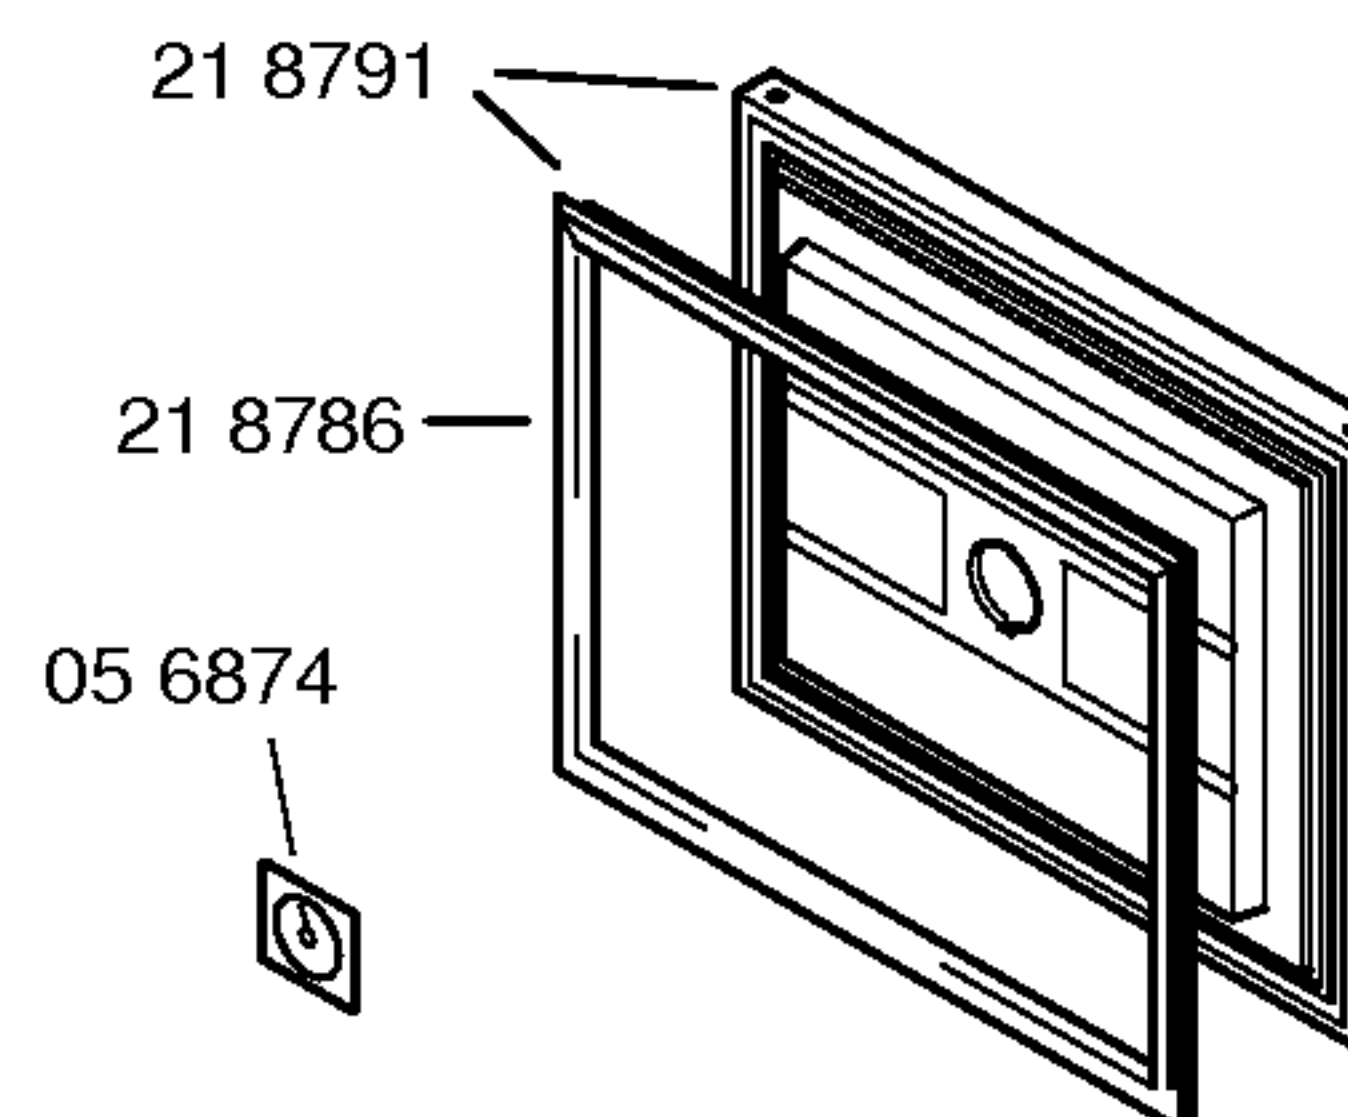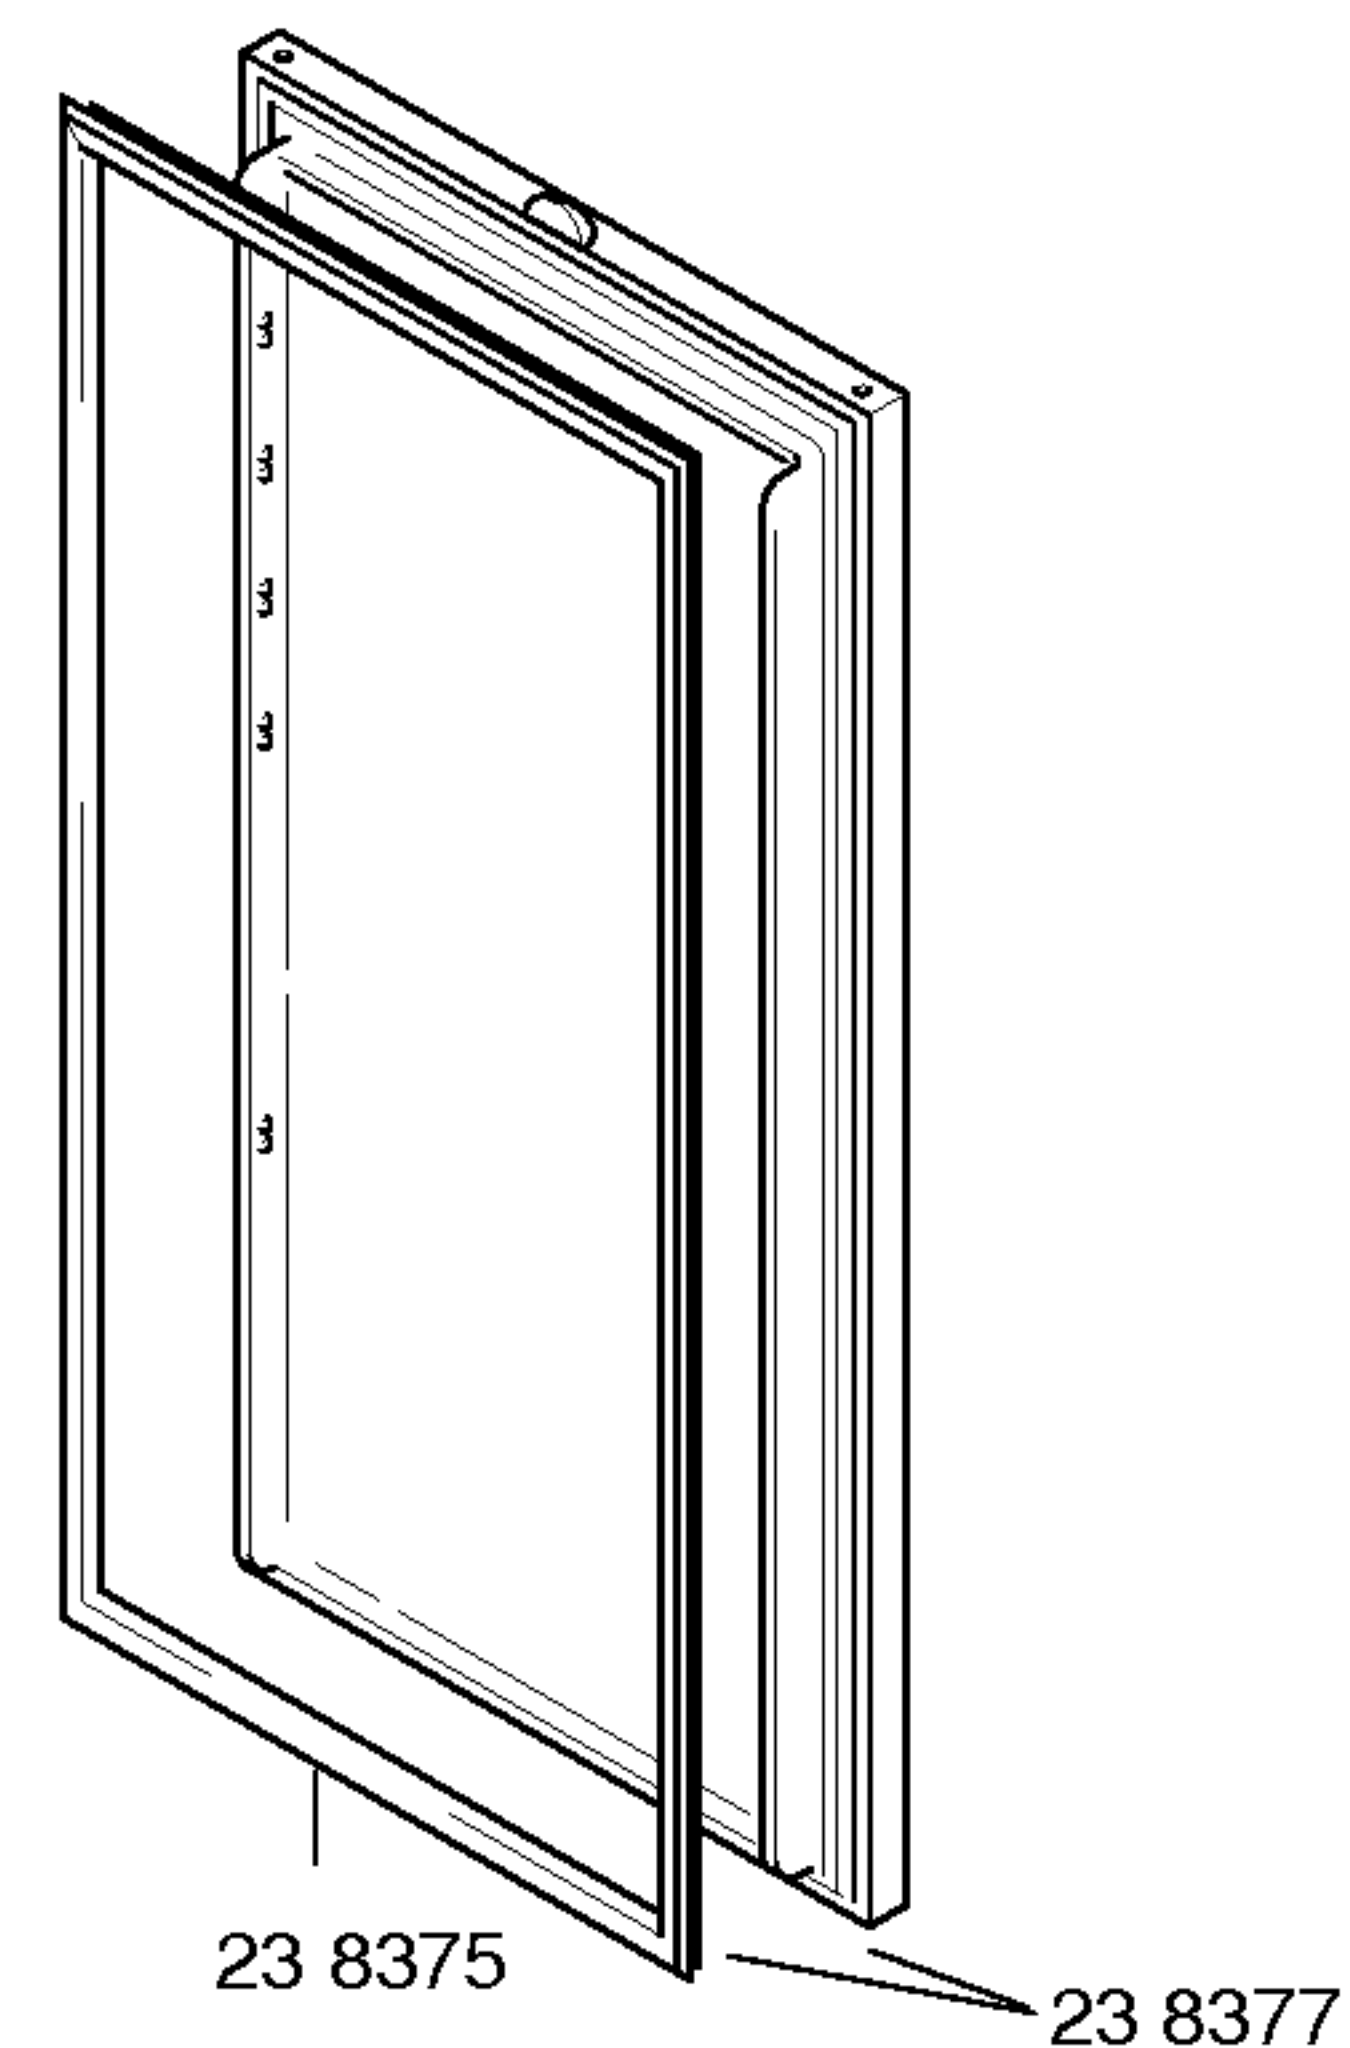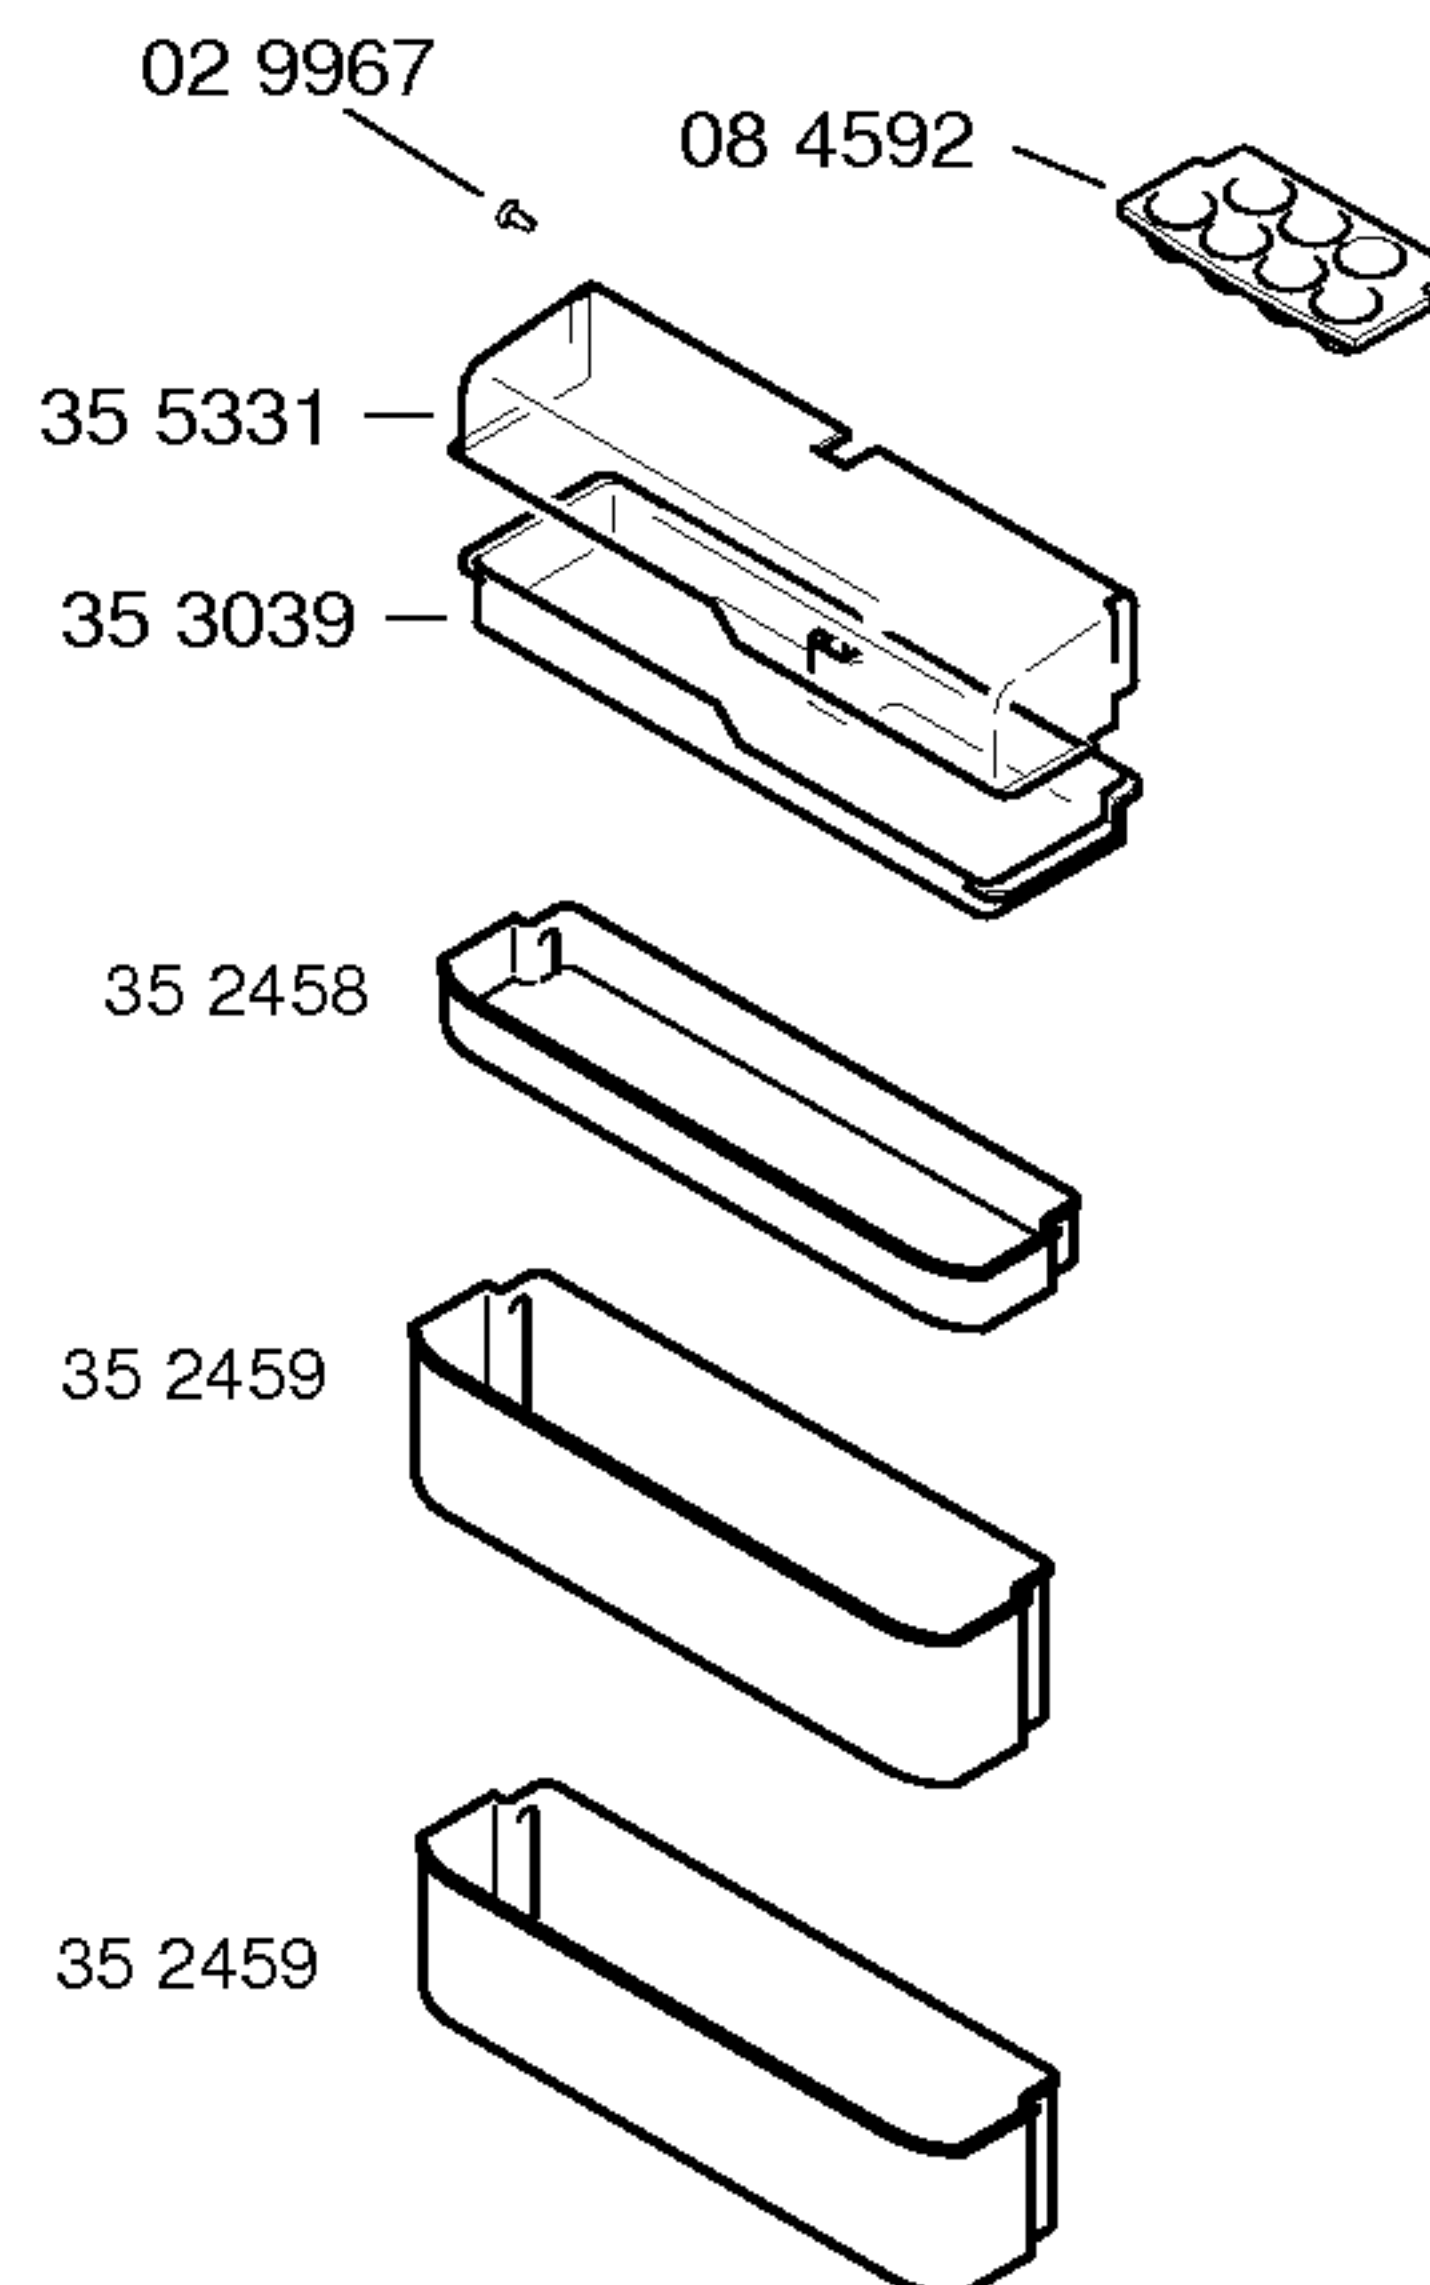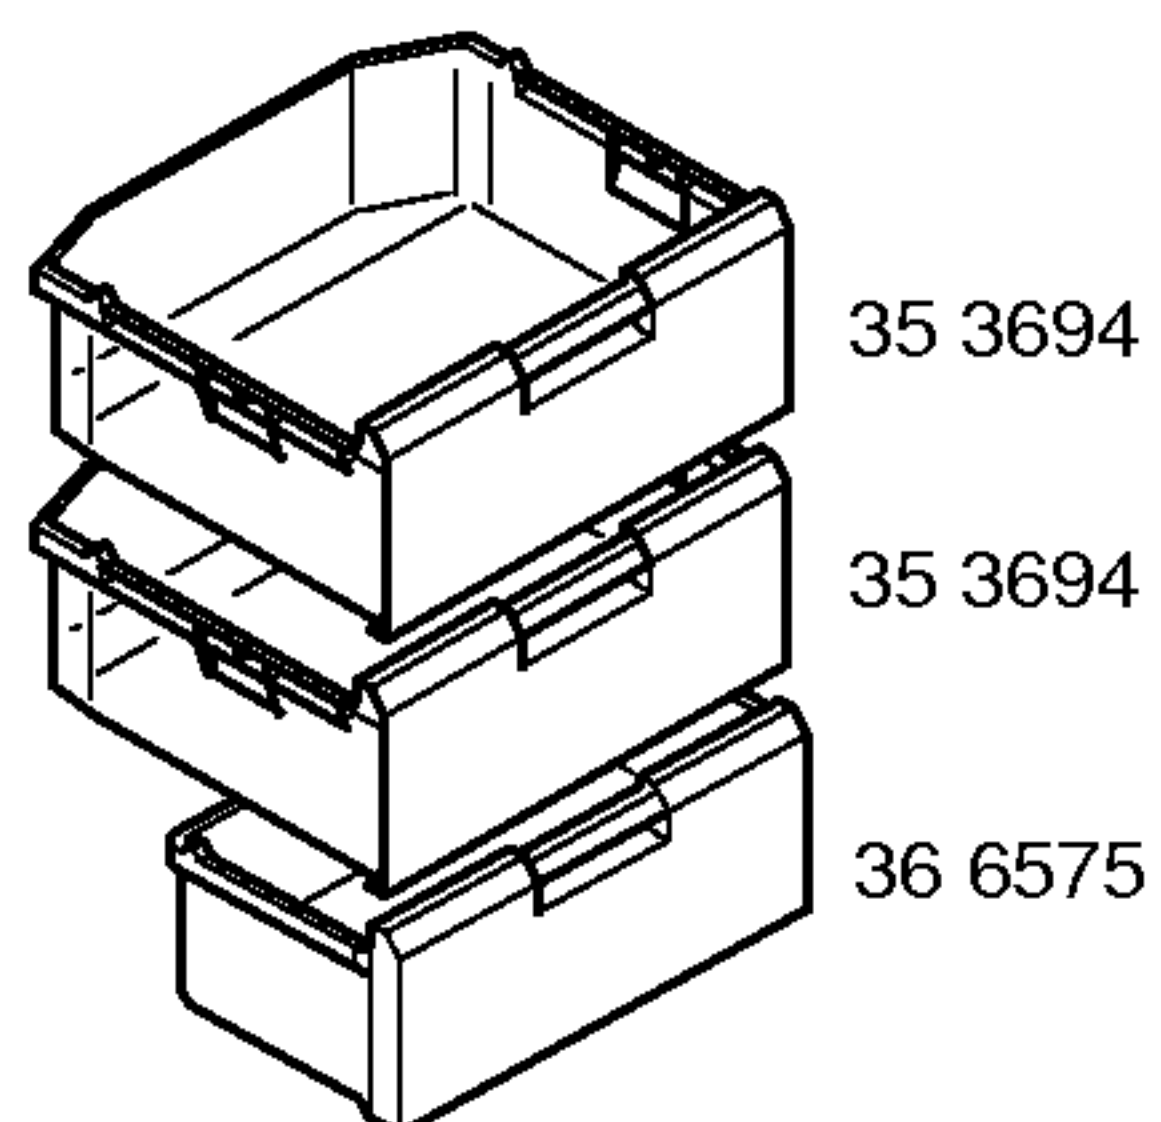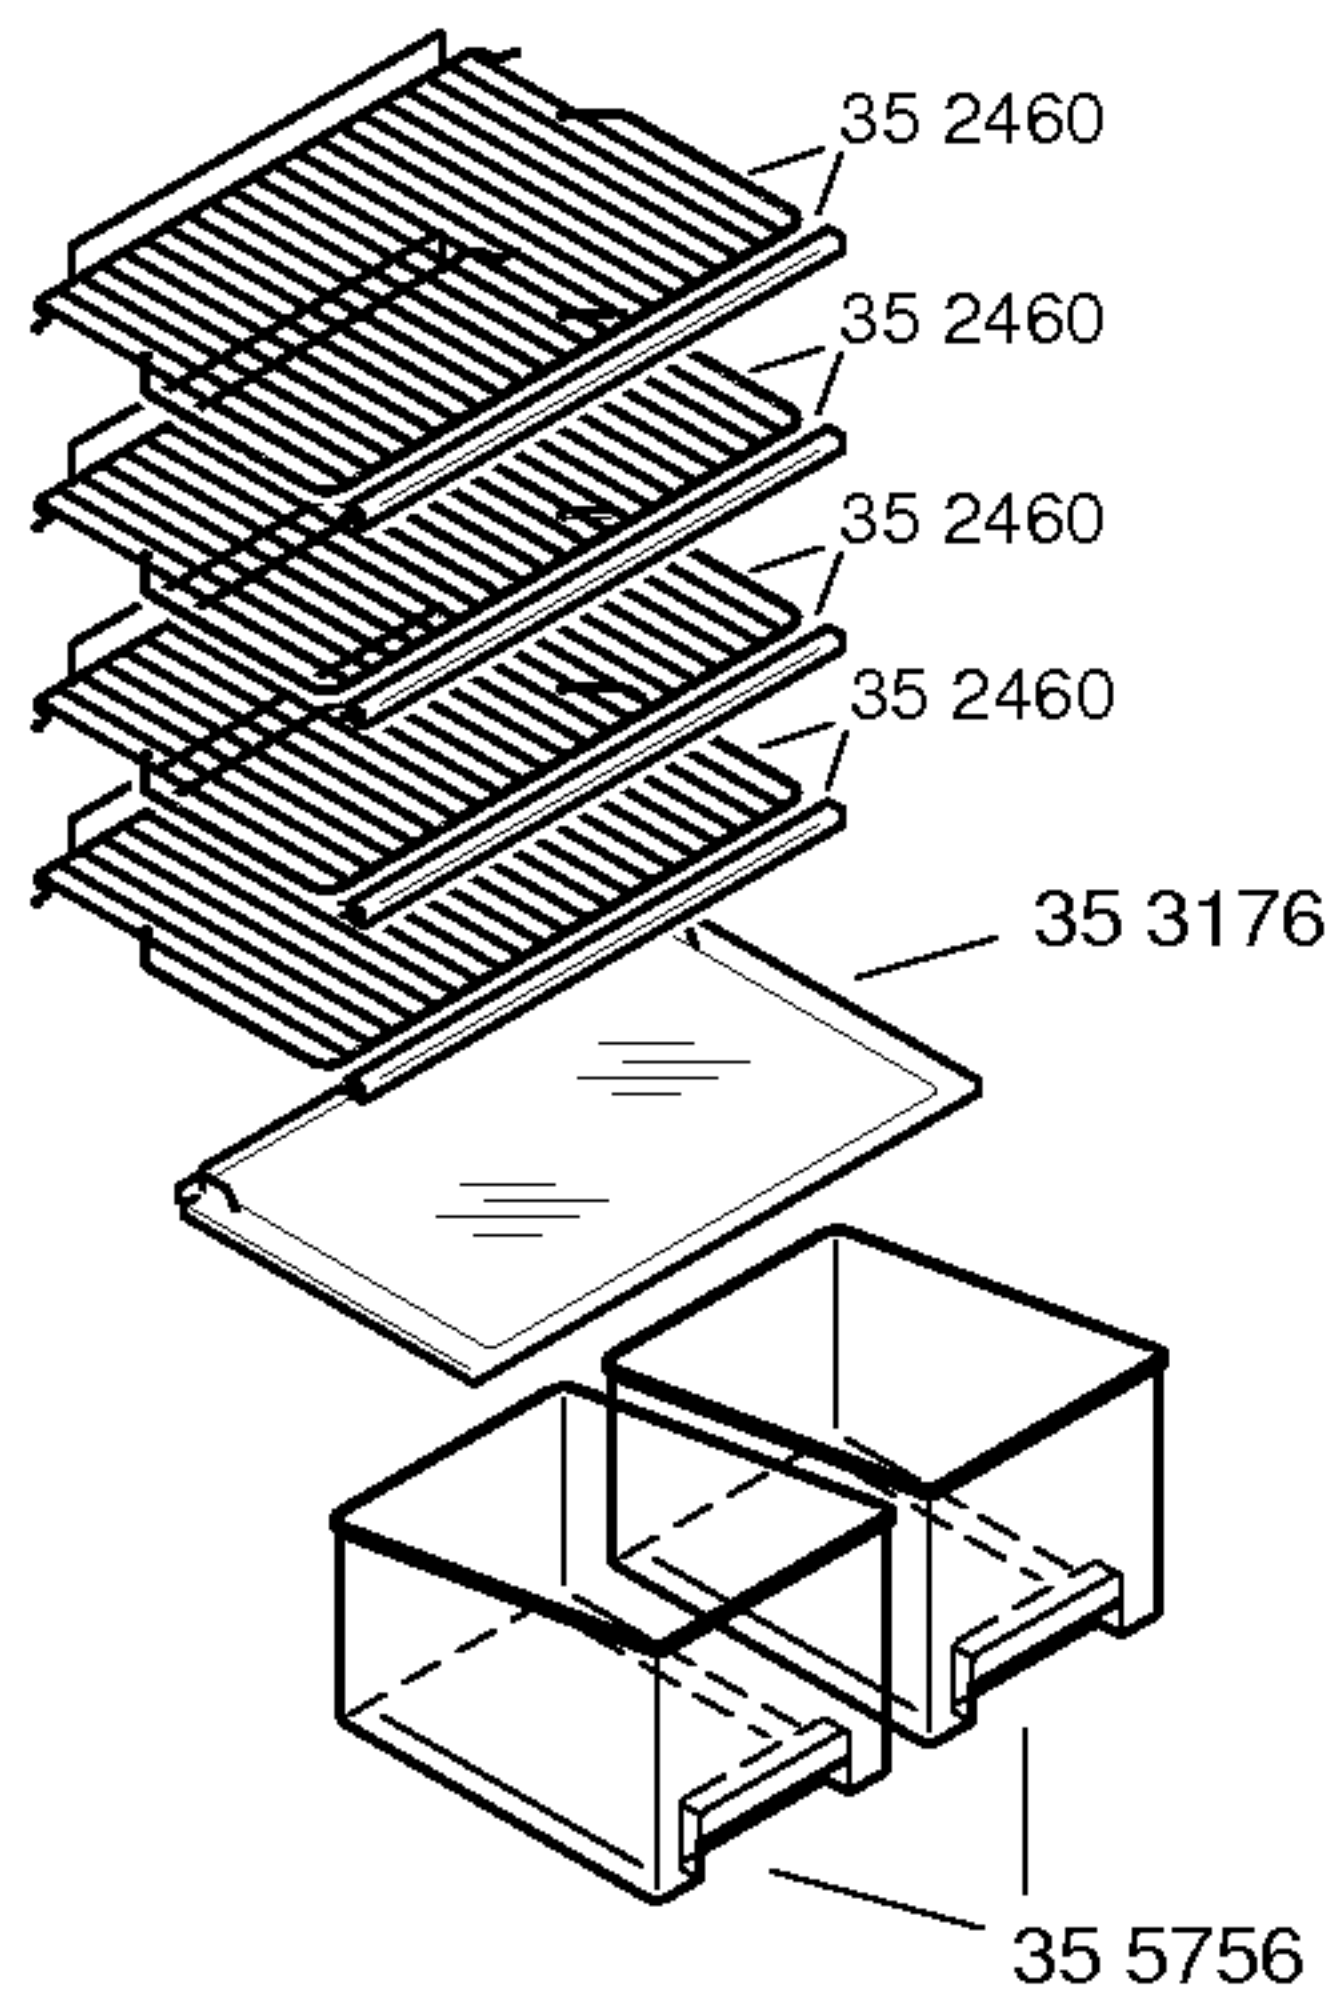

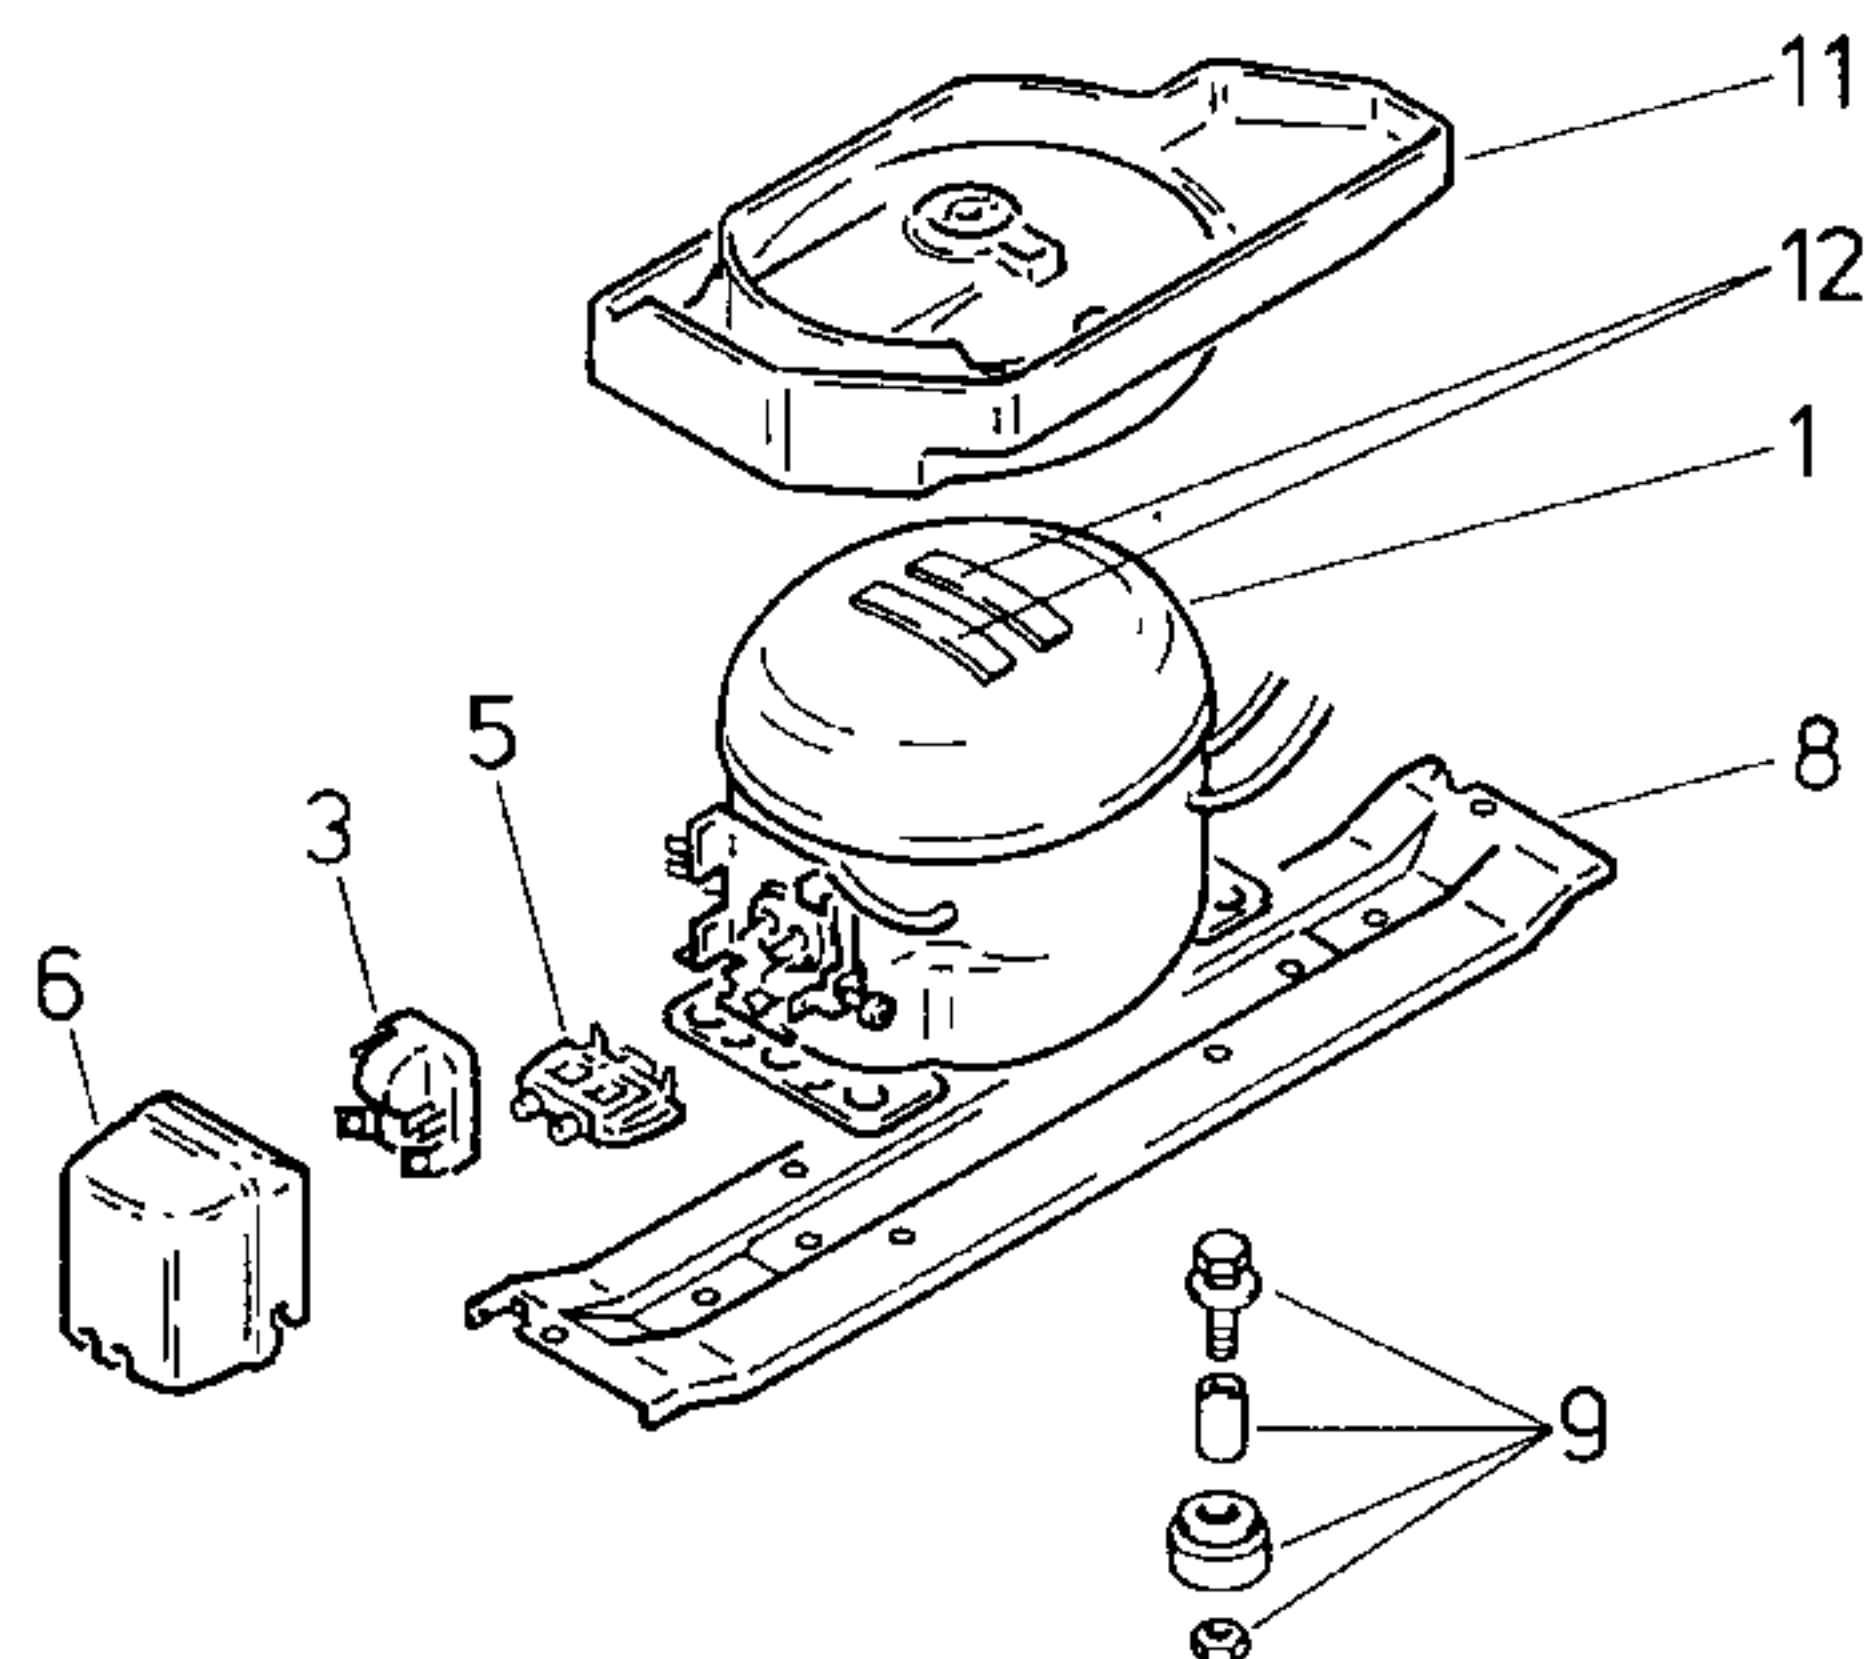

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		DC125E		
Förderleistung/Delivery/Débit	l/h	2246		
Anlaufstrom/Starting current/Cour. de démarrage	A	9,2		
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	12,1	
	Hi/aux	Ω	13,8	
Temp.-Regler/Thermostat		RCO K59		
Typ/Type		KER		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“	+4,5	+4,5	
Valeurs de commutation	„aus“	-32,0	-21	
	(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a	g	*	
Anschlußwert/Conn.load/Puiss. connectée		W	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild

Pos.	V01		
	Matsushita		
	DC125 E		
1	141965		
2			
3	17 2967		
4			
5	16 2549		
6	16 6782		
7			
8	28 1825		
9	05 0166		
10			
11	26 6624		
12	05 6008		