


4-2. FRONT PANEL SECTION

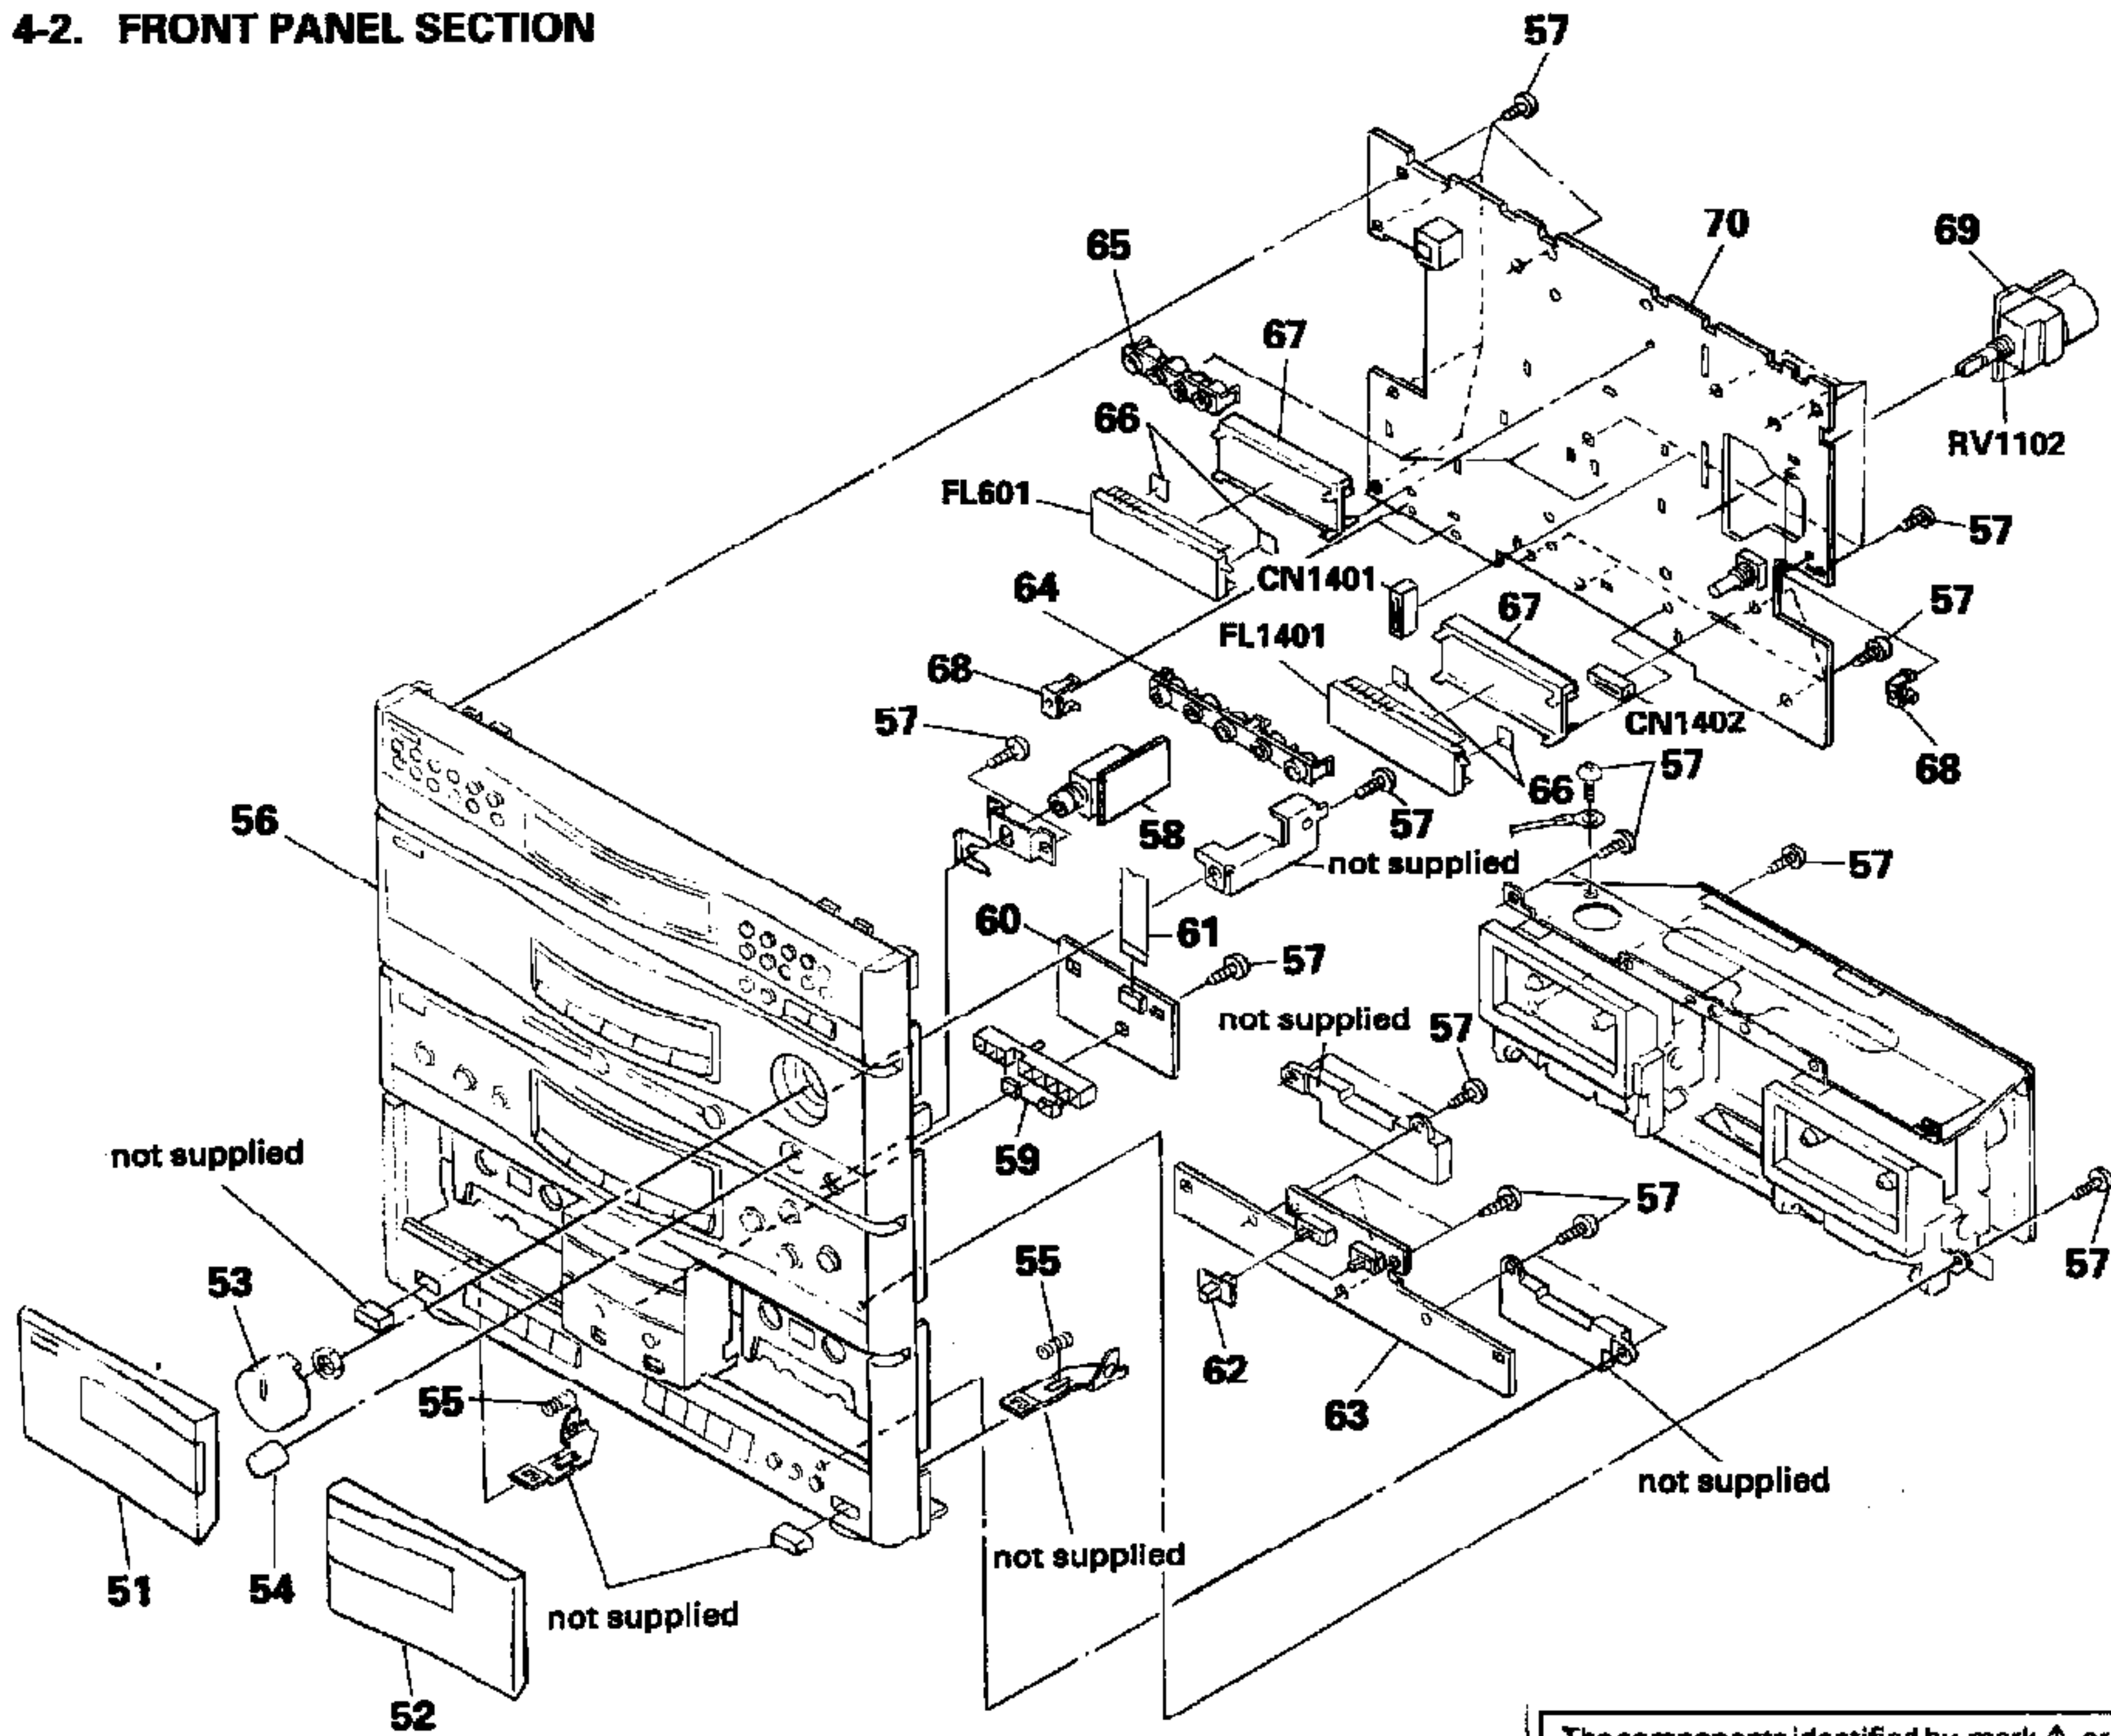

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	A-4325-456-A	LID (A) ASSY, CASSETTE (AEP, UK, G, EE)		* 63	1-642-152-11	TC SW BOARD	
51	A-4325-521-A	LID (A) ASSY, CASSETTE (IT)		* 64	4-948-247-01	HOLDER (FU), LED	
52	A-4325-457-A	LID (B) ASSY, CASSETTE (AEP, UK, G, EE)		* 65	4-948-248-01	HOLDER (DS), LED	
52	A-4325-522-A	LID (B) ASSY, CASSETTE (IT)		* 66	4-949-935-01	CUSHION (FL)	
53	A-4323-382-A	KNOB (VO) ASSY		* 67	4-942-301-01	HOLDER, FL TUBE	
54	4-948-270-01	KNOB (DSB)		* 68	4-930-781-11	HOLDER(VO), LED	
55	3-500-131-00	SPRING, COMPRESSION		* 69	1-162-385-11	VOL. BOARD	
56	A-4325-458-A	PANEL ASSY, FRONT (AEP, UK, G, EE)		* 70	A-4347-232-A	PANEL BOARD, COMPLETE (AEP, UK, G)	
56	A-4325-523-A	PANEL ASSY, FRONT (IT)		* 70	A-4347-371-A	PANEL BOARD, COMPLETE (IT)	
57	4-928-635-01	SCREW, +BV (2.6X8) TAPPING		* 70	A-4347-614-A	PANEL BOARD, COMPLETE (EE)	
* 58	1-642-384-11	H.P. BOARD		* CN1401	1-568-836-11	SOCKET, CONNECTOR 17P	
* 59	4-948-246-01	HOLDER (TC), LED		CN1402	1-568-802-11	SOCKET, CONNECTOR 19P	
* 60	1-642-153-11	DISPLAY BOARD		FL601	1-519-732-11	INDICATOR TUBE, FLUORESCENT	
61	1-590-575-11	WIRE, FLAT TYPE (11 CORE)		FL1401	1-519-648-21	INDICATOR TUBE, FLUORESCENT	
62	4-948-273-01	KNOB, SLIDE		RV1102	1-241-350-11	RES, VAR, CARBON 100K/100K (VOLUME)	